

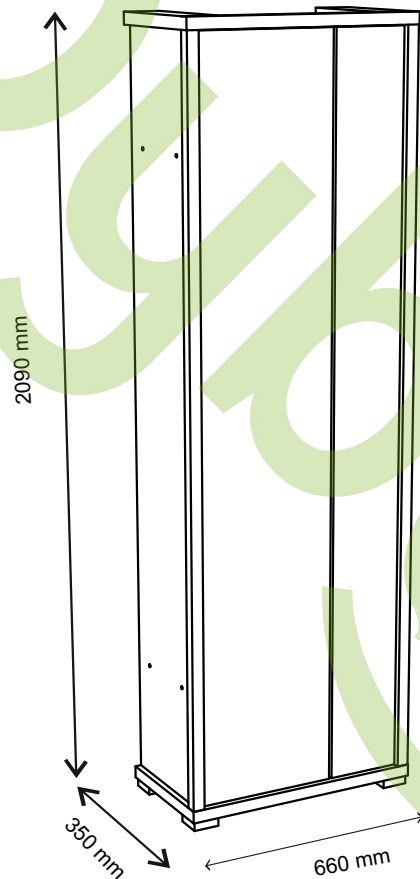
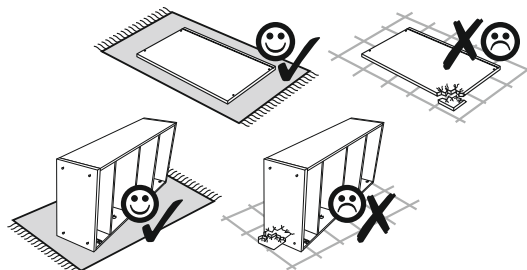


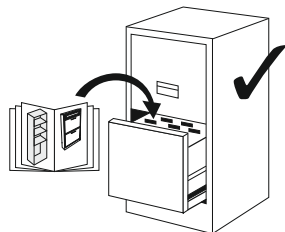


Instalation manual

LORA: SZF_2D

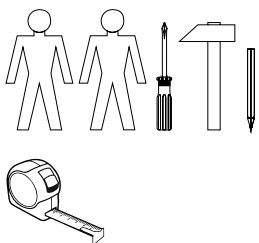

8x s1	8x s2	1x y1	1x z1	1x f3	1x n26
2x p9	6x a1	6x b1	8x r1	8x r16	1x p17
4x k150	1x m6	8x p6	14x p25	4x p27	
1x c235	8x e1	12x e2	16x f1	50x l1	



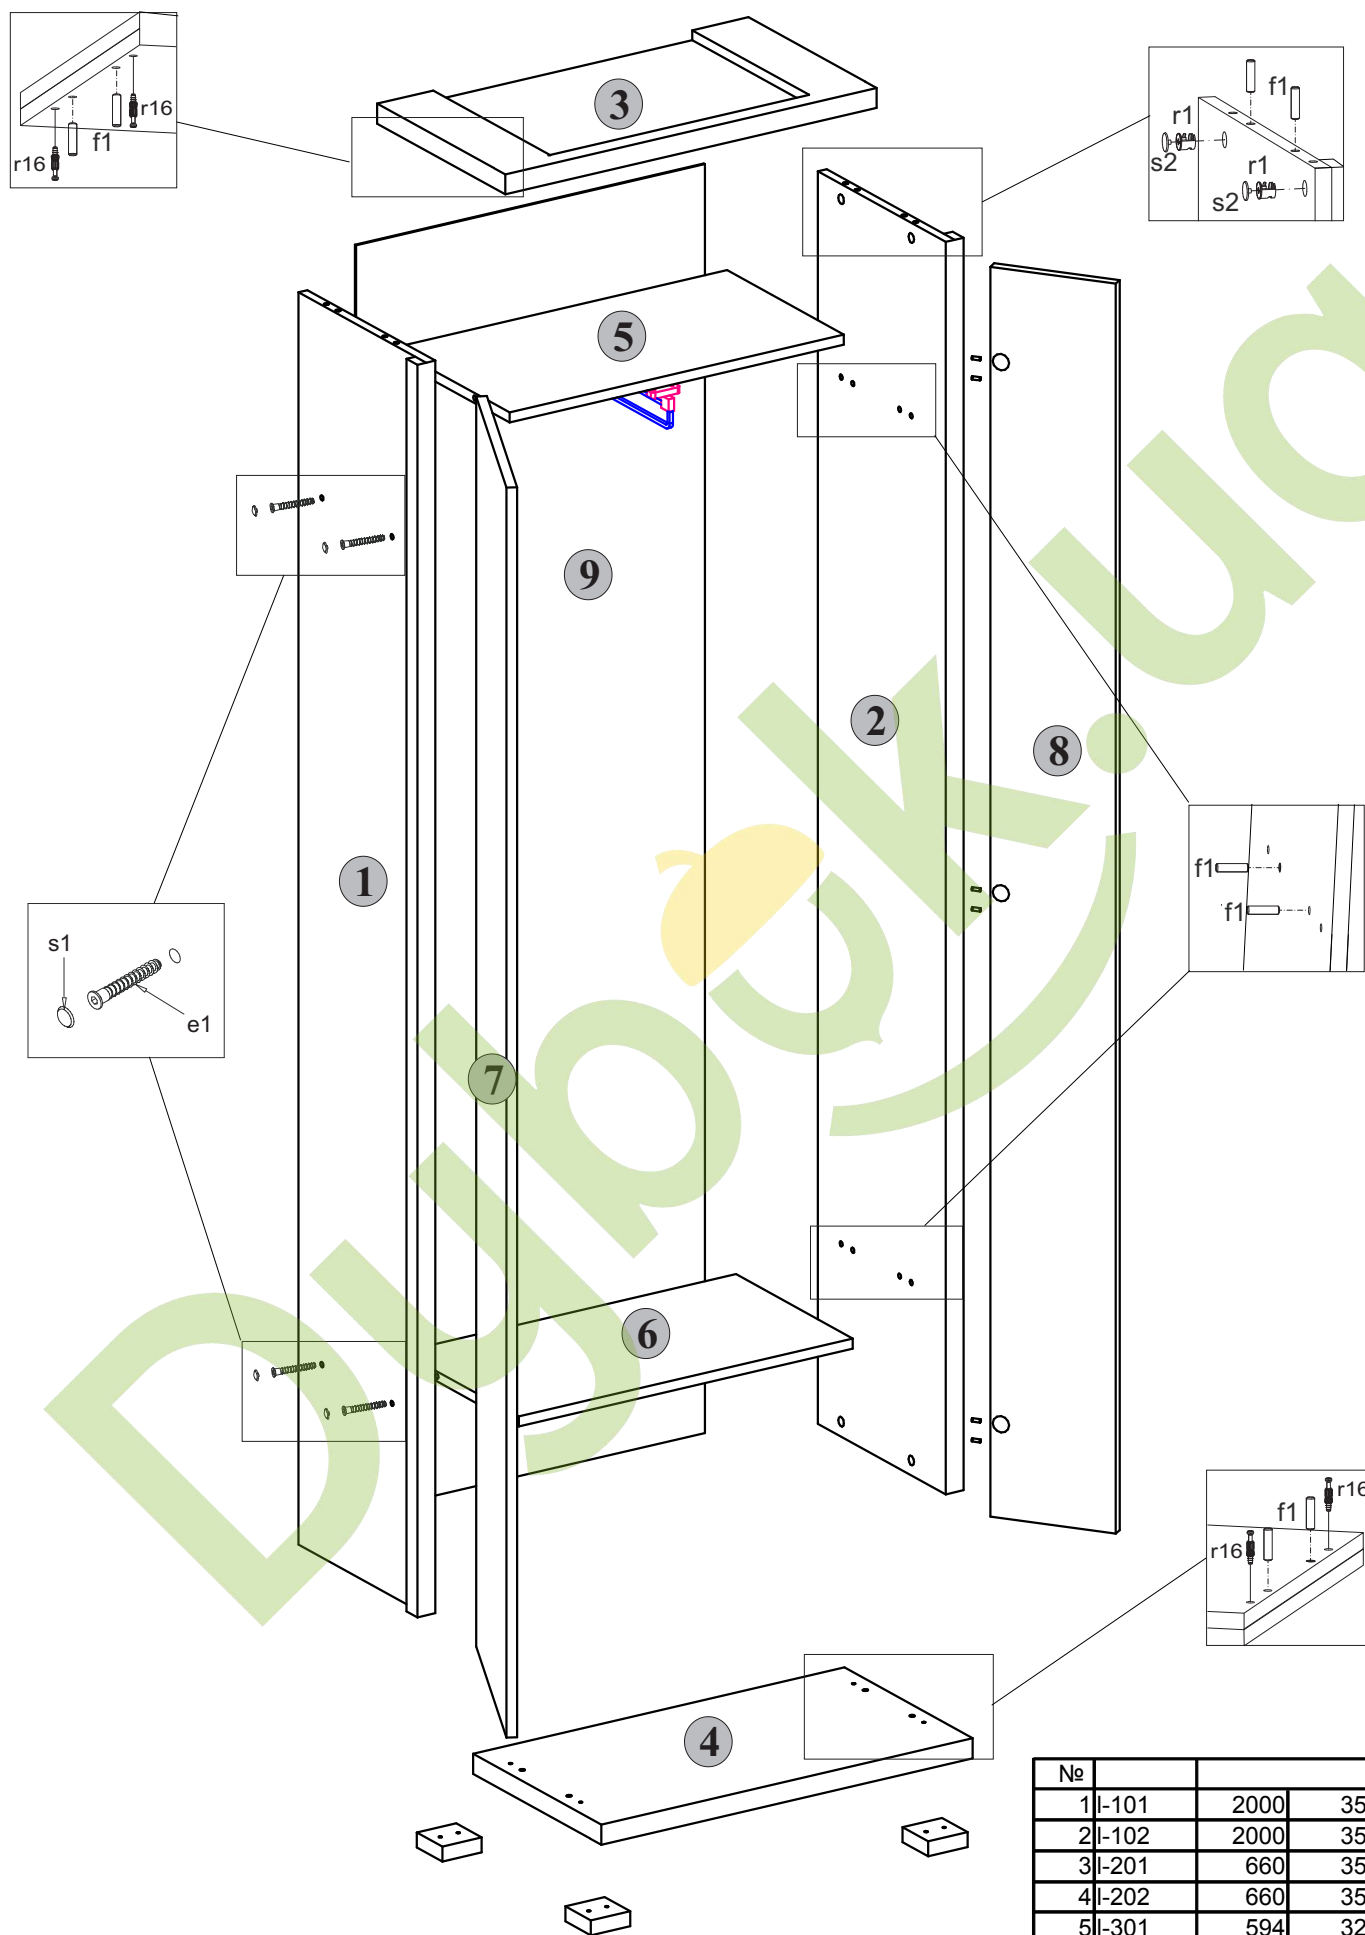

Nº					
1	I-101	2000	350	16/32	1
2	I-102	2000	350	16/32	1
3	I-201	660	350	16/32	1
4	I-202	660	350	16/32	1
5	I-301	594	320	16	1
6	I-302	594	320	16	1
7	I-001	1996	382	16	1
8	I-002	1996	200	16	1
9	I-601	2058	620	3	1