

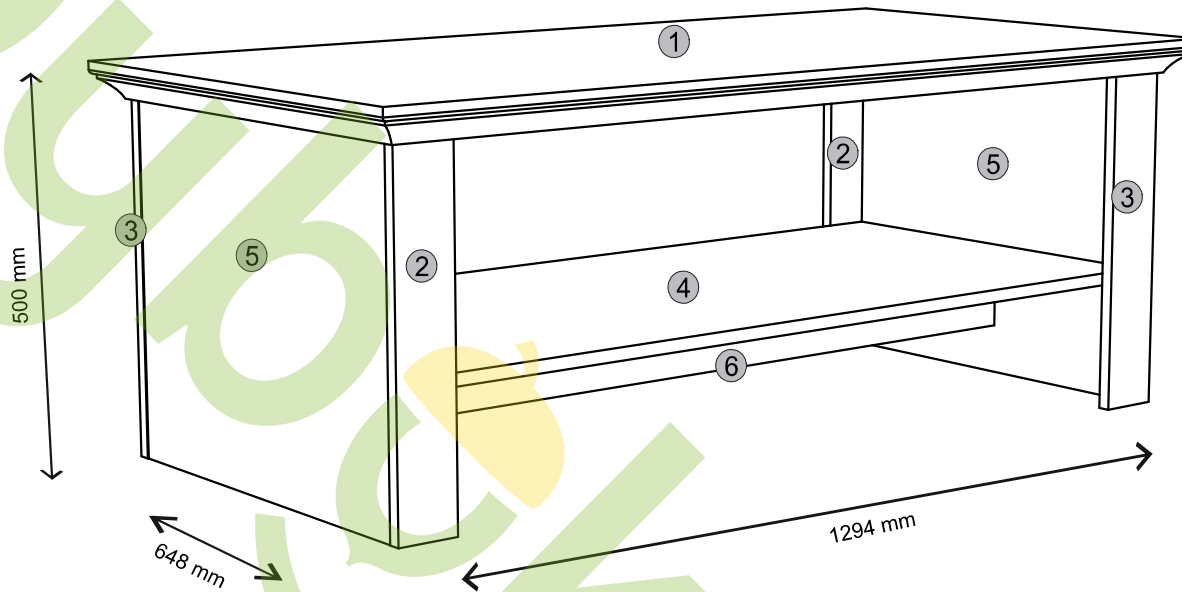
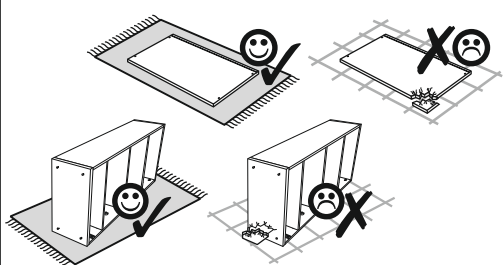
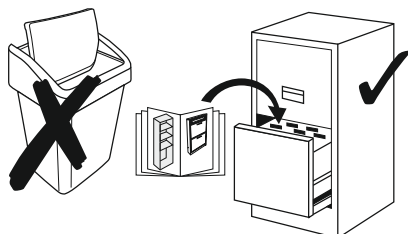


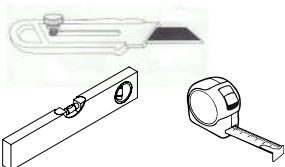






Installation manual

ARSAL: LAWA

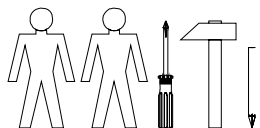

| Element symbol | Dimensions | | | Code | Package | |
|----------------|------------|------|-------|------|----------|-----|
| 1 | 1294 | 648 | 16/48 | 1 | LAWA.001 | 1/1 |
| 2 | 478 | 80 | 16 | 2 | LAWA.018 | 1/1 |
| 3 | 478 | 80 | 16 | 2 | LAWA.028 | 1/1 |
| 4 | 1186 | 540 | 16 | 1 | LAWA.003 | 1/1 |
| 5 | 478 | 540 | 16 | 2 | LAWA.004 | 1/1 |
| 6 | 100 | 1186 | 16 | 1 | LAWA.027 | 1/1 |

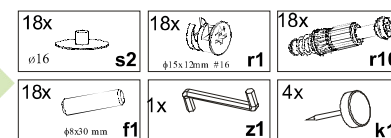

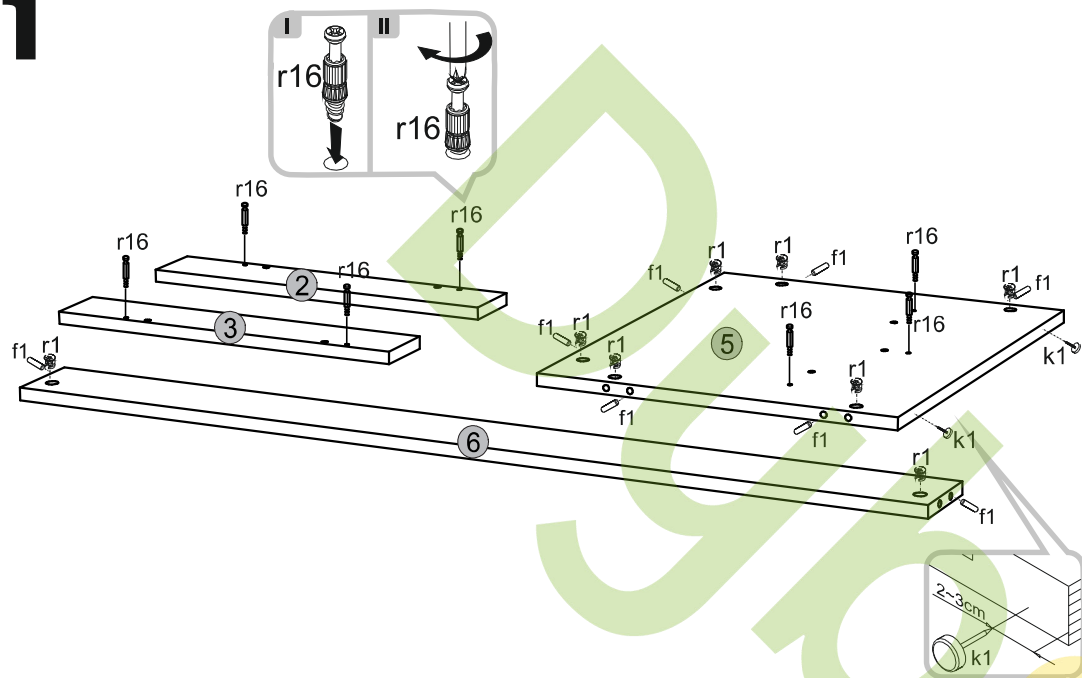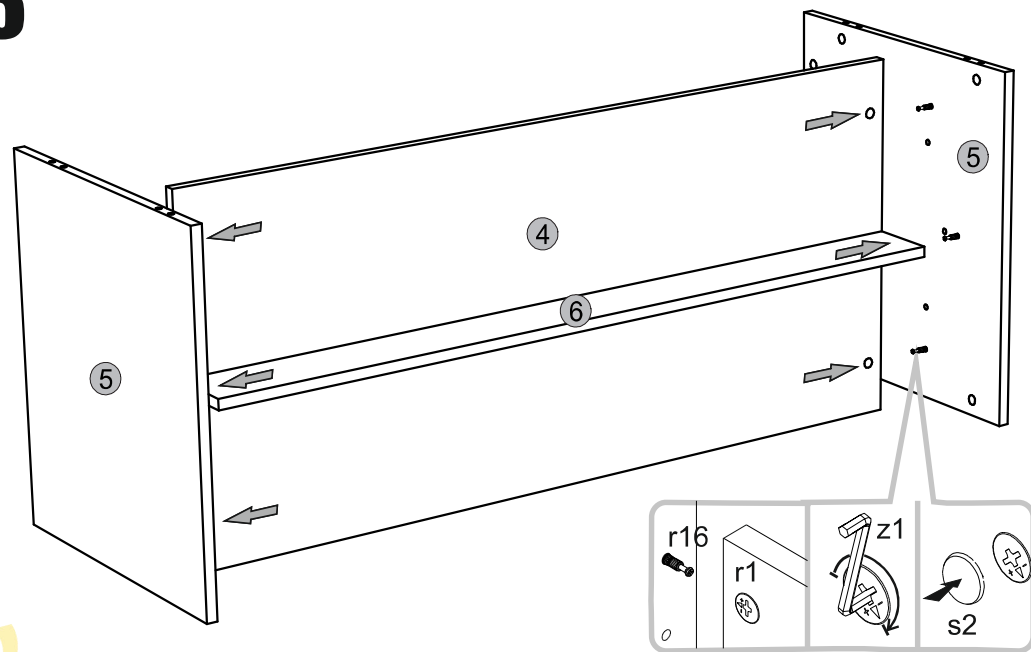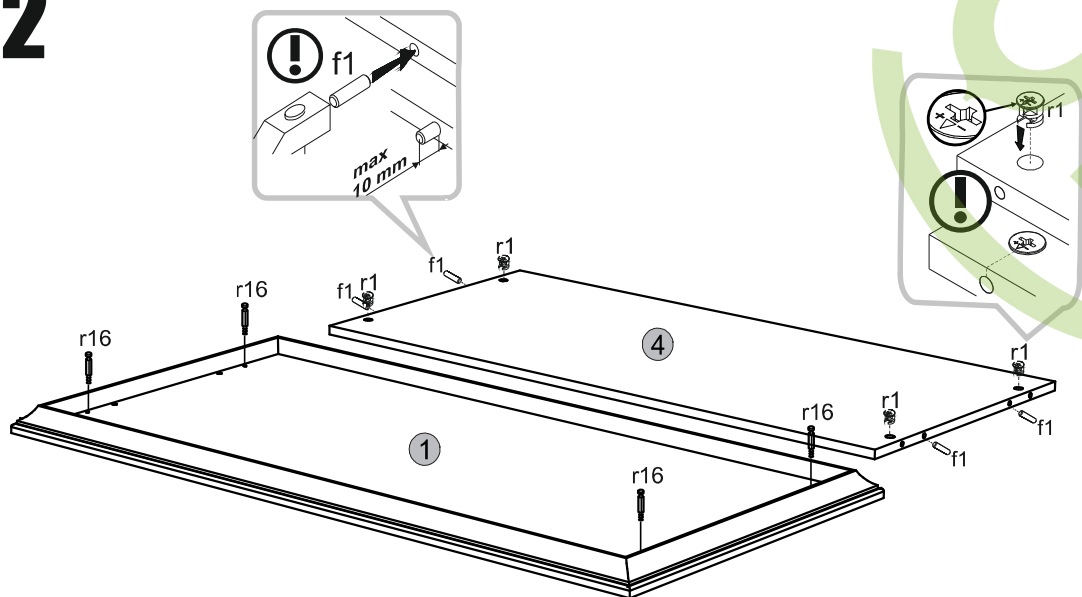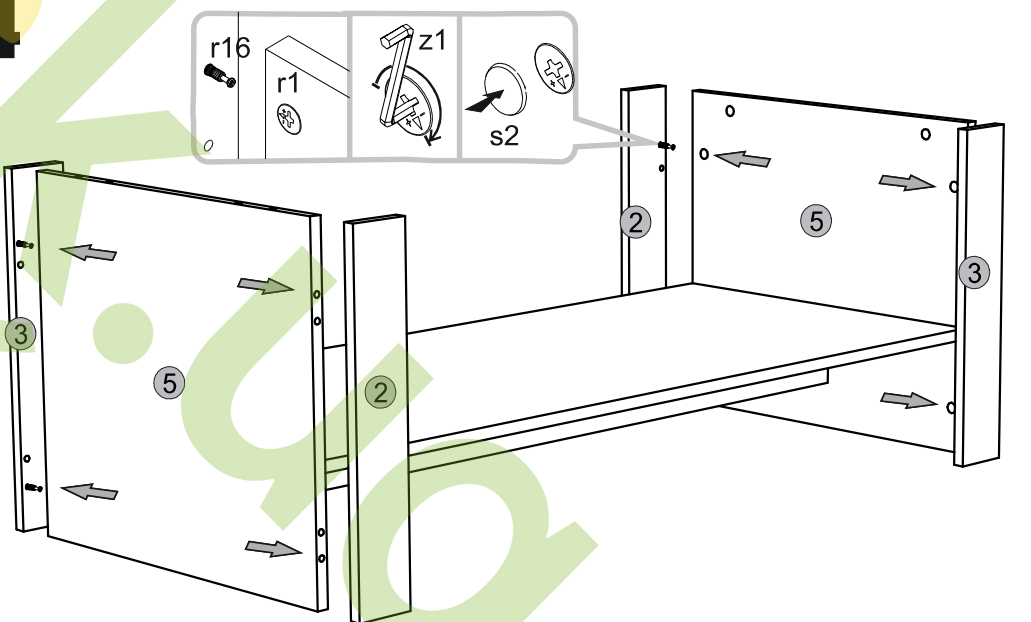1**3****2****4**

5

