


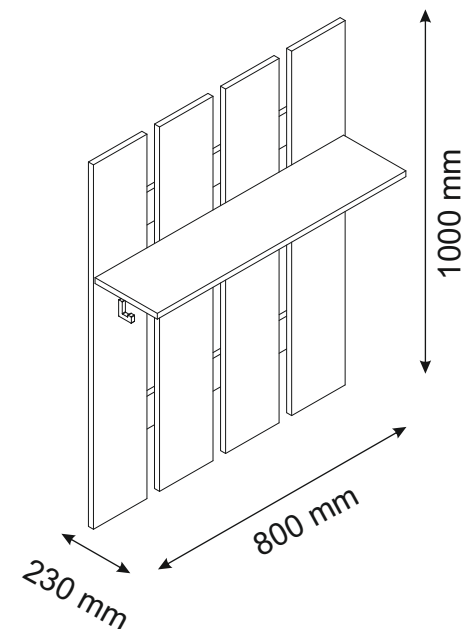



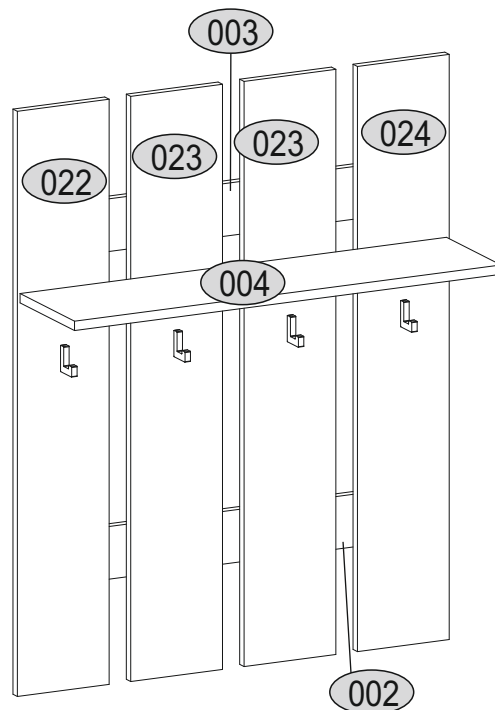


# Installation manual

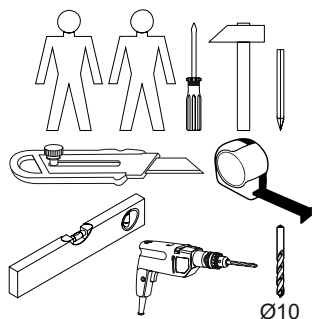


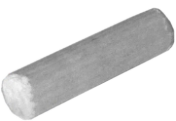


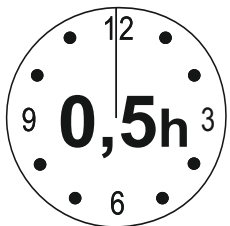

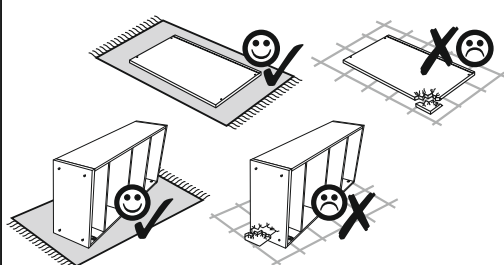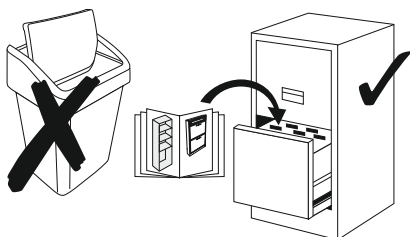



## PAVI Hanger




Code	Dimensions				Package
002	752	90	16	1	1/1
003	752	90	16	1	1/1
004	790	198	16	1	1/1
022	1000	170	16	1	1/1
023	1000	170	16	2	1/1
024	1000	170	16	1	1/1
accessories				1	1/1




# Accessories:

<b>4x e1</b>  $\varnothing 7 \times 50$	<b>4x e19</b>  $\varnothing 5 \times 9$	<b>2x e2</b>  $\varnothing 6.3 \times 13$	<b>8x f1</b>  $\varnothing 8 \times 30$
<b>16x f13</b>  $\varnothing 8 \times 20$	<b>2x f3</b>  	<b>2x g2</b>  	<b>8x j8</b>  $\varnothing 4 \times 25$
<b>2x p17</b>  $\varnothing 6 \times 50$	<b>8x p9</b>  $\varnothing 4 \times 30$	<b>4x g435.12</b>  	<b>1x z1</b>  

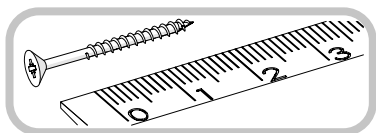


# 1

<b>f13</b>	<b>e19</b>	<b>f1</b>	<b>g2</b>	<b>e2</b>
x16	x4	x8	x2	x2

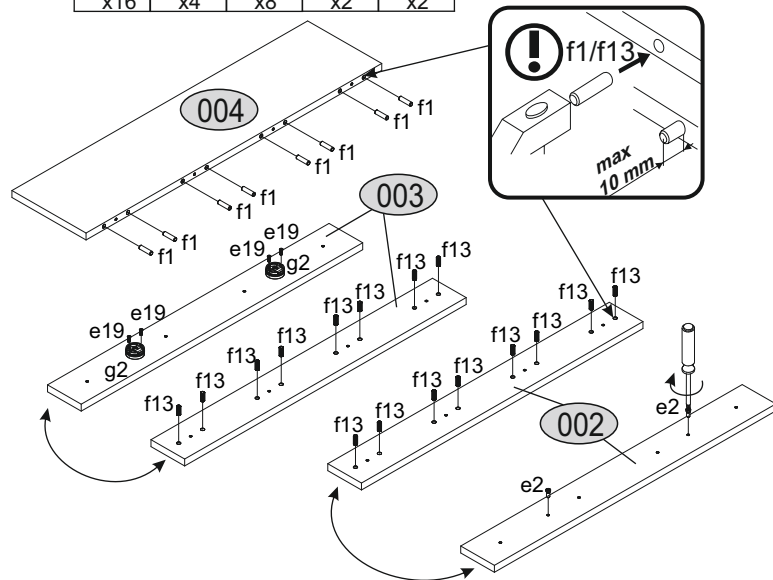


# 2

<b>p9</b>
x8

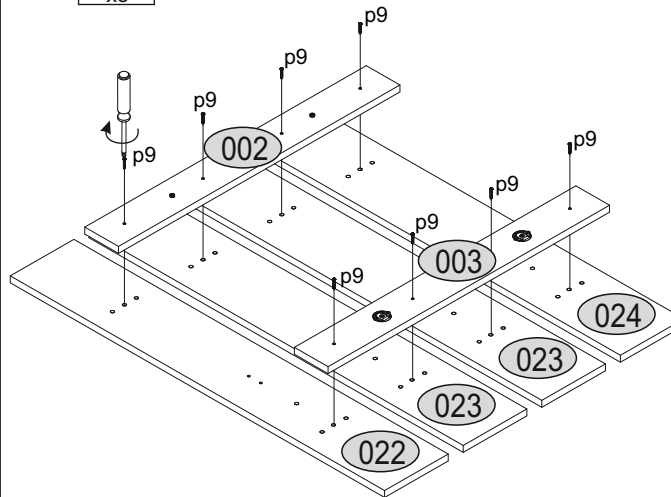




# 3

<b>j8</b>	<b>g435.12</b>
x8	x4

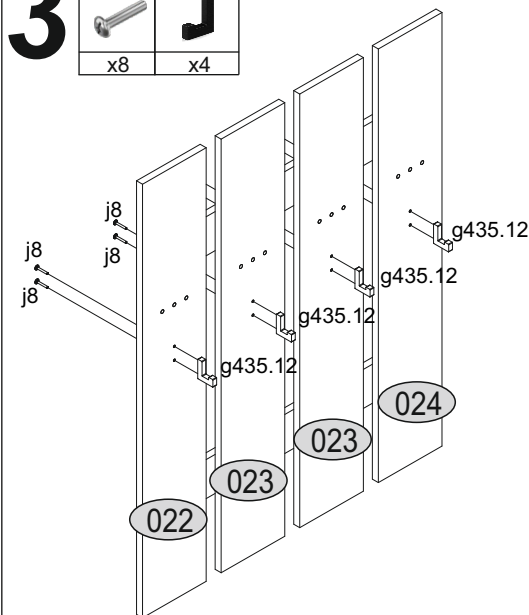

# 4

<b>e1</b>
x4

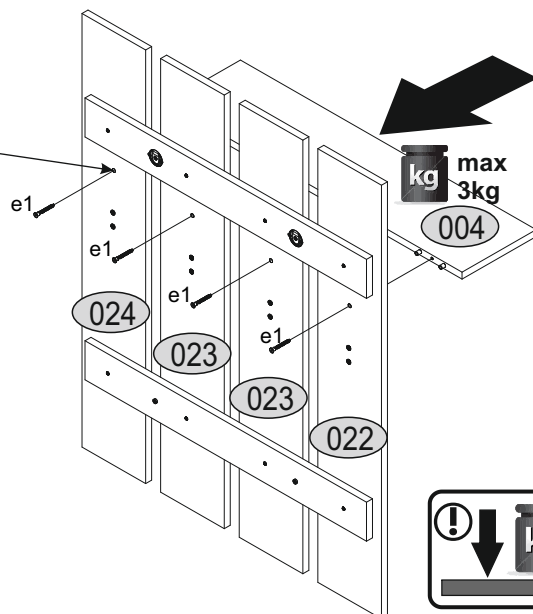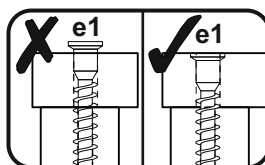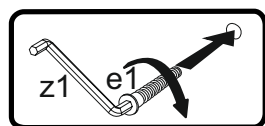

# 5

<b>f3</b>	<b>p17</b>
x2	x2

