

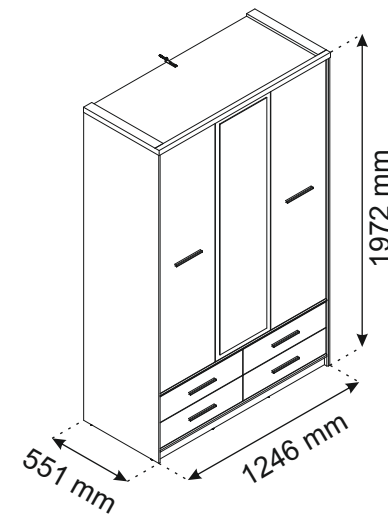
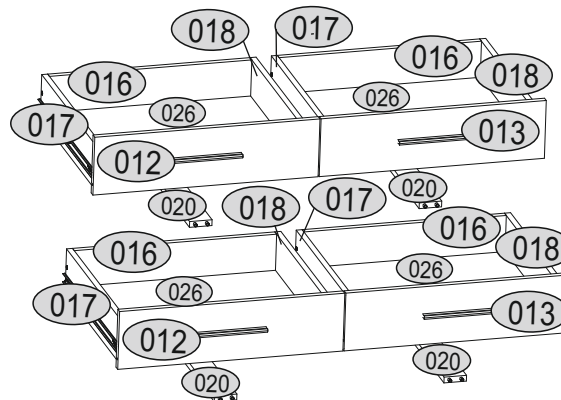
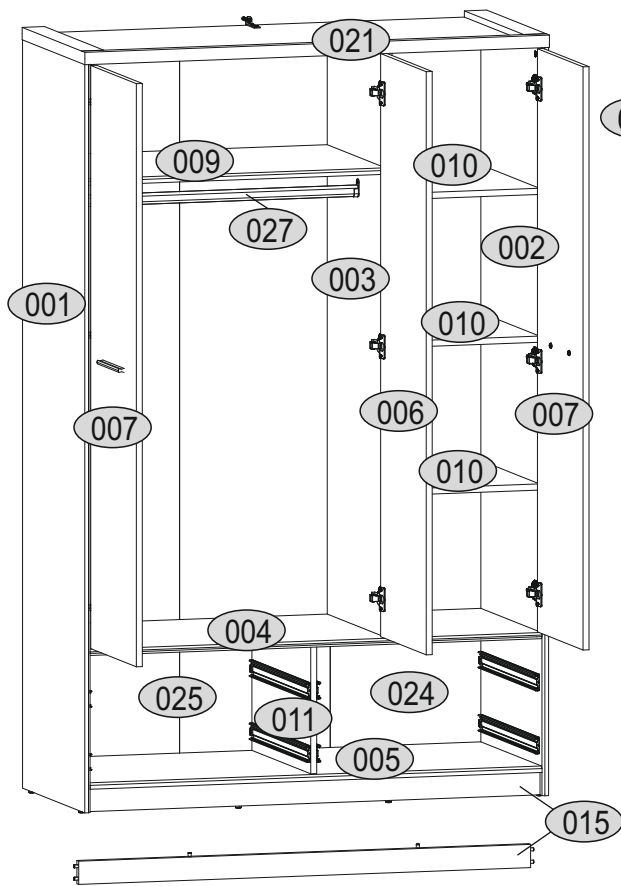
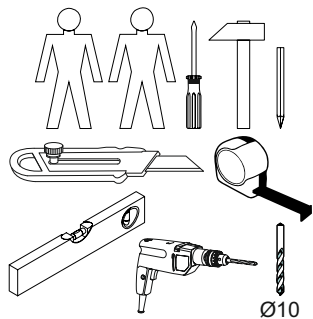
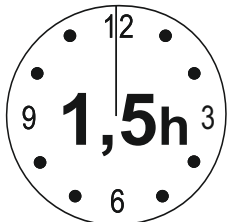


# Installation manual

## PAVI Wardrobe 3D4S with mirror

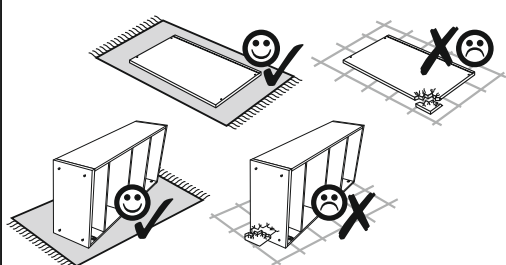






Code	Dimensions			Package	
	Length	Width	Height		
001	1934	546	16	1	2/4
002	1934	546	16	1	2/4
003	1513	516	16	1	2/4
004	1212	537	16	1	1/4
005	1212	537	16	1	1/4
006	1507	400	16	1	4/4
007	1507	400	16	2	4/4
009	800	515	16	1	1/4
010	396	514	16	3	3/4
011	329	516	16	1	2/4
012	602	160	16	2	4/4
013	602	160	16	2	4/4
015	1212	60	16	2	1/4
016	541	120	16	4	3/4
017	500	120	16	4	1/4
018	500	120	16	4	1/4
020	484	60	16	4	1/4
021	1246	551	16/32	1	3/4
024	1882	413	2,5	1	2/4
025	1882	817	2,5	1	2/4
026	502	559	2,5	4	3/4
027	795			1	2/4
accessories				1	1/4

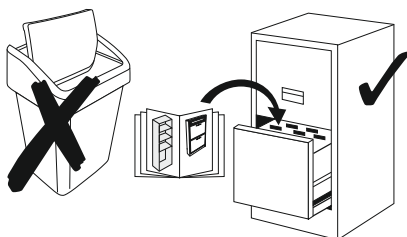


# Accessories:

<p>6x a143</p> 	<p>3x a145</p> 	<p>9x b119</p> 	<p>6x c412.030</p> 
<p>12x d1</p> <p>Ø5x16</p> 	<p>12x e1</p> <p>Ø7x50</p> 	<p>84x f1</p> <p>Ø8x30</p> 	<p>1x f3</p> <p>Ø10x50</p> 
<p>8x k1</p> 	<p>1x n14</p> 	<p>4x n260.01</p> 	<p>2x n301</p> 
<p>1x p17</p> <p>Ø6x50</p> 	<p>76x p25</p> <p>Ø3.5x16</p> 	<p>12x p42</p> <p>Ø3.5x25</p> 	<p>28x r1</p> <p>15x12</p> 
<p>28x r16</p> <p>Ø5x24</p> 	<p>4x lb-500</p> 	<p>70x l1</p> <p>Ø1,2x20</p> 	<p>18x s2</p> 
<p>1x z1</p> 			

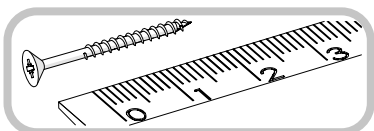


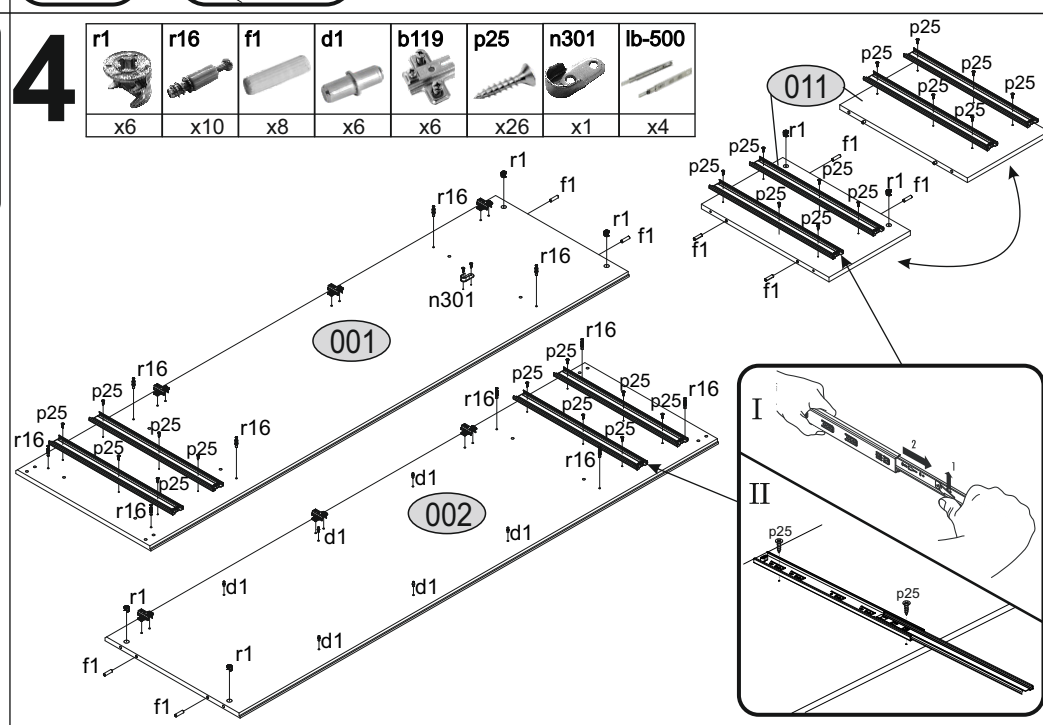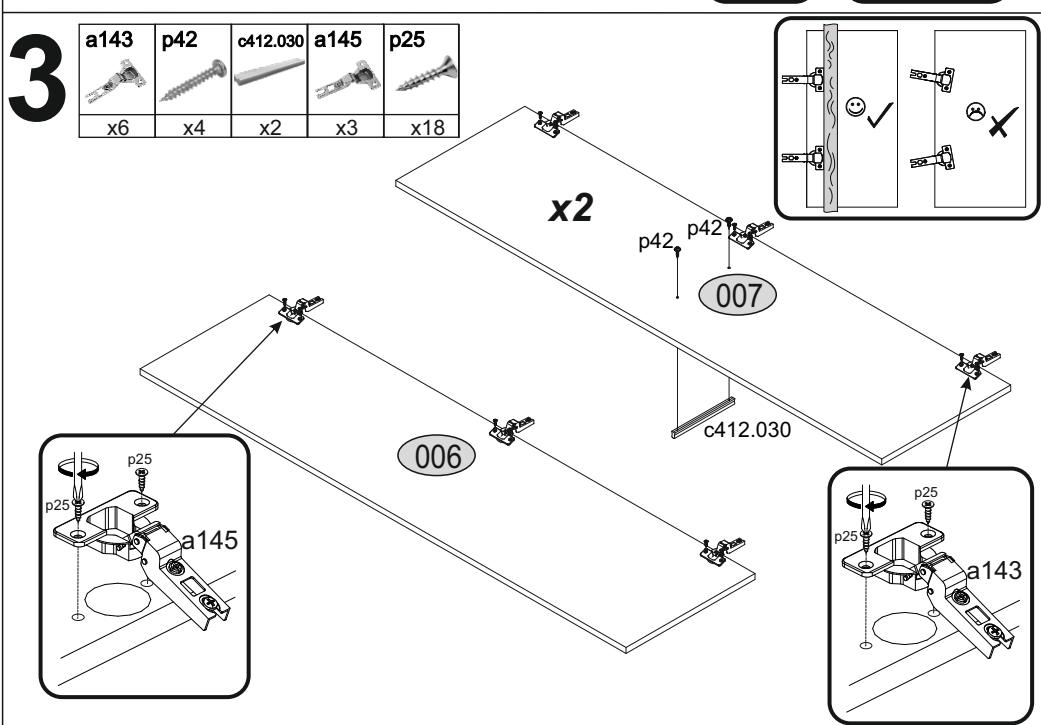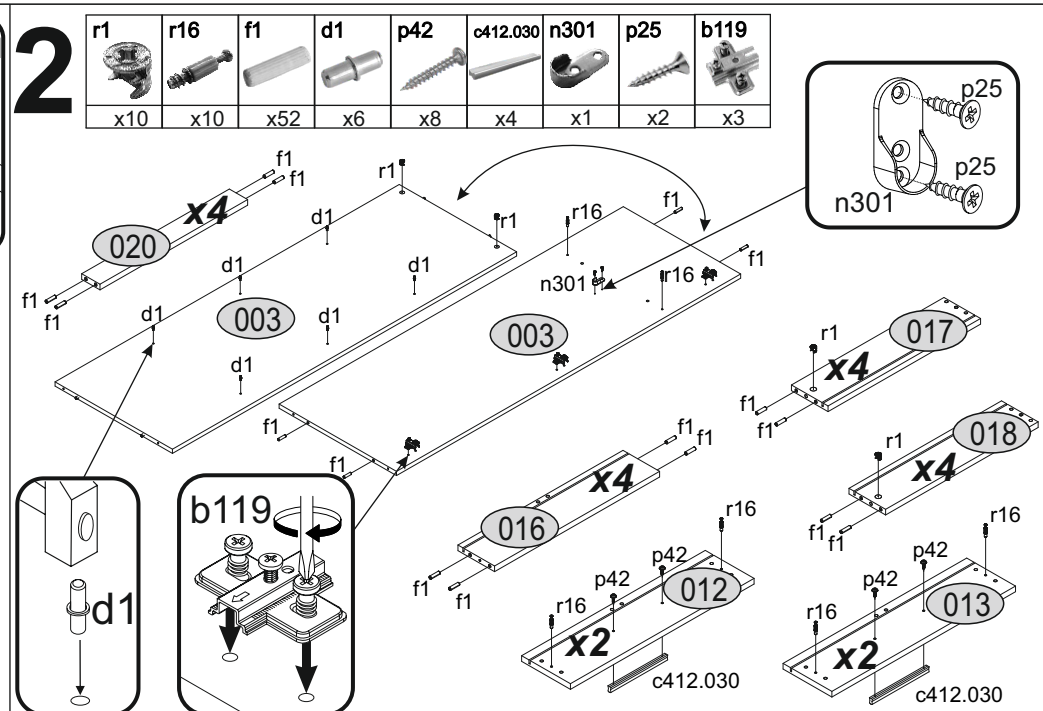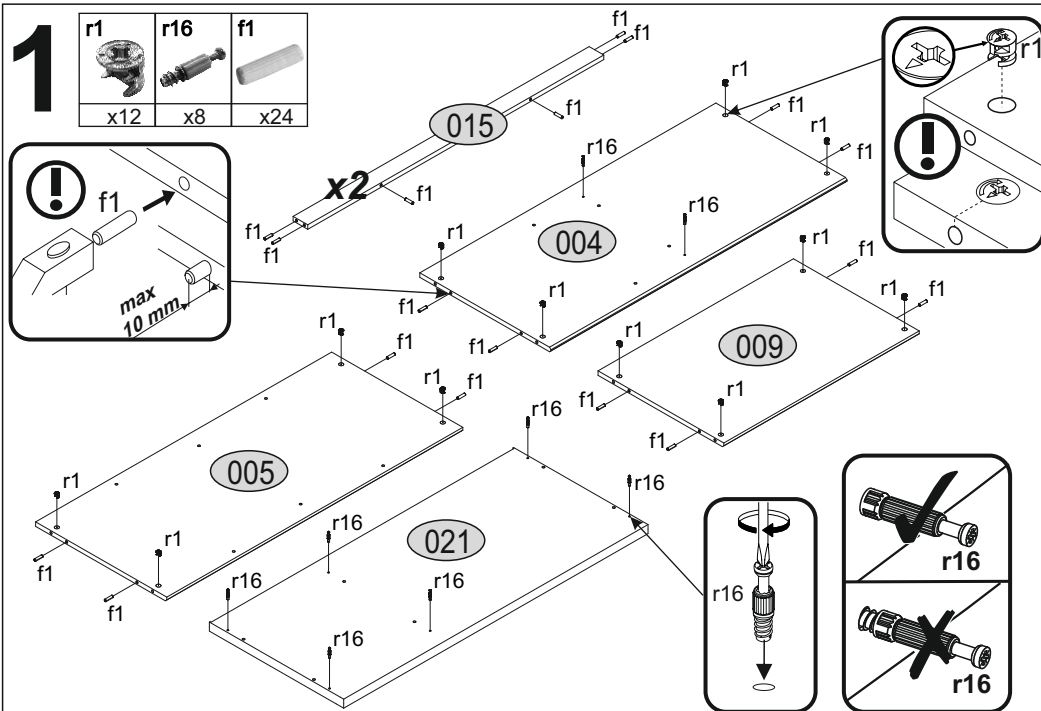


# 5

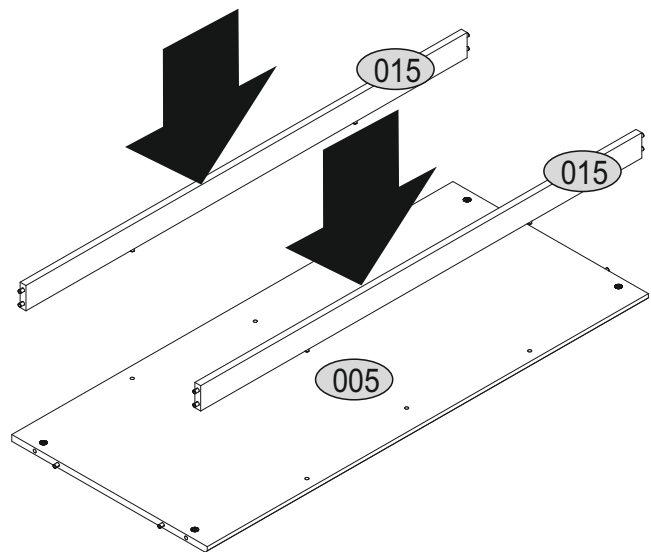


# 6

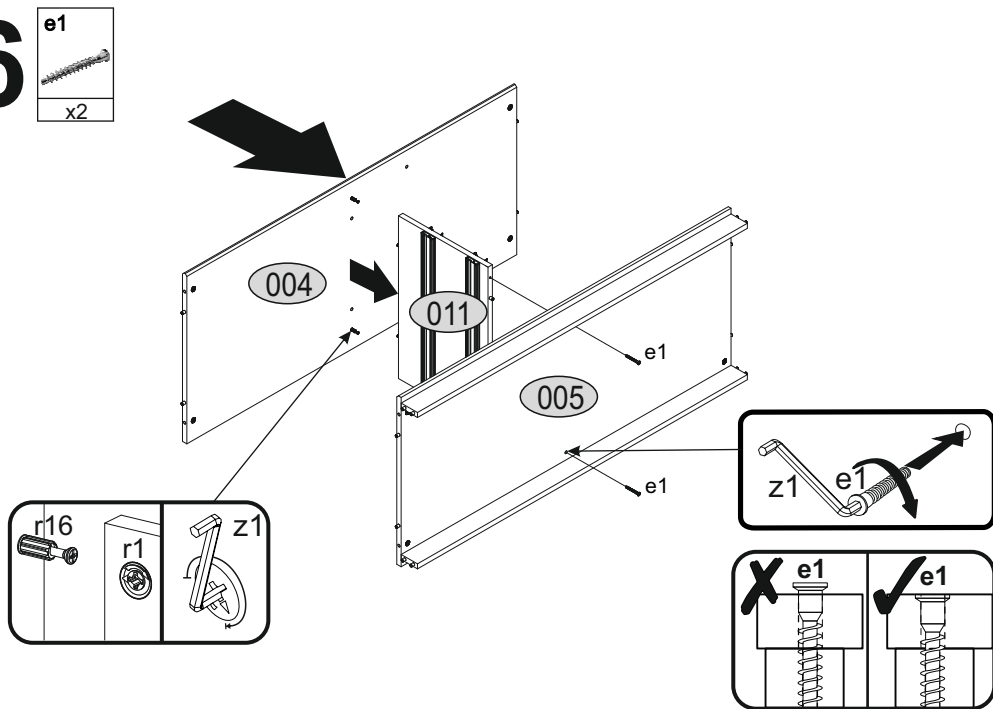


# 7

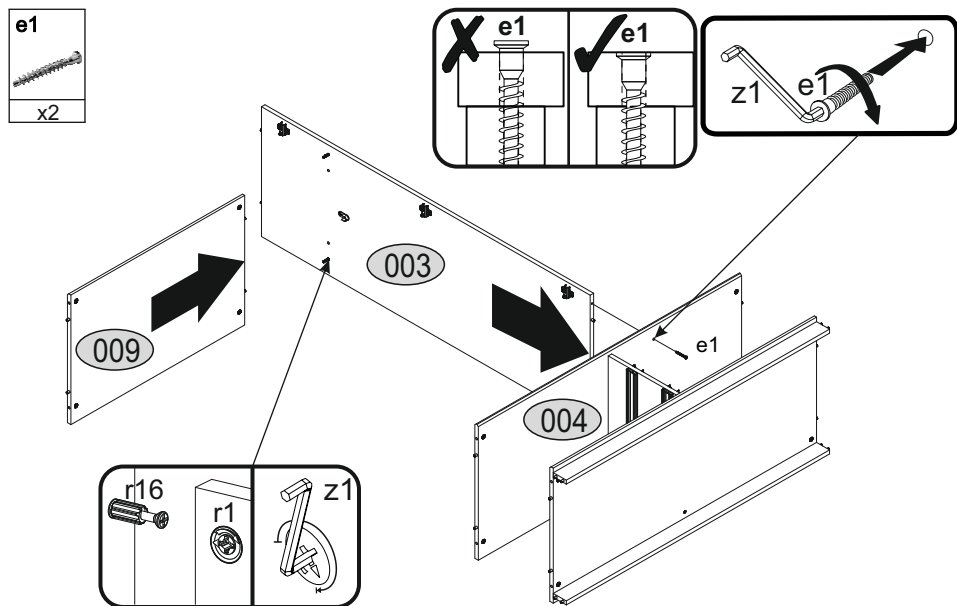

# 8





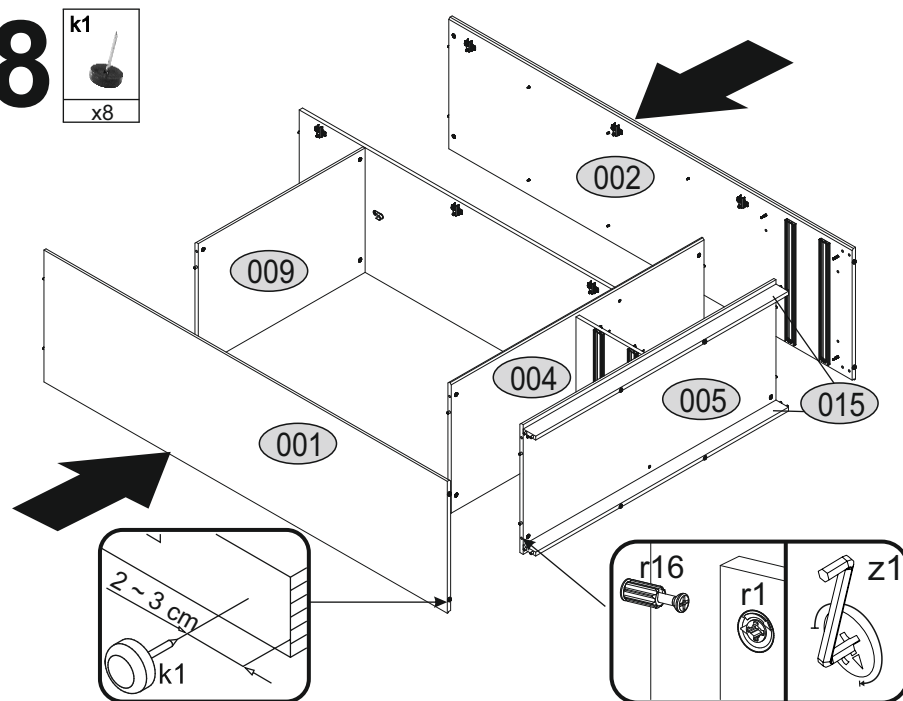


# 9


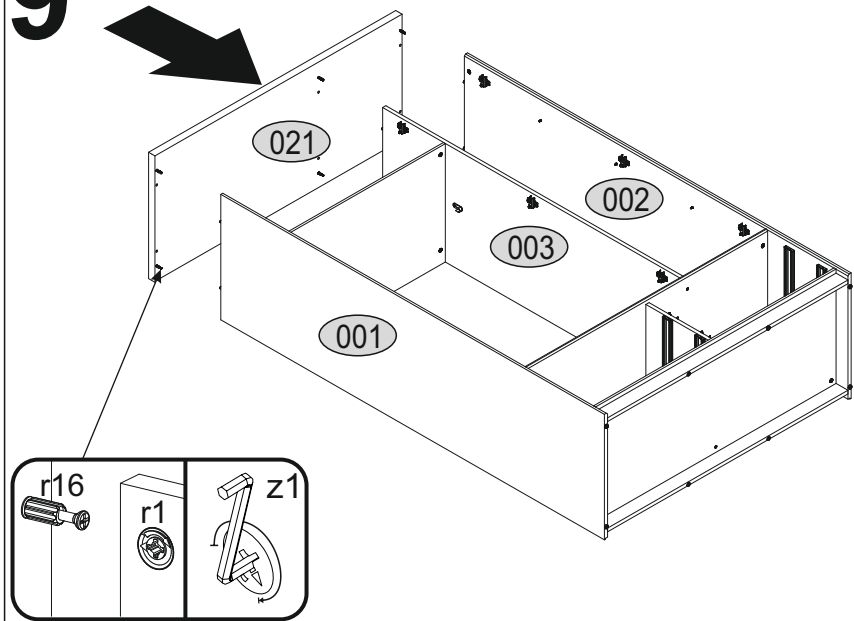


# 10



p25	l1	n14	f3	p17	n260.01
x6	x70	x1	x1	x1	x4

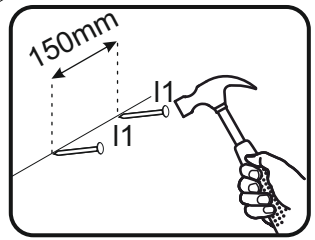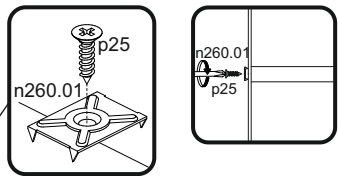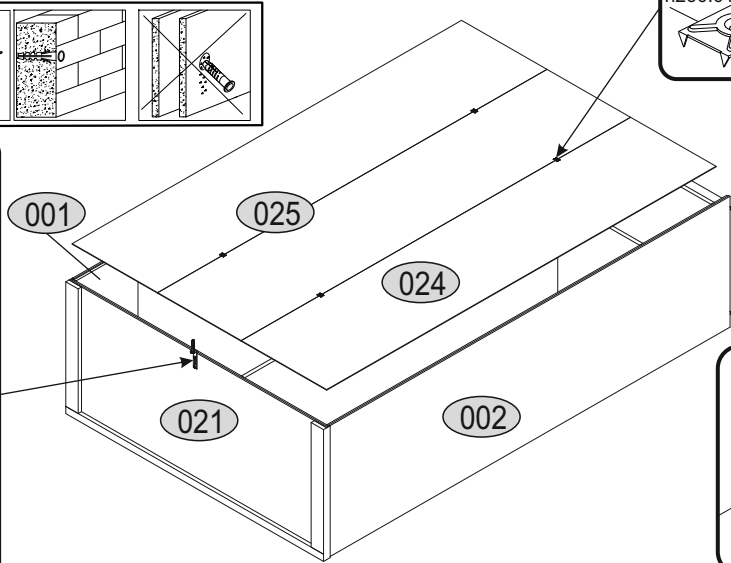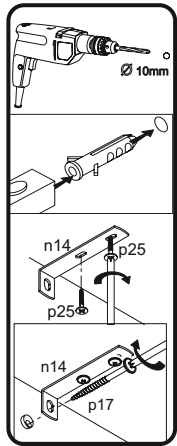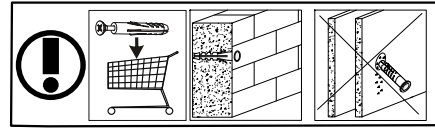




# 11

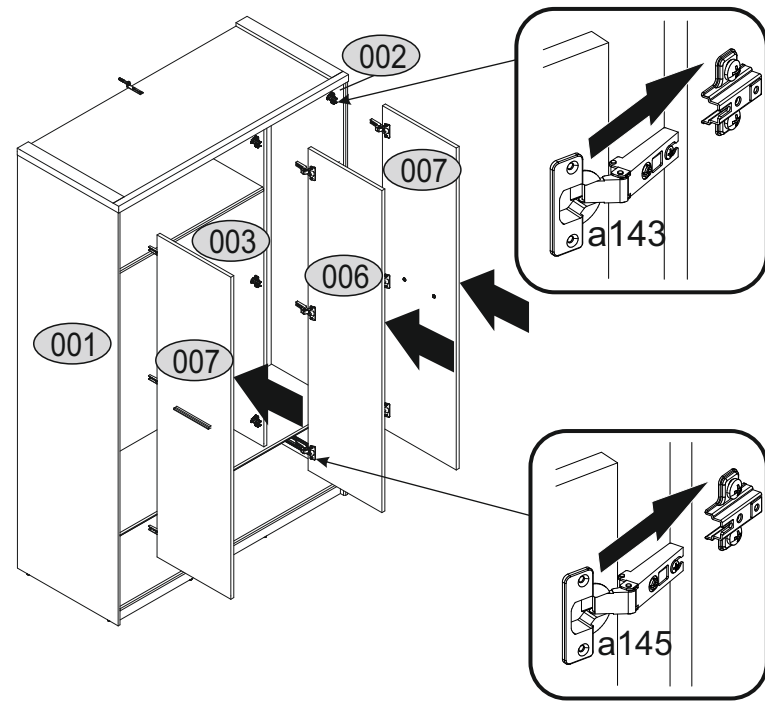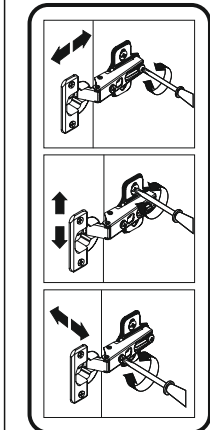

# 12

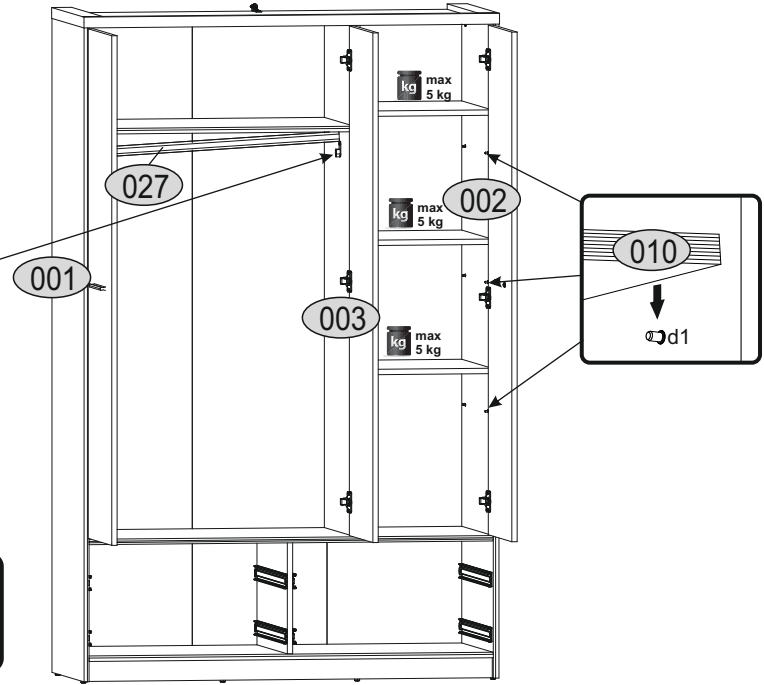
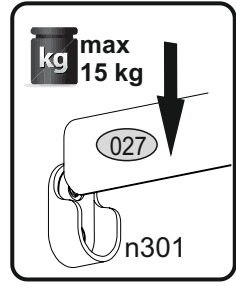


# 13

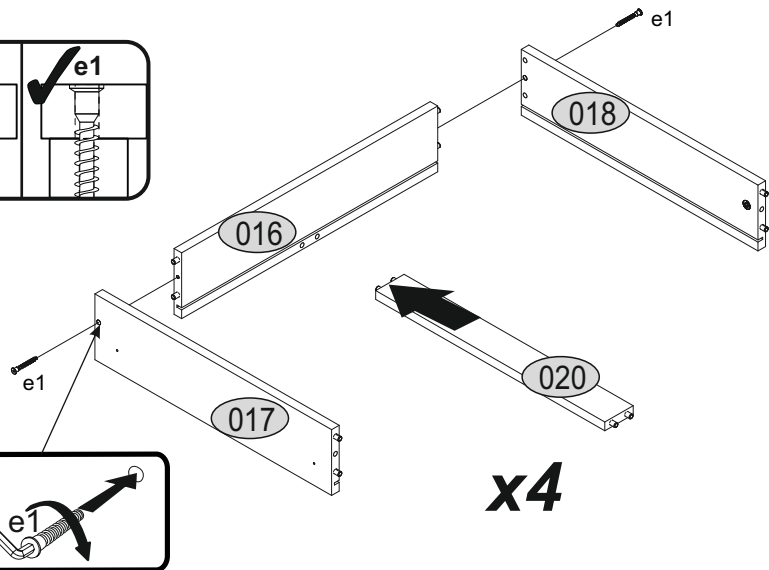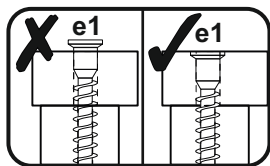



x4

# 14

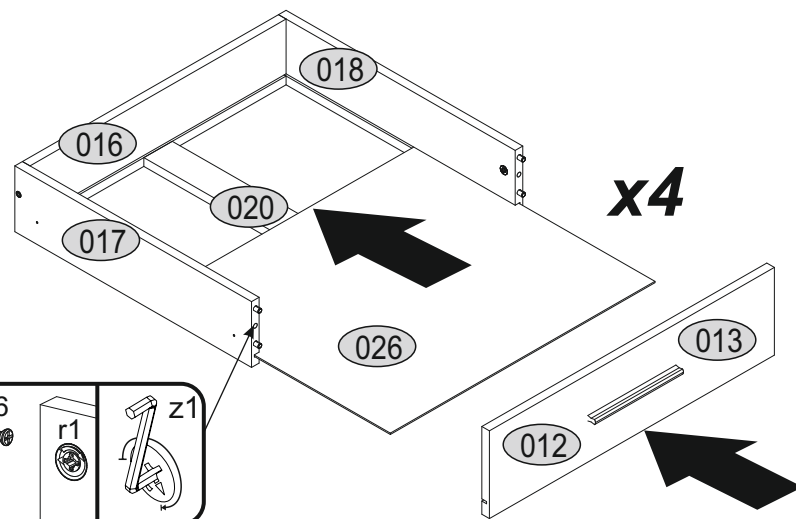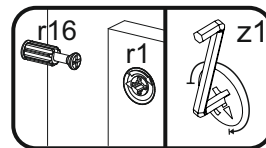

x4

# 15

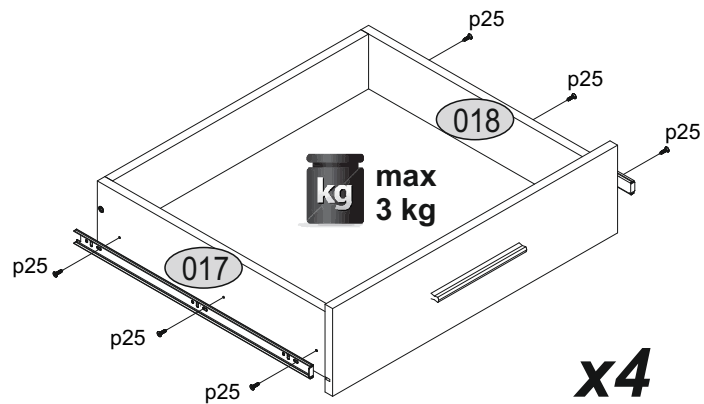

x4



# 16

