




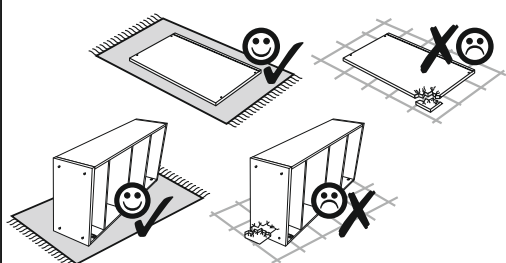


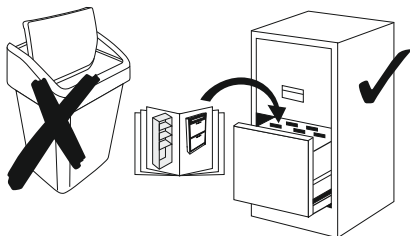

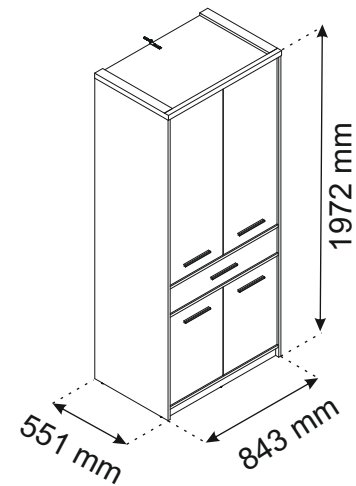

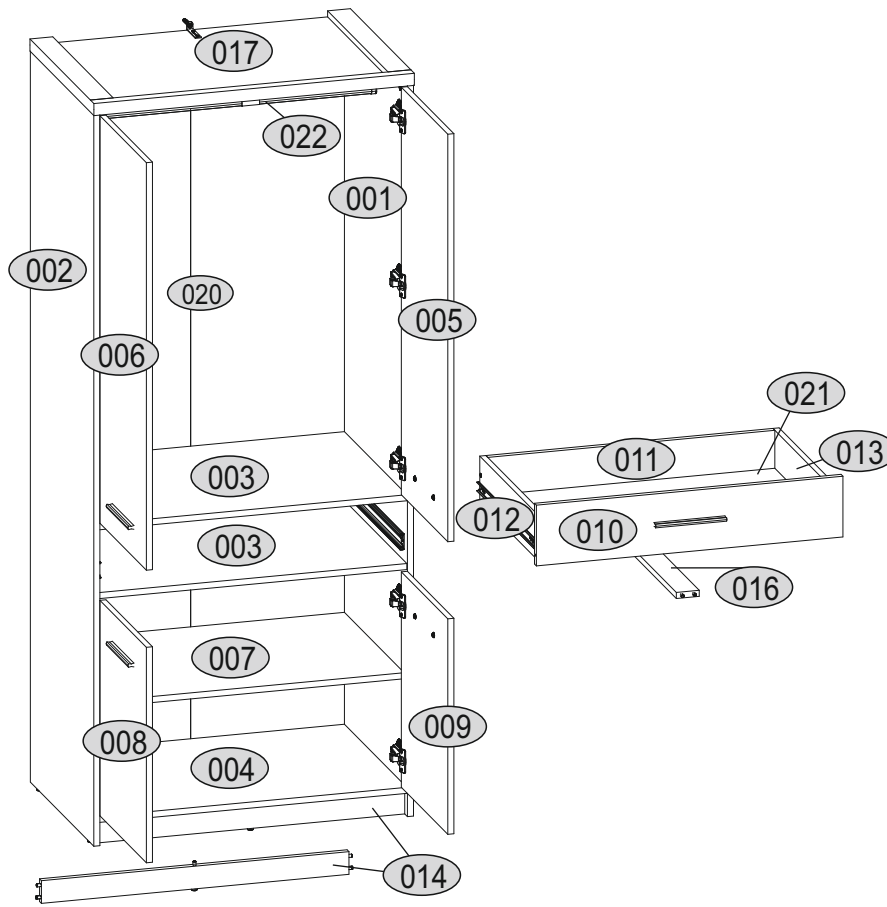

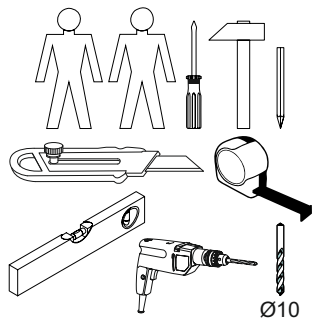

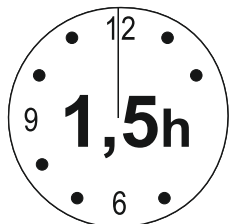


# Installation manual


## PAVI Wadrobe 4D1S



Code	Dimensions			Package
001	1934	546	16	1 2/3
002	1934	546	16	1 2/3
003	809	537	16	2 1/3
004	809	537	16	1 1/3
005	1078	400	16	1 3/3
006	1078	400	16	1 3/3
007	809	515	16	1 1/3
008	570	400	16	1 3/3
009	570	400	16	1 3/3
010	803	160	16	1 1/3
011	752	120	16	1 1/3
012	500	120	16	1 1/3
013	500	120	16	1 1/3
014	809	60	16	2 1/3
016	484	60	16	1 1/3
017	843	551	16/32	1 1/3
020	1882	826	2,5	2 2/3
021	502	770	2,5	1 1/3
022	804	30	15	1 1/3
accessories				1 1/3


# Accessories:

<p>10x a143</p> 	<p>10x b119</p> 	<p>5x c412.030</p> 	<p>4x d1</p> 
<p>2x e1 Ø7x50</p> 	<p>38x f1 Ø8x30</p> 	<p>1x f3</p> 	<p>6x k1</p> 
<p>1x n14</p> 	<p>1x n25</p> 	<p>2x n260.01</p> 	<p>2x n301</p> 
<p>1x p17 Ø6x50</p> 	<p>42x p25 Ø3.5x16</p> 	<p>10x p42</p> 	<p>40x l1</p> 
<p>1x Lb-500</p> 	<p>18x r1 15x12</p> 	<p>18x r16 Ø5x24</p> 	<p>10x s2</p> 
<p>1x z1</p> 			

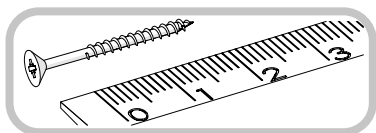


# 1

<b>r1</b>	<b>r16</b>	<b>f1</b>	<b>p42</b>	<b>c412.030</b>	<b>n25</b>	<b>p25</b>
x14	x6	x34	x2	x1	x1	x2

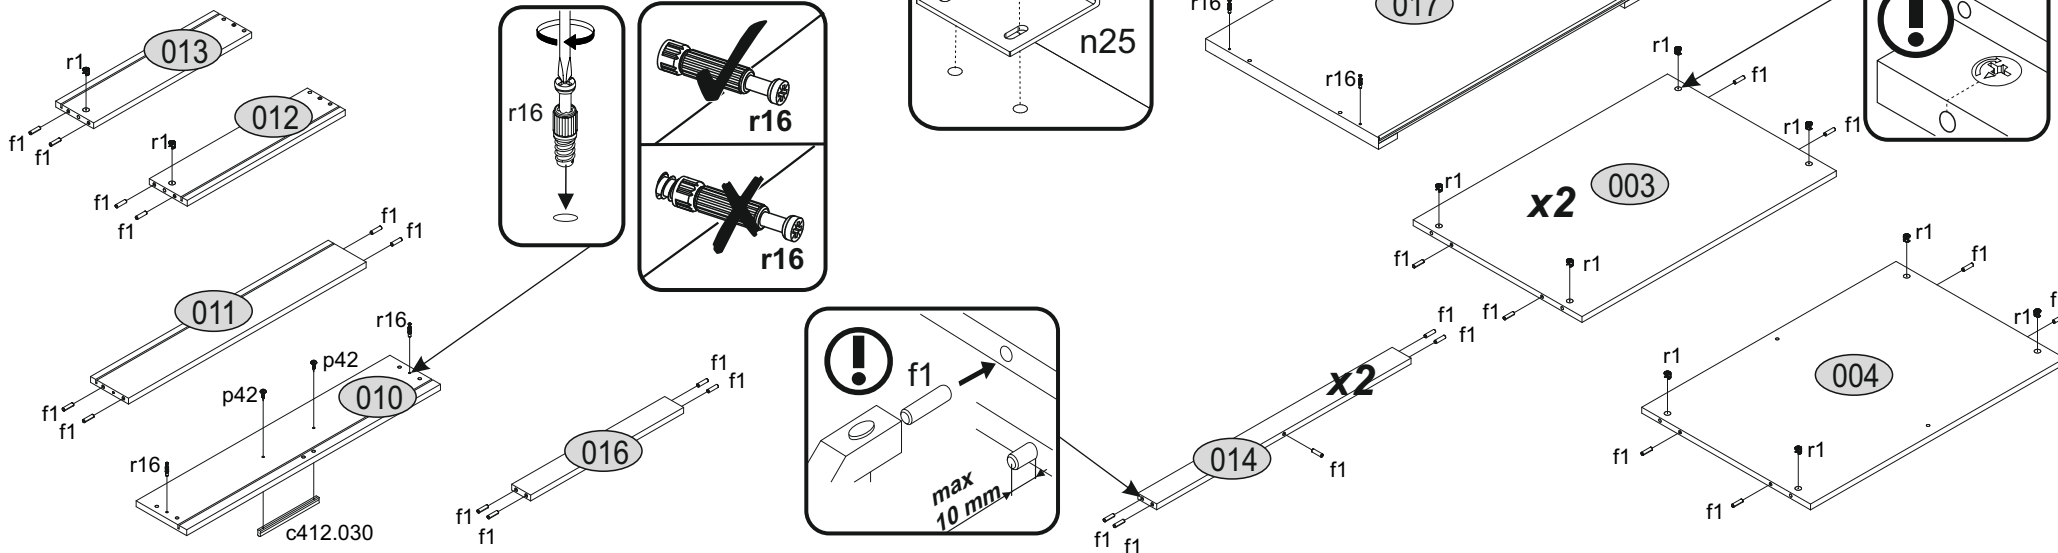


# 2

<b>p42</b>	<b>c412.030</b>	<b>a143</b>	<b>p25</b>
x8	x4	x10	x20

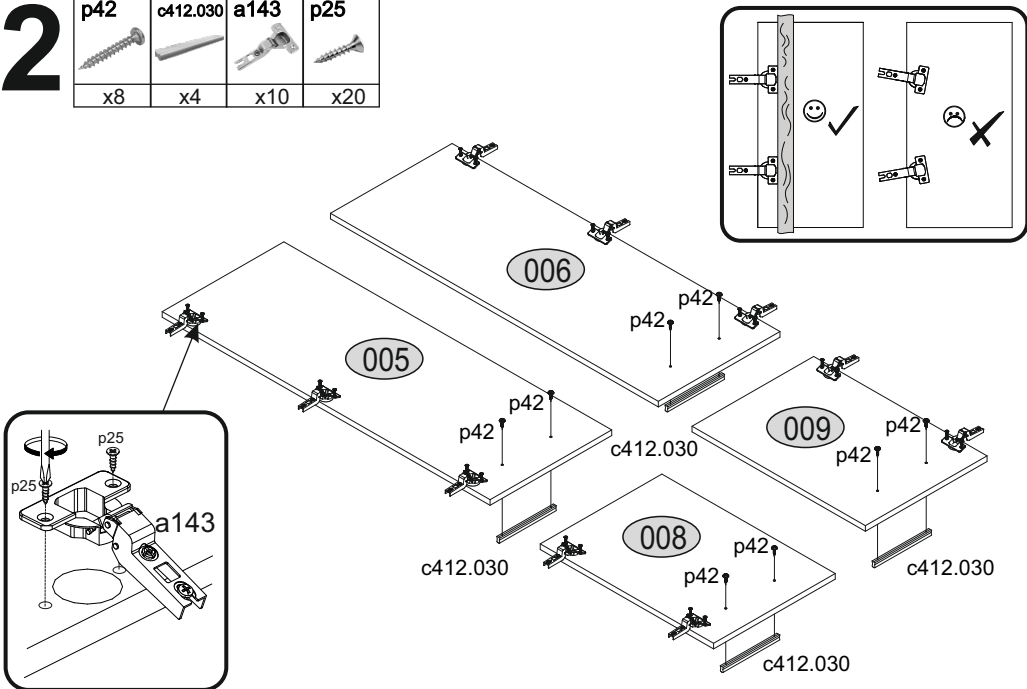


# 3



<b>n301</b>	<b>r1</b>	<b>r16</b>	<b>f1</b>	<b>p25</b>	<b>d1</b>	<b>b119</b>	<b>lb-500</b>
x2	x4	x12	x4	x10	x4	x10	x1

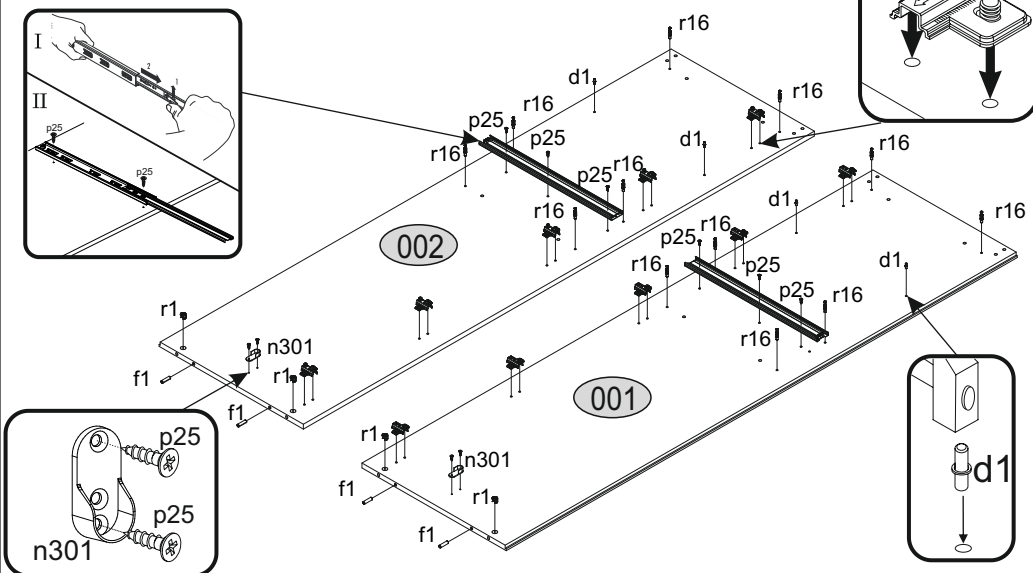


# 4

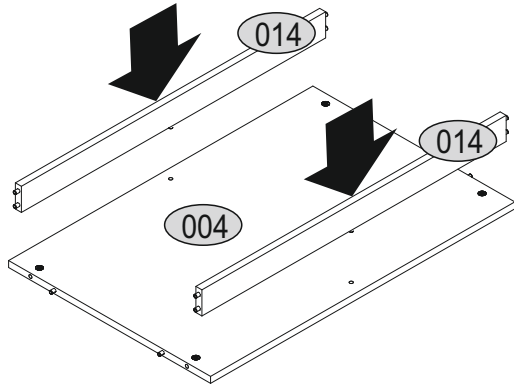



# 5

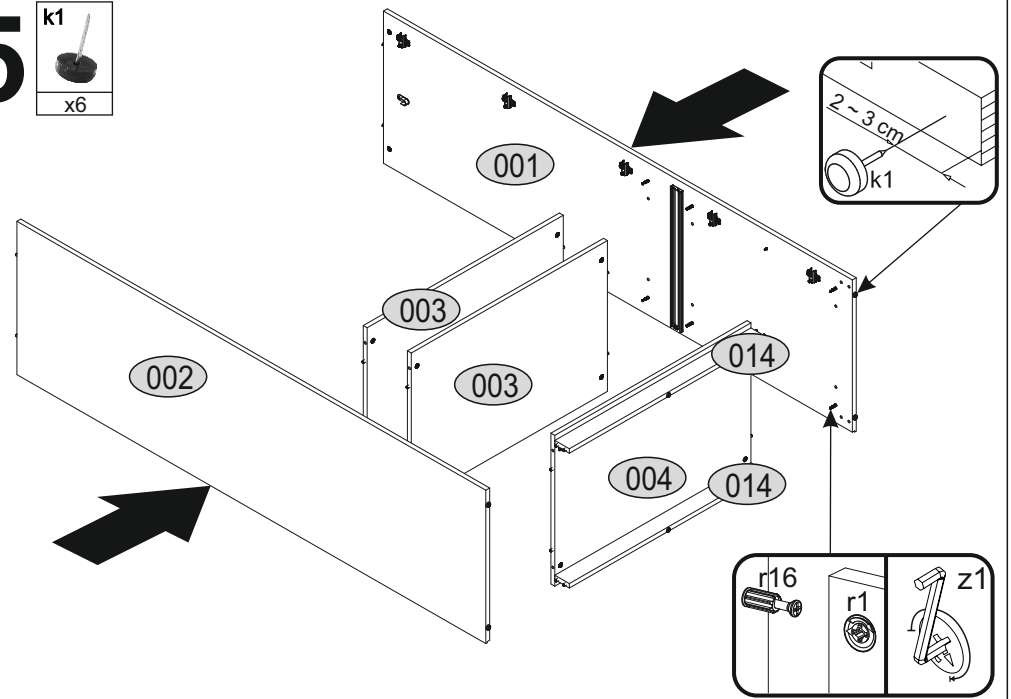



# 6

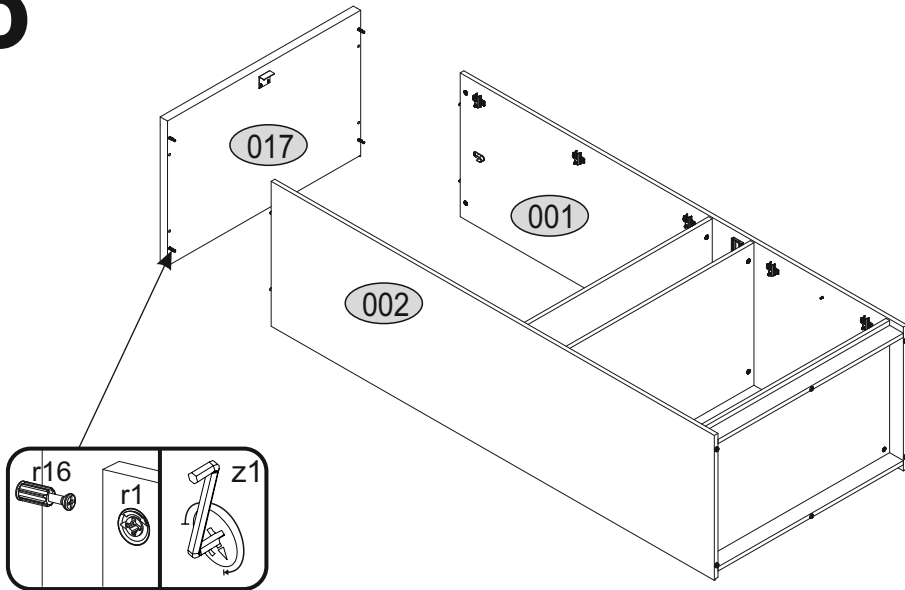


# 7

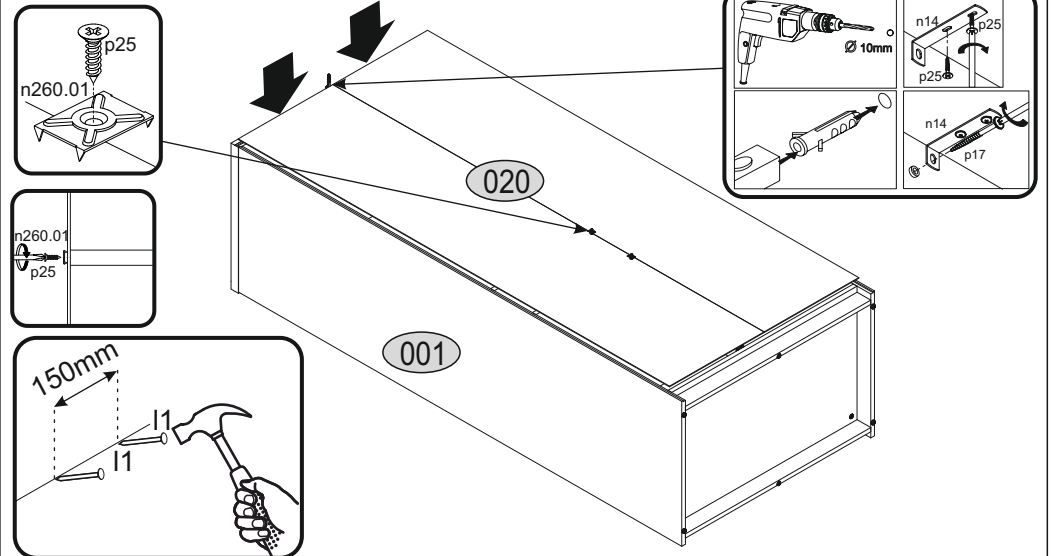


# 8

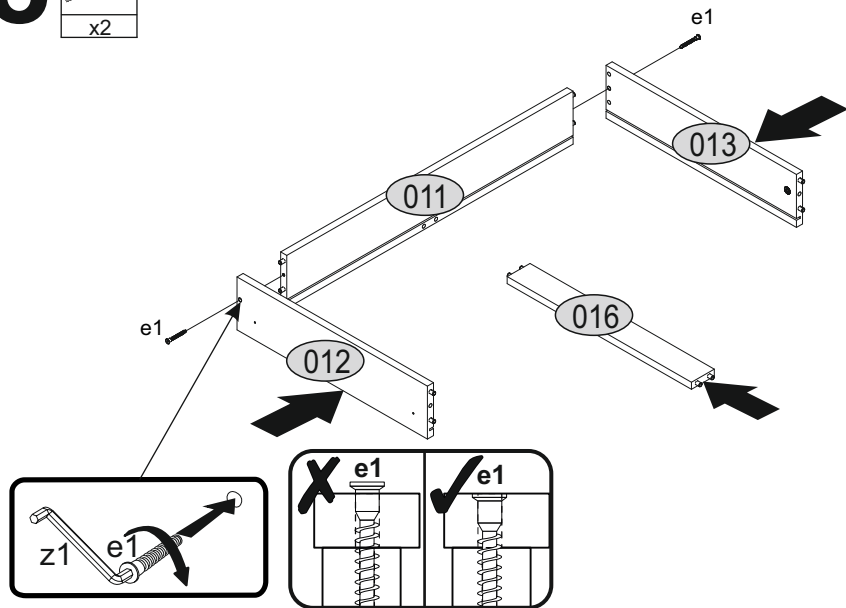


# 9

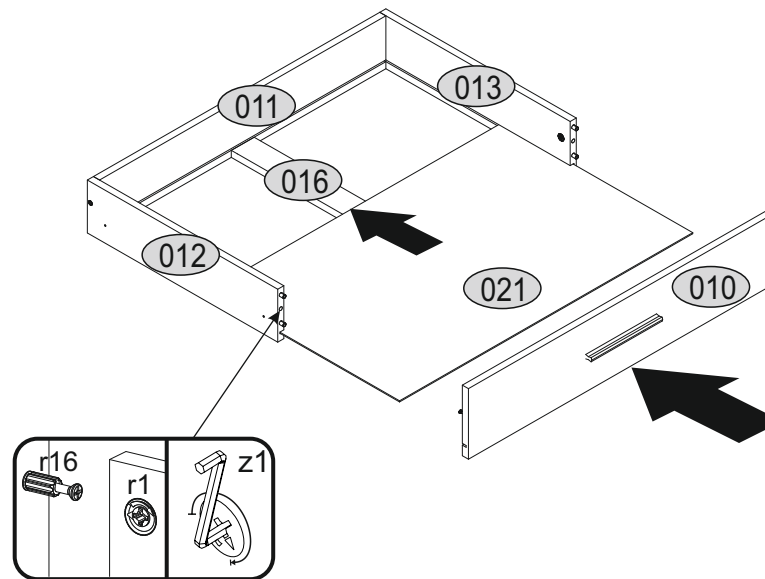


# 10

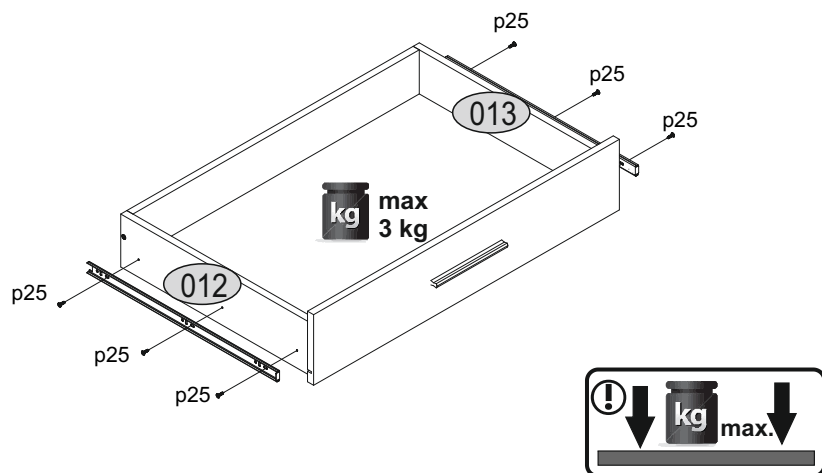

# 11

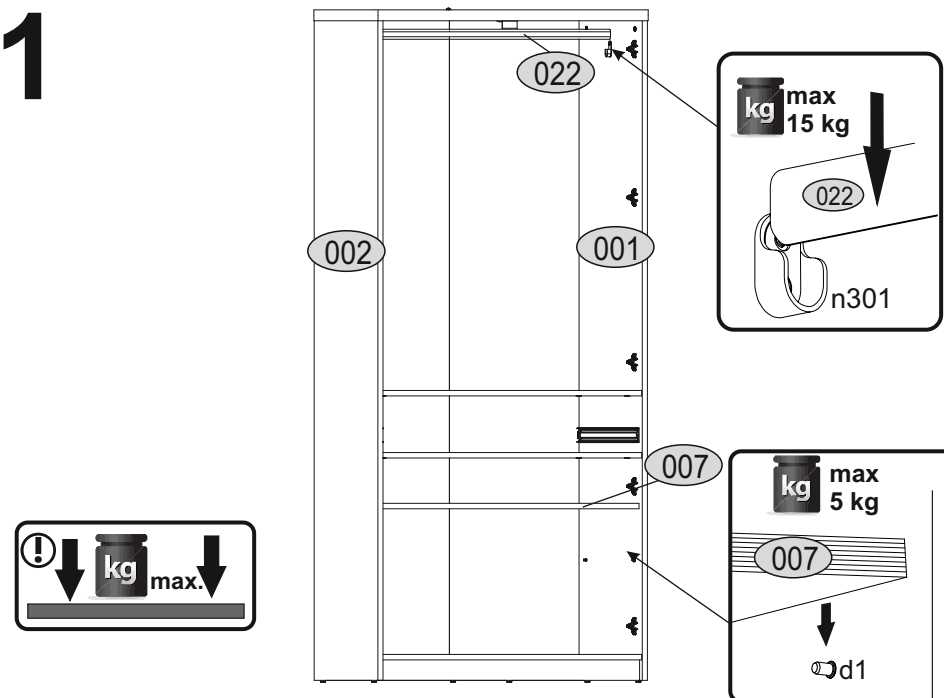

# 12

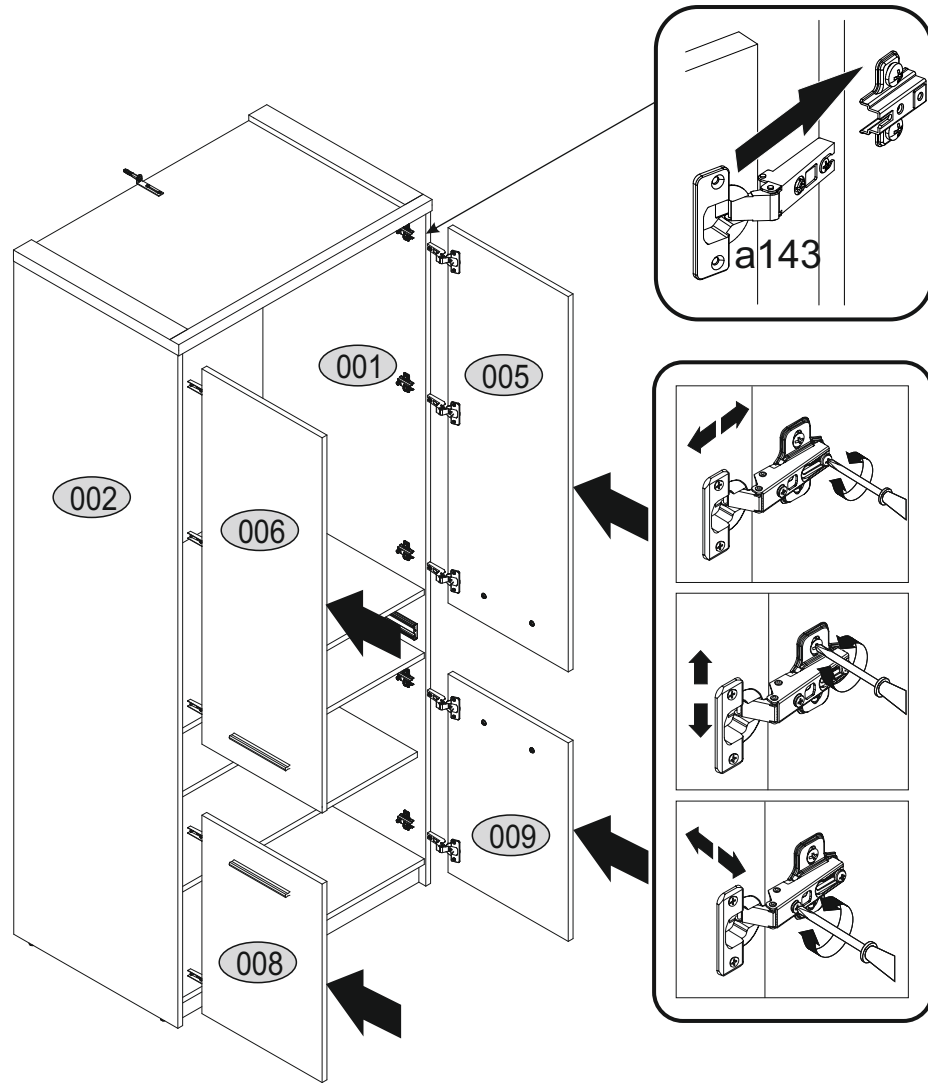

# 13

s2  
x10

