

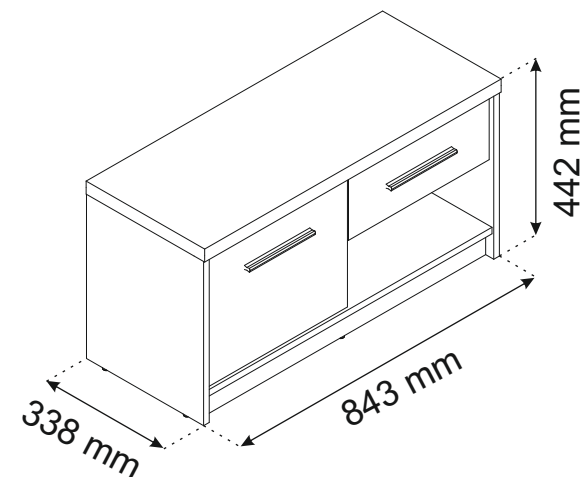
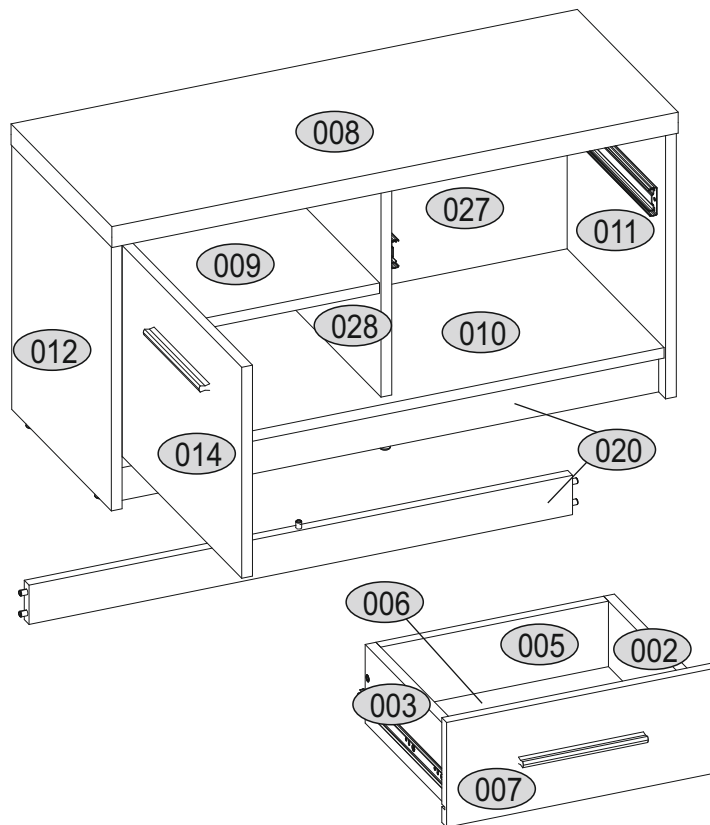
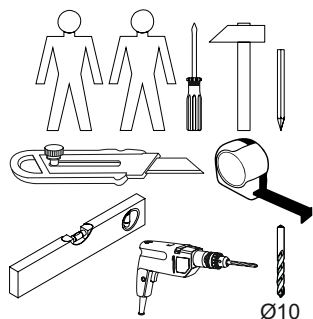
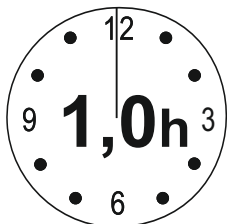


# Installation manual

## PAVI Cabinet 1D1S

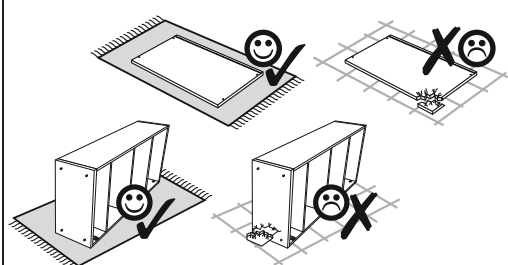


Code	Dimensions			Package	
	Code	Width	Height		
002	300	120	16	1	1/1
003	300	120	16	1	1/1
005	339	120	16	1	1/1
006	302	357	2,5	1	1/1
007	400	160	16	1	1/1
008	843	338	16/32	1	1/1
009	397	298	16	1	1/1
010	809	324	16	1	1/1
011	404	333	16	1	1/1
012	404	333	16	1	1/1
014	322	400	16	1	1/1
020	809	60	16	2	1/1
027	368	826	2,5	1	1/1
028	344	303	16	1	1/1
accessories				1	1/1

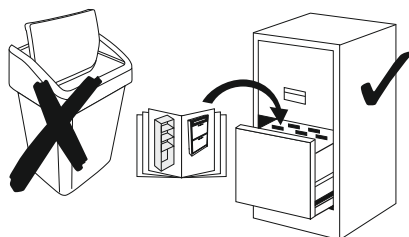


# Accessories:

<p>2x a143</p> 	<p>2x b119</p> 	<p>2x c412.030</p> 	<p>4x d1</p> 
<p>4x e1 Ø7x50</p> 	<p>30x f1 Ø8x30</p> 	<p>1x f3</p> 	<p>6x k1</p> 
<p>1x n14</p> 	<p>1x p17 Ø6x50</p> 	<p>18x p25 Ø3.5x16</p> 	<p>4x p42 Ø3.5x25</p> 
<p>12x r1 15x12</p> 	<p>12x r16 Ø5x24</p> 	<p>20x l1</p> 	<p>1x lb-300</p> 
<p>8x s2</p> 	<p>1x z1</p> 		

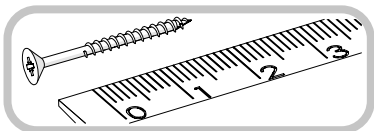


# 1

<b>r1</b>	<b>r16</b>	<b>f1</b>	<b>p42</b>	<b>c412.030</b>
x6	x8	x22	x2	x1

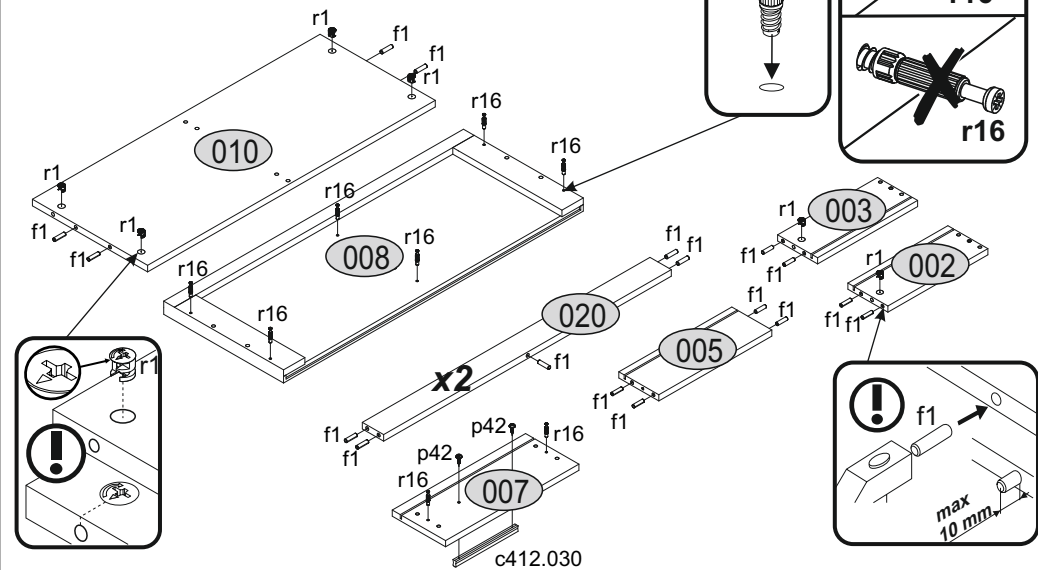


# 2

<b>r1</b>	<b>r16</b>	<b>f1</b>	<b>p25</b>	<b>lb-300</b>	<b>d1</b>
x4	x2	x6	x6	x1	x2

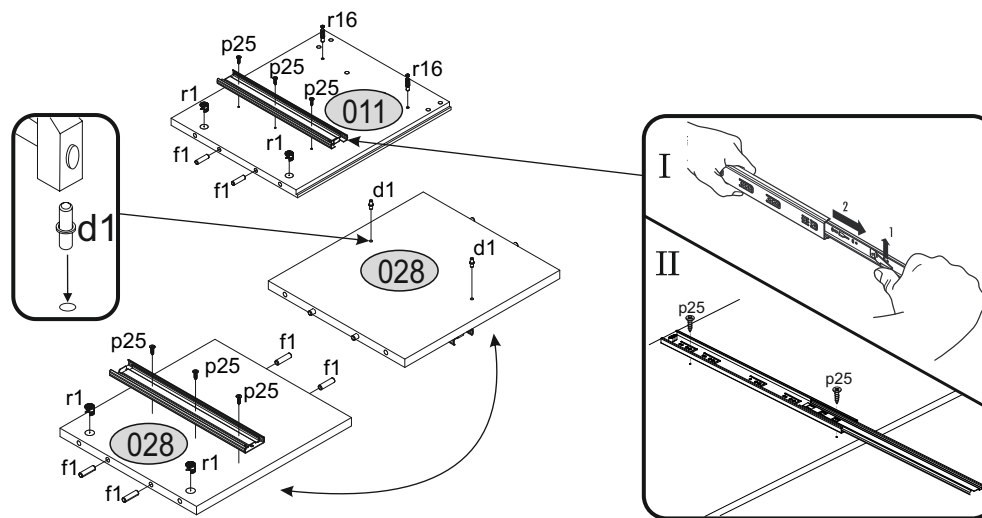


# 3





<b>r1</b>	<b>r16</b>	<b>f1</b>	<b>p42</b>	<b>d1</b>	<b>c412.030</b>	<b>a143</b>	<b>b119</b>	<b>p25</b>
x2	x2	x2	x2	x2	x1	x2	x2	x4

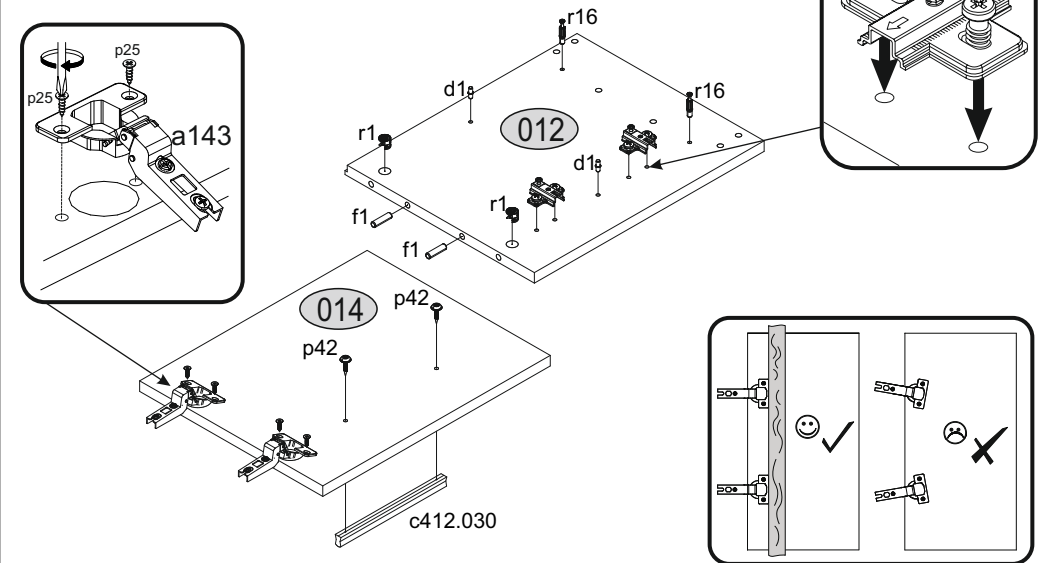




# 4

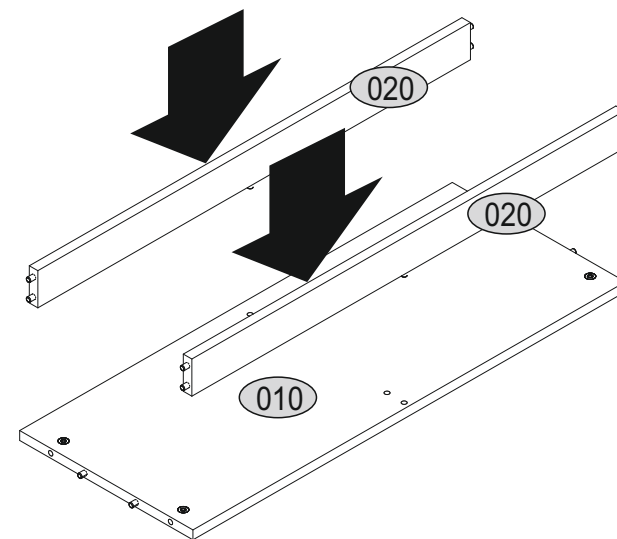



# 5

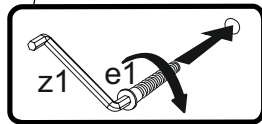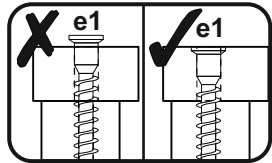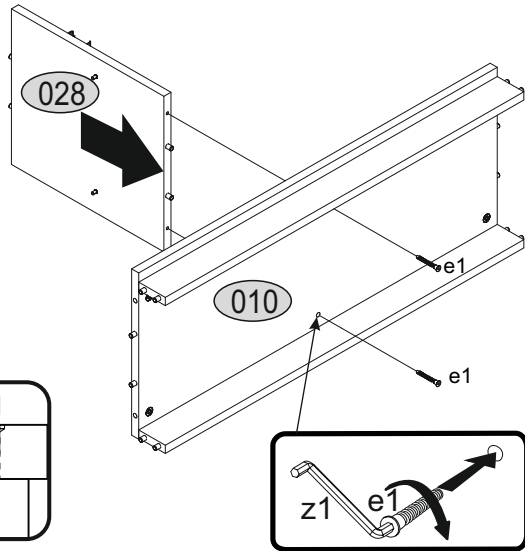






# 6

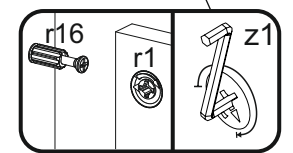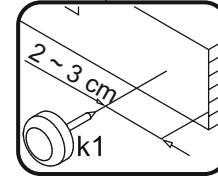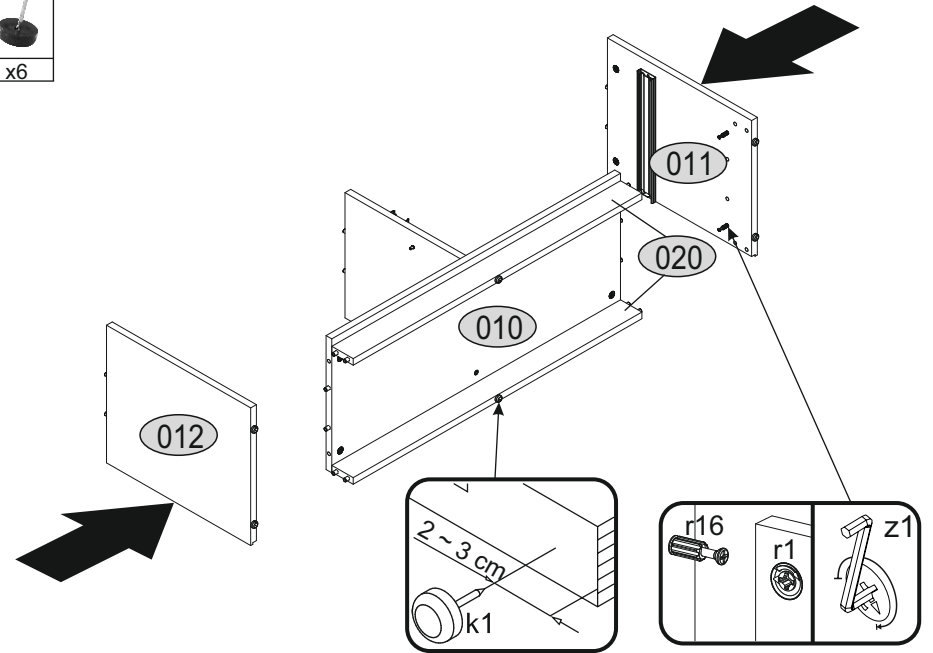


# 7

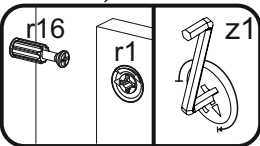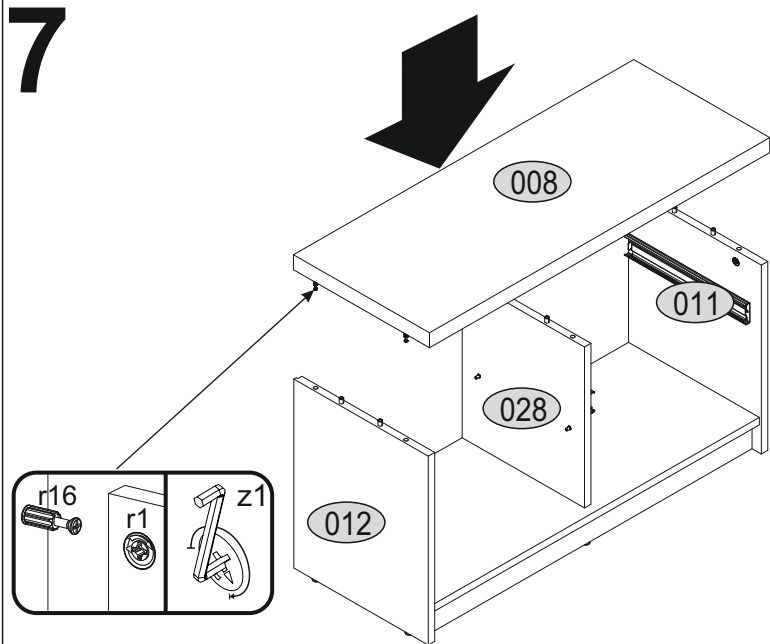


# 8

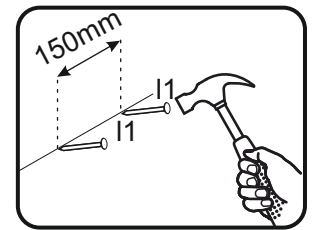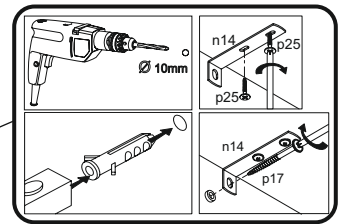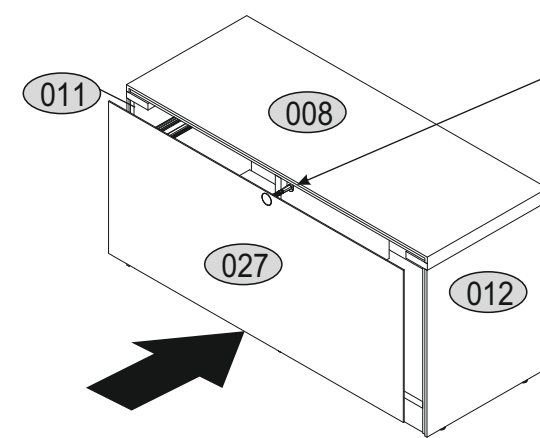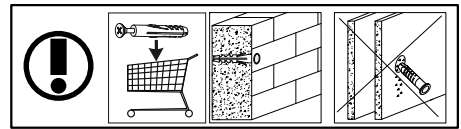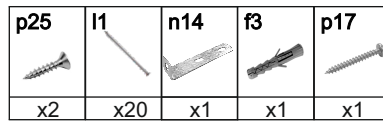


# 9

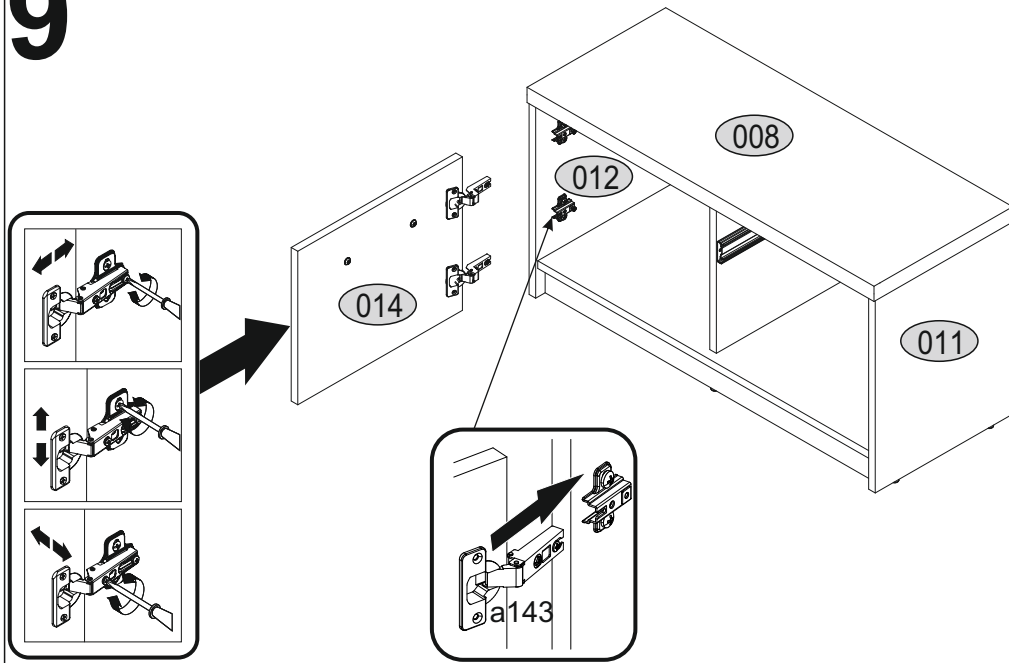


# 10

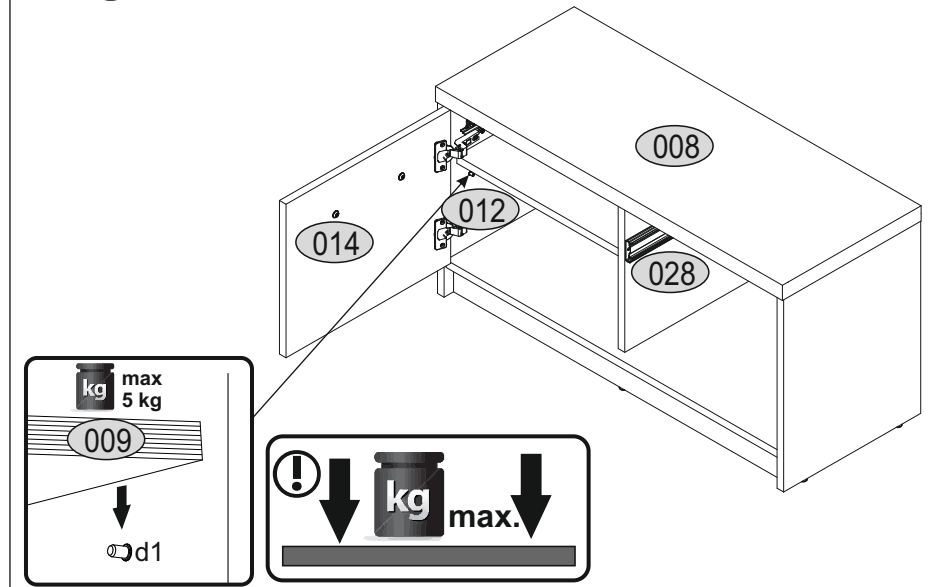


# 11

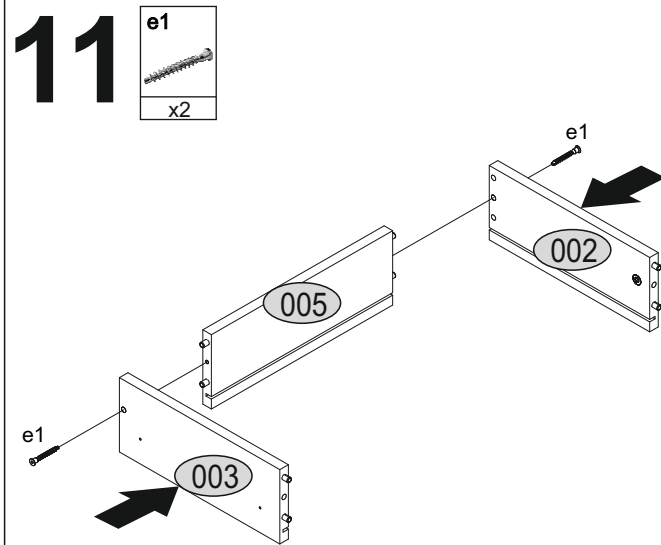

# 12

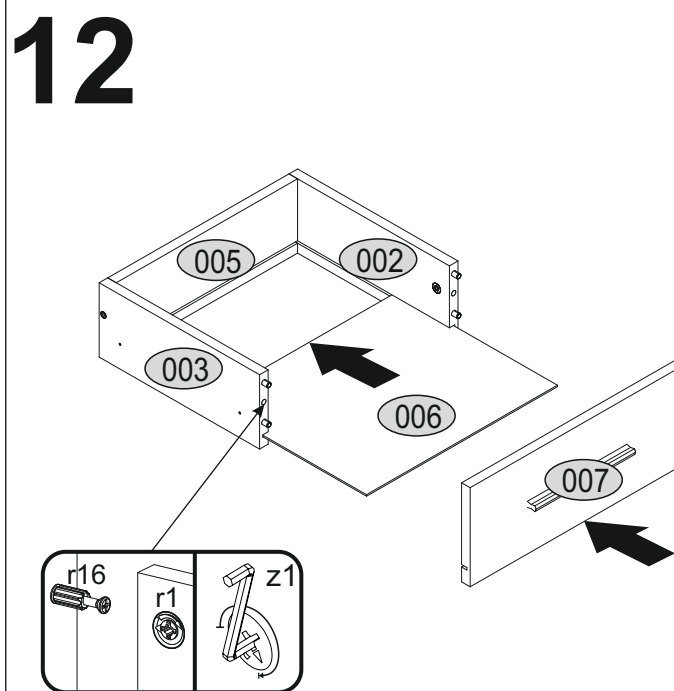

# 13

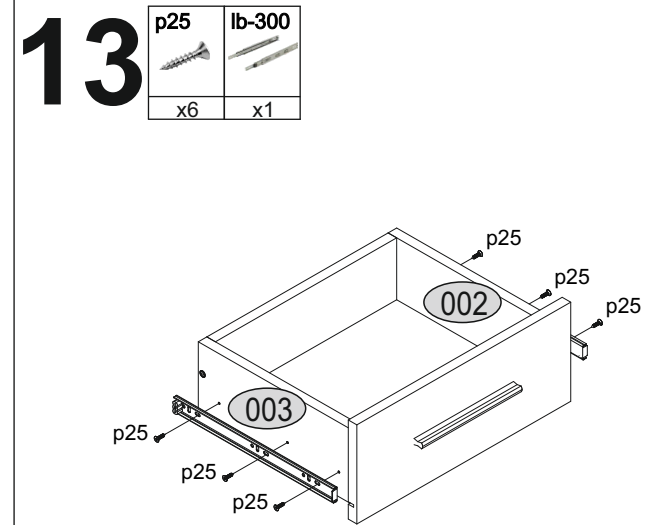

# 14

