

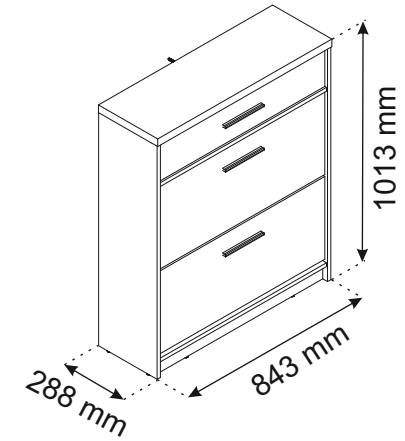
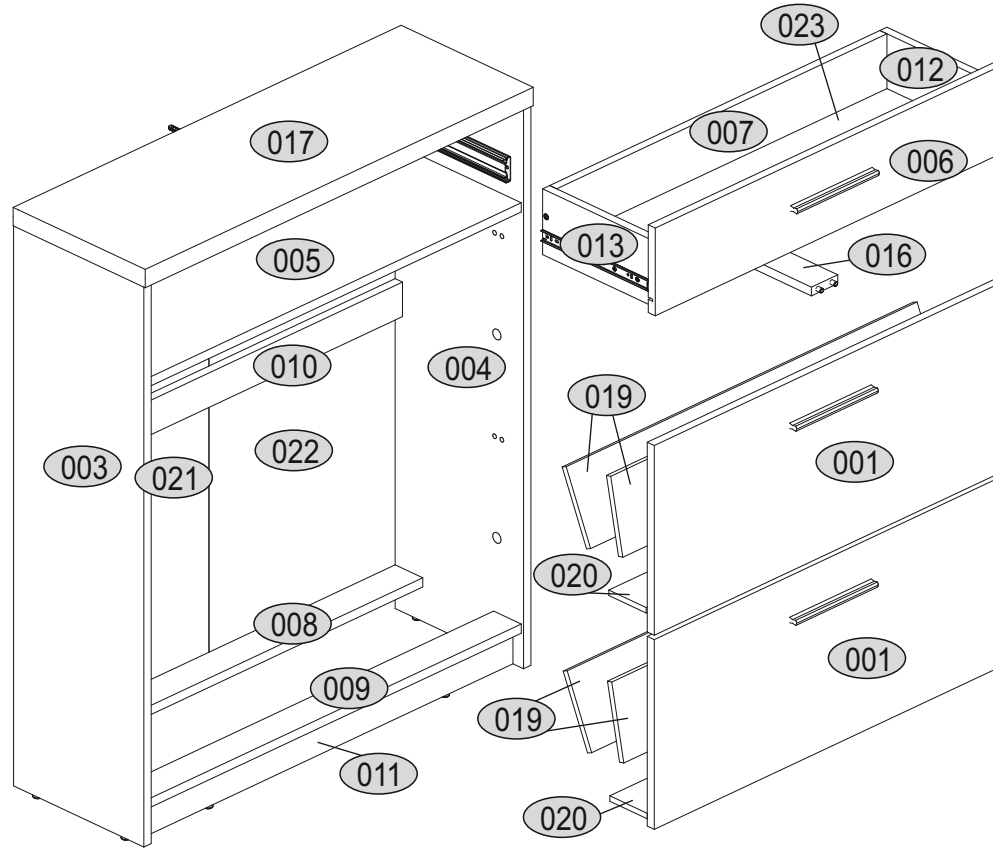



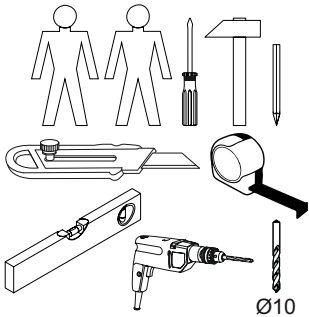


Installation manual

PAVI Shoe cabinet 2K1S

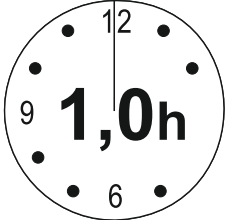

Code	Dimensions			Package	
001	803	346	16	2	1/2
003	975	283	16	1	1/2
004	975	283	16	1	1/2
005	809	274	16	1	1/2
006	803	160	16	1	1/2
007	752	120	16	1	1/2
008	809	60	16	1	1/2
009	809	60	16	1	1/2
010	809	60	16	1	1/2
011	809	60	16	1	1/2
012	250	120	16	1	1/2
013	250	120	16	1	1/2
016	234	60	16	1	1/2
017	843	288	16/32	1	1/2
019	799	140	10	4	1/2
020	799	85	10	2	1/2
021	938	413	2,5	1	1/2
022	938	413	2,5	1	1/2
023	252	770	2,5	1	1/2
accessories				1	2/2

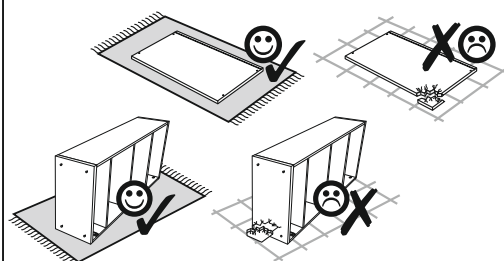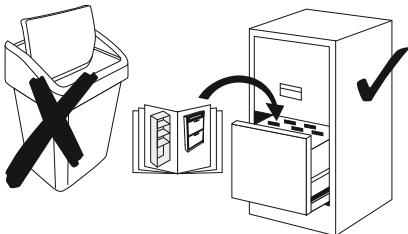






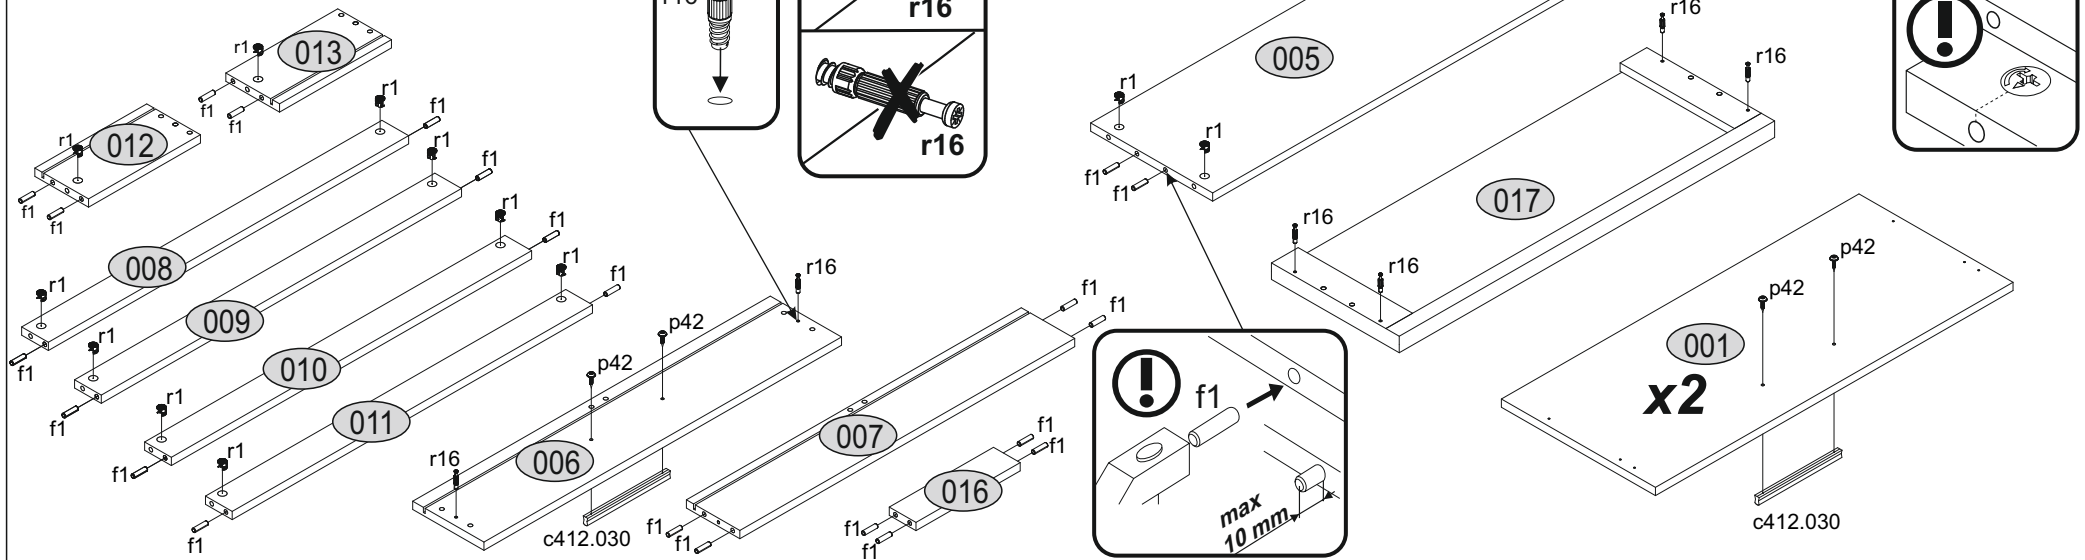
Accessories:

<p>3x c412.030</p> 	<p>28x f1 Ø8x30</p> 	<p>1x f3</p> 	<p>6x k1</p> 
<p>1x n14</p> 	<p>2x n260.01</p> 	<p>1x p17 Ø6x50</p> 	<p>28x p25 Ø3.5x16</p> 
<p>6x p42</p> 	<p>12x p52</p> 	<p>18x r1 15x12</p> 	<p>18x r16 Ø5x24</p> 
<p>2x m9</p> 	<p>4x m9(2)</p> 	<p>4x m11</p> 	<p>4x m10</p> 
<p>30x l1</p> 	<p>1x lb L-250</p> 	<p>4x j1 Ø4x20</p> 	<p>2x e1</p> 
<p>4x s2</p> 	<p>1x z1</p> 		











1

				
x14	x6	x24	x3	x6




2

						
x4	x12	x4	x4	x4	x6	x1

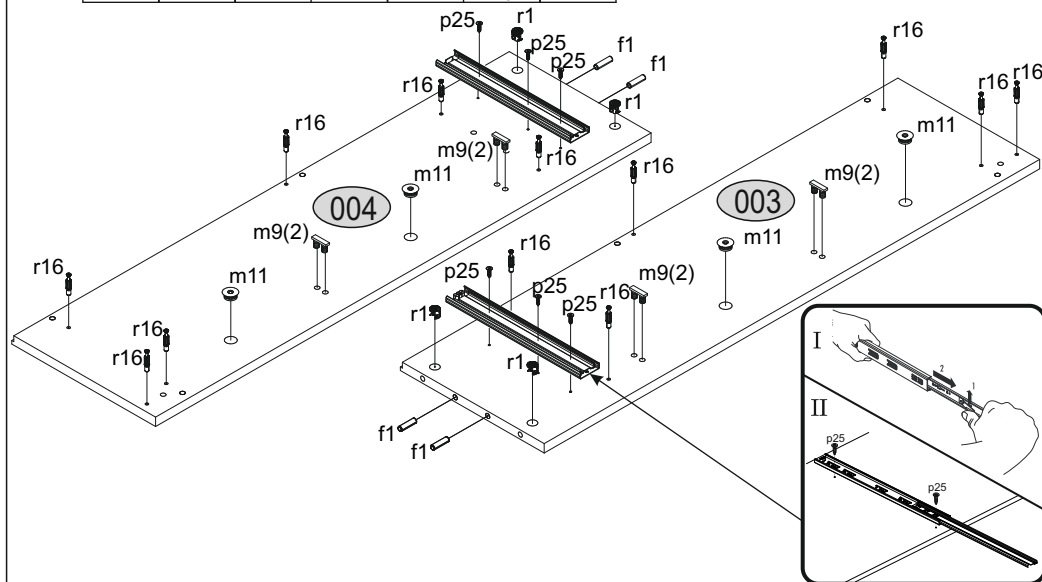


3


x6






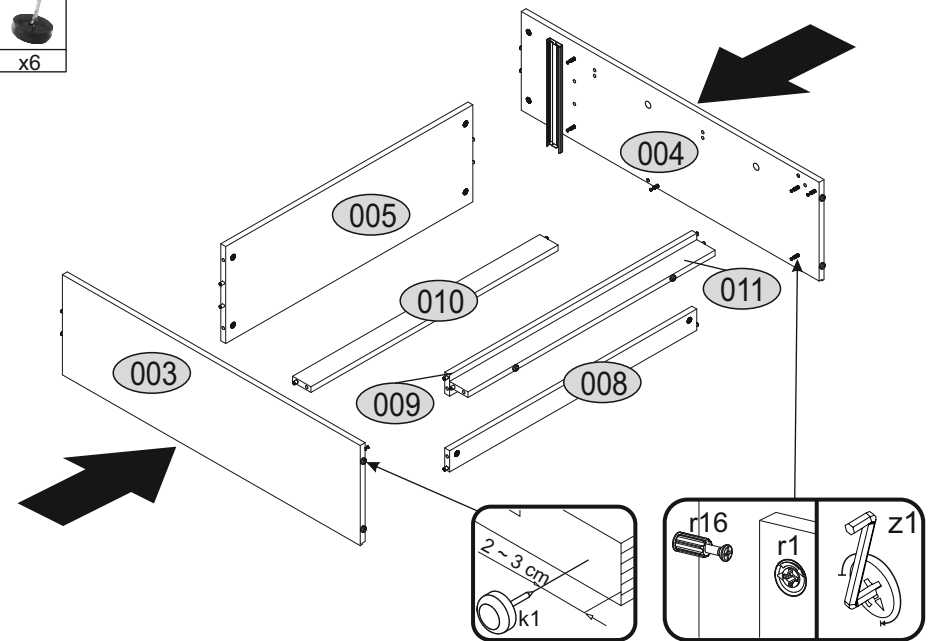


4

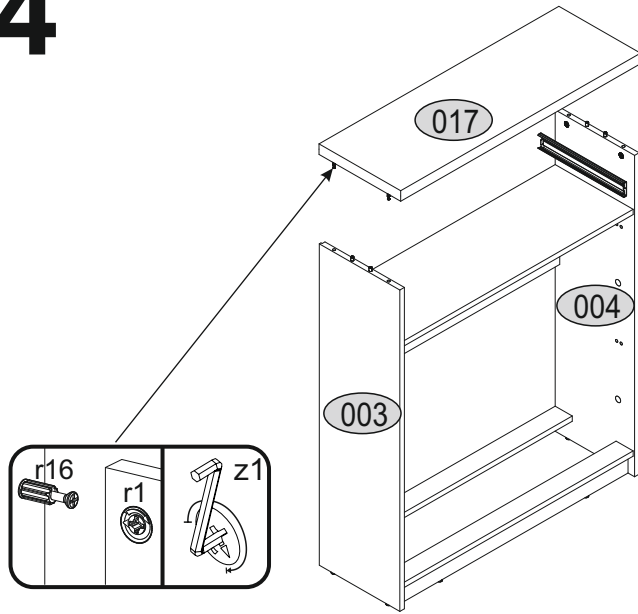



5

p25	l1	p17	n14	f3	n260.01
x4	x30	x1	x1	x1	x2

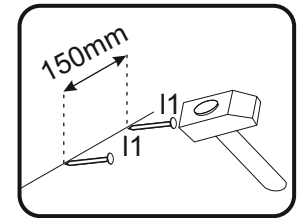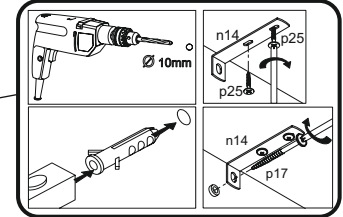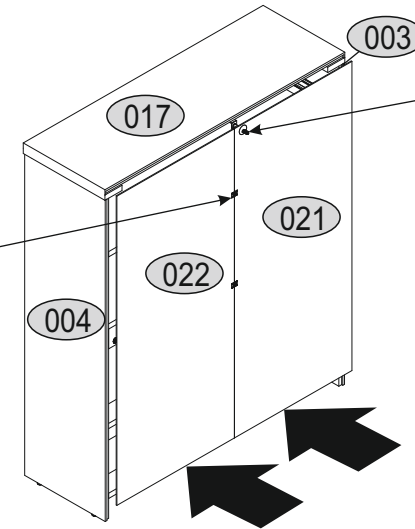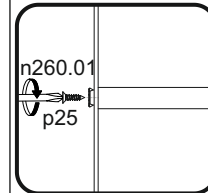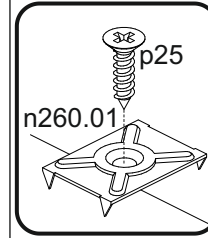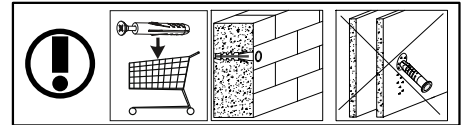

5



p25	m9
x12	x2

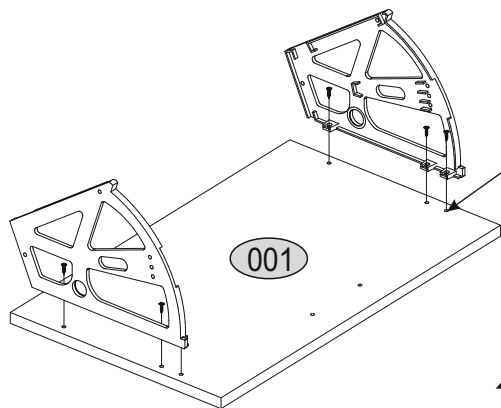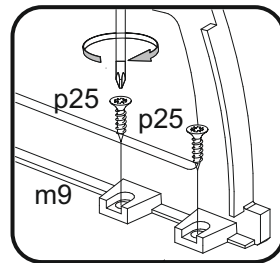

x2

6

p52
x12

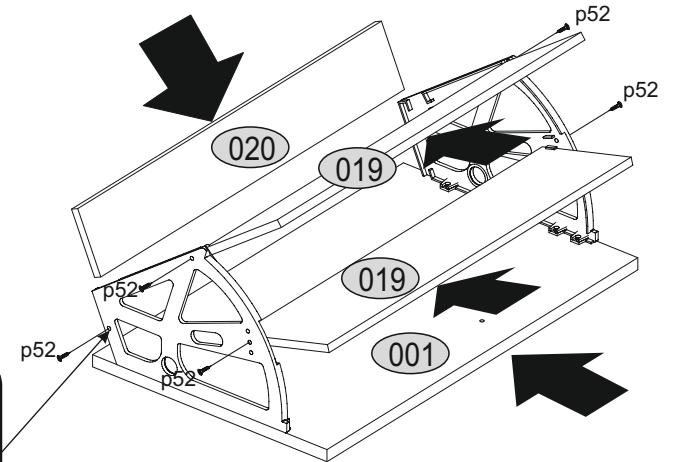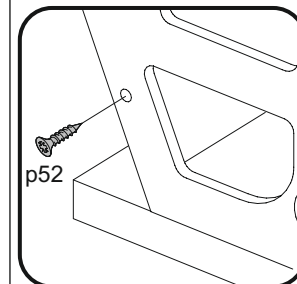

x2

