

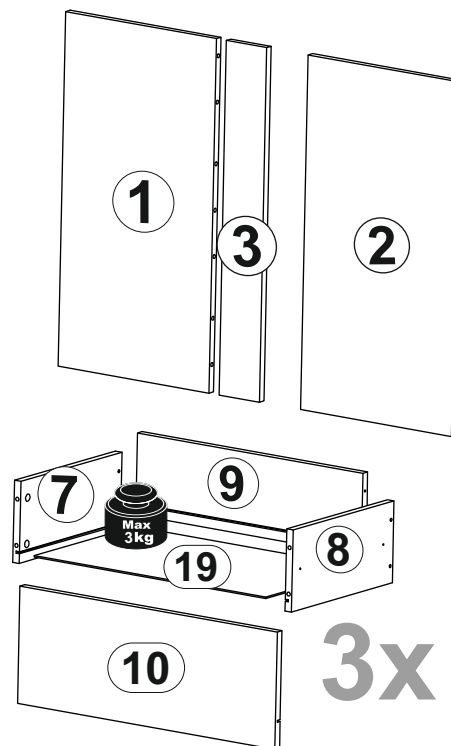
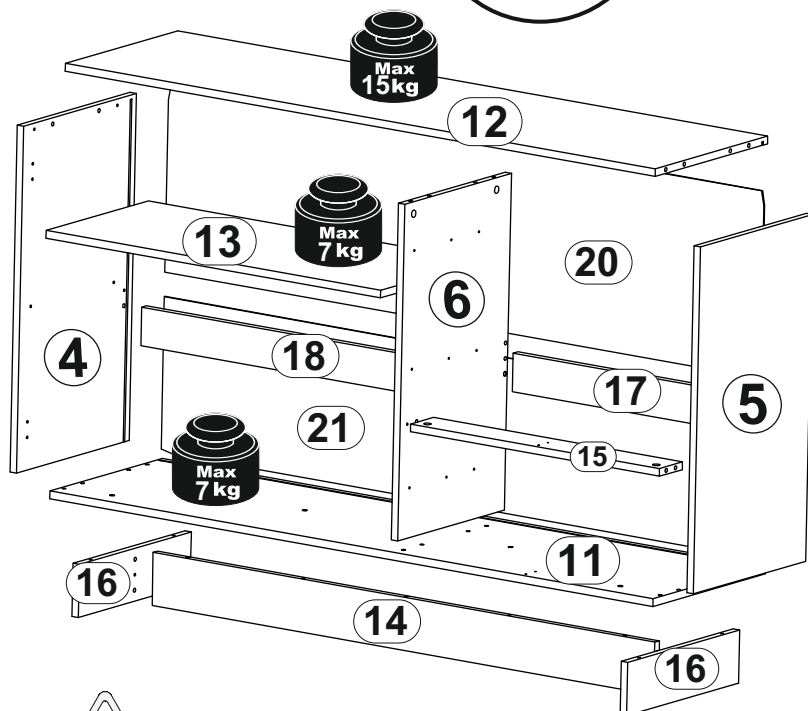
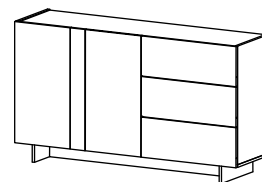
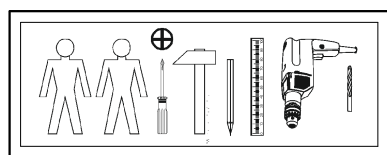
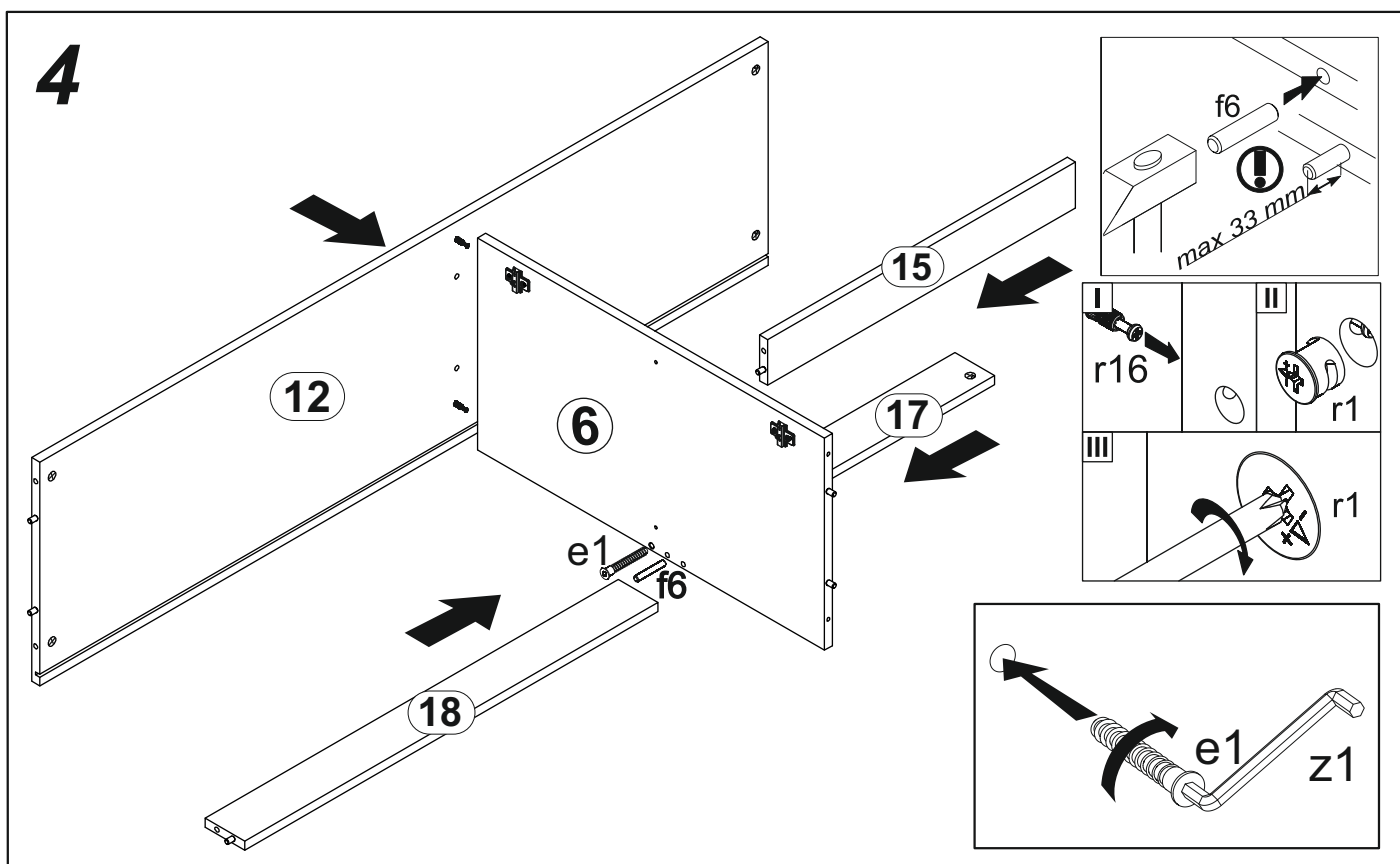


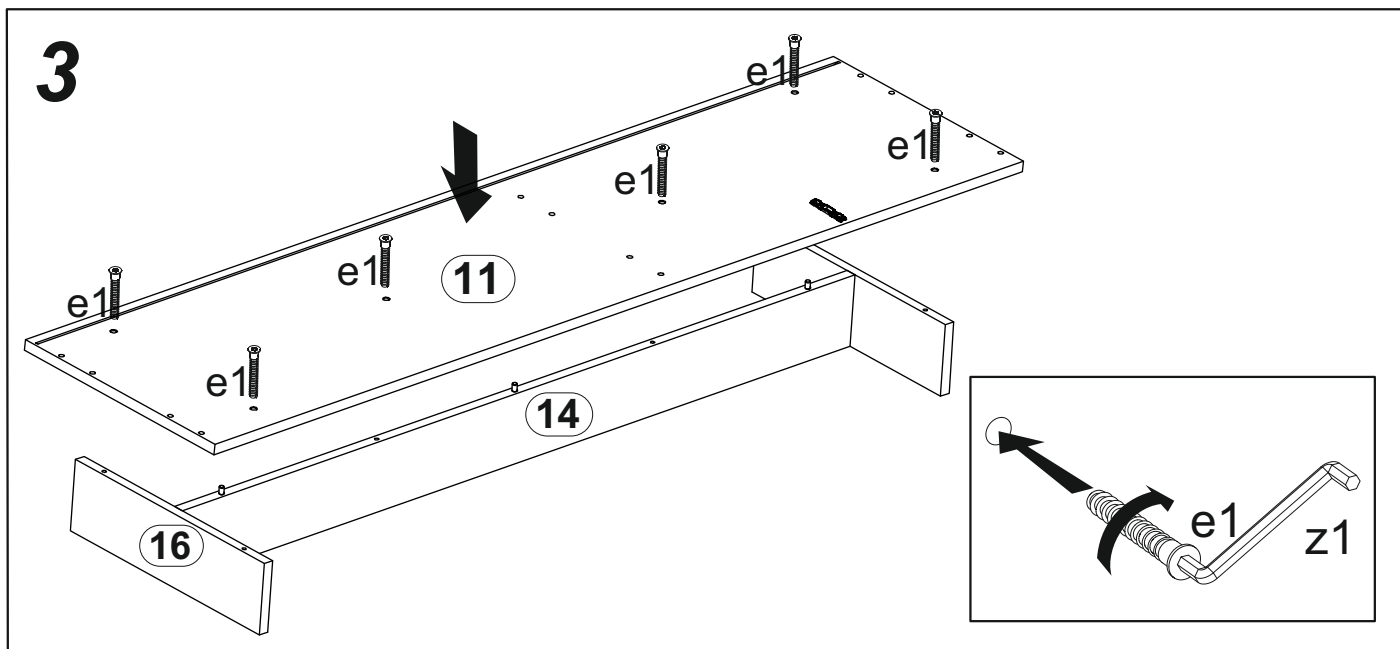

A	B	C	D
1	DO1-001	735	375
2	DO1-002	735	375
3	DO1-003	735	100
4	DO1-101	719	390
5	DO1-102	719	390
6	DO1-103	698	370
7	DO1-551	350	170
8	DO1-552	350	170
9	DO1-553	561	170
10	DO1-004	640	243
11	DO1-201	1500	390

A	B	C	D
12	DO1-301	1467	390
13	DO1-303	832	355
14	DO1-401	1248	110
15	DO1-402	619	80
16	DO1-403	388	110
17	DO1-407	619	80
18	DO1-408	832	80
19	DO1-901	576	349
20	DO1-902	1481	388
21	DO1-903	1481	322

2x a44	2x b19	2x a68	2x b33	8x $\phi 3,5 \times 15$ mm p51	32x $\phi 15 \times 12$ mm #16 r1	24x 20/9 r16
1x $\phi 3,5 \times 16$ mm p38	8x l1	1x n26/1	22x $\phi 20$ s100	4x $\phi 3 \times 12$ mm p54	2x z100/1^1	2x z100/1^2
4x $\phi 5 \times 17$ mm d1	4x r10	14x $\phi 7 \times 50$ mm e1	3x $\phi 14$ s103	2x z100/1^3	2x z100/1^4	
22x l2	1x z1	23x $\phi 8 \times 30$ mm f1	4x $\phi 8 \times 50$ mm f6	5x k1	7x 20x13x3,5 n108	7x $\phi 2,9 \times 16$ mm p55
18x $\phi 3,5 \times 12$ mm p140	12x $\phi 5 \times 50$ mm e32	18x $\phi 6 \times 13$ mm e3	6x 350 w207/1	6x 350 w207/2	4x СИЛИКОН o21	1x 1x

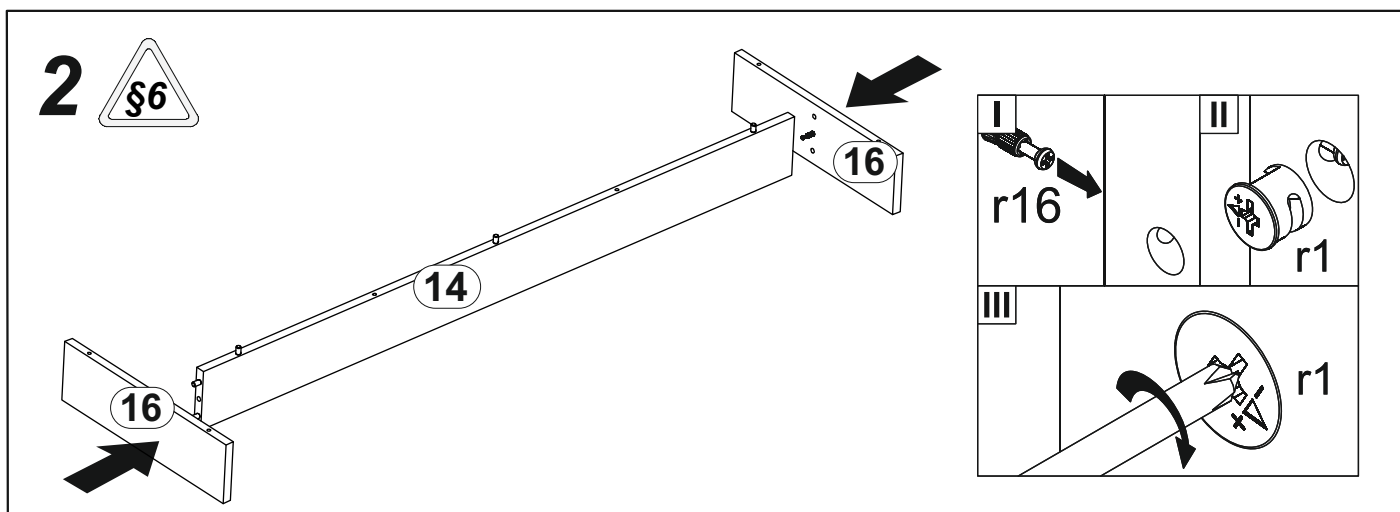

5

Diagram illustrating the assembly of the wardrobe frame, specifically the attachment of the side panel (4) and the top rail (15) to the main frame (6, 12, 17, 18). The diagram shows the side panel (4) being attached to the main frame (6, 12, 17, 18) using screws (r16) and the top rail (15) being attached to the side panel (4) using screws (r1).

Callout details:

- I. Inserting screw r16 into the top rail.
- II. Inserting screw r1 into the side panel.
- III. Tightening the screw r1.

Warning: A warning icon (exclamation mark) is present, indicating a critical step or potential damage.

9

