

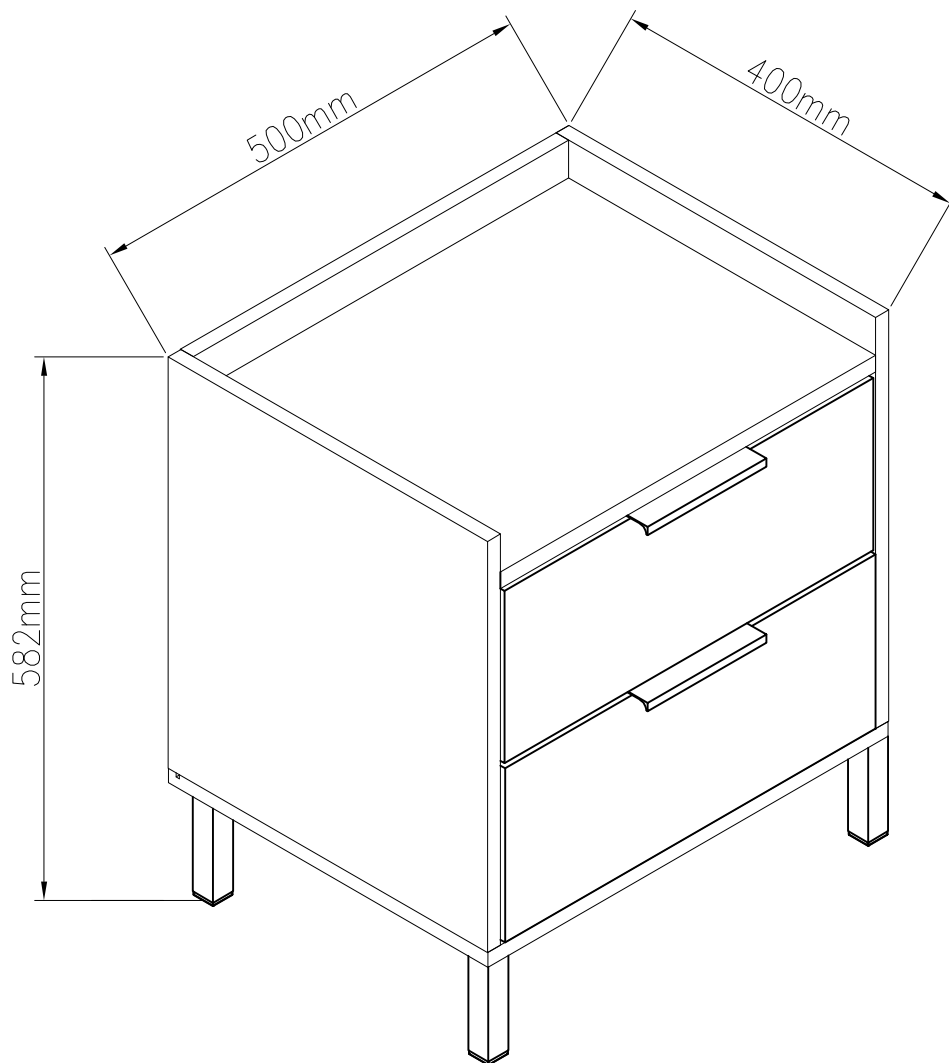
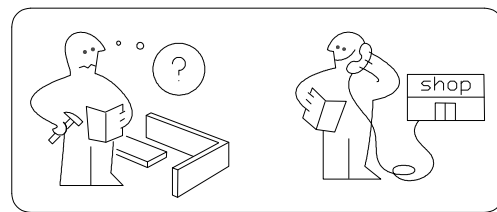
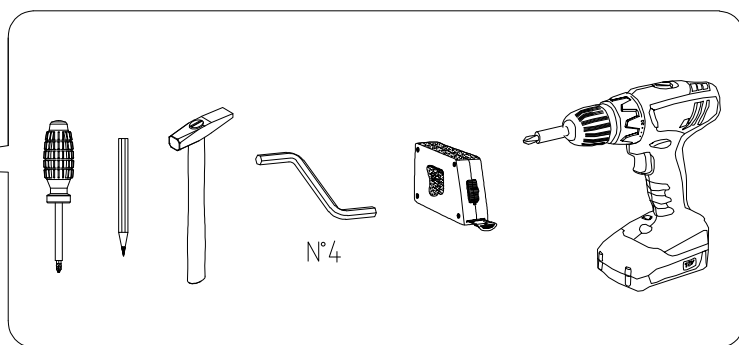
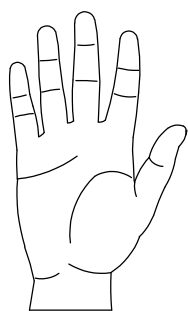






Праліне/Praline



Тумба приліжкова **Bedside cabinet**







 (A1) 8*30mm x8	 (B) ϕ 12mm x15	 (B1) 6,3*50mm x15
 (C1) 6*43mm x12	 (D) ϕ 20mm x12	 (D1) 15/15 x12
 (E4) 3*15mm x4	 (E6) 3,5*16mm x40	 (H2) RV-8 x18
 (I33) L- 128mm x2	 (K38) h-120mm x4	 (M14) L- 350mm x2

No	a*b	x	N°→...	No	a*b	x	N°→...
1/1	445x400	1	1/1	7/1	350x150	2	1/1
1/2	445x400	1	1/1	7/2	350x150	2	1/1
2	468x384	1	1/1	8	409x150	2	1/1
3	500x400	1	1/1	9	418x343	2	1/1
4	60x468	1	1/1	10	390x477	1	1/1
5	188x462	1	1/1				
6	188x462	1	1/1			1	1/1

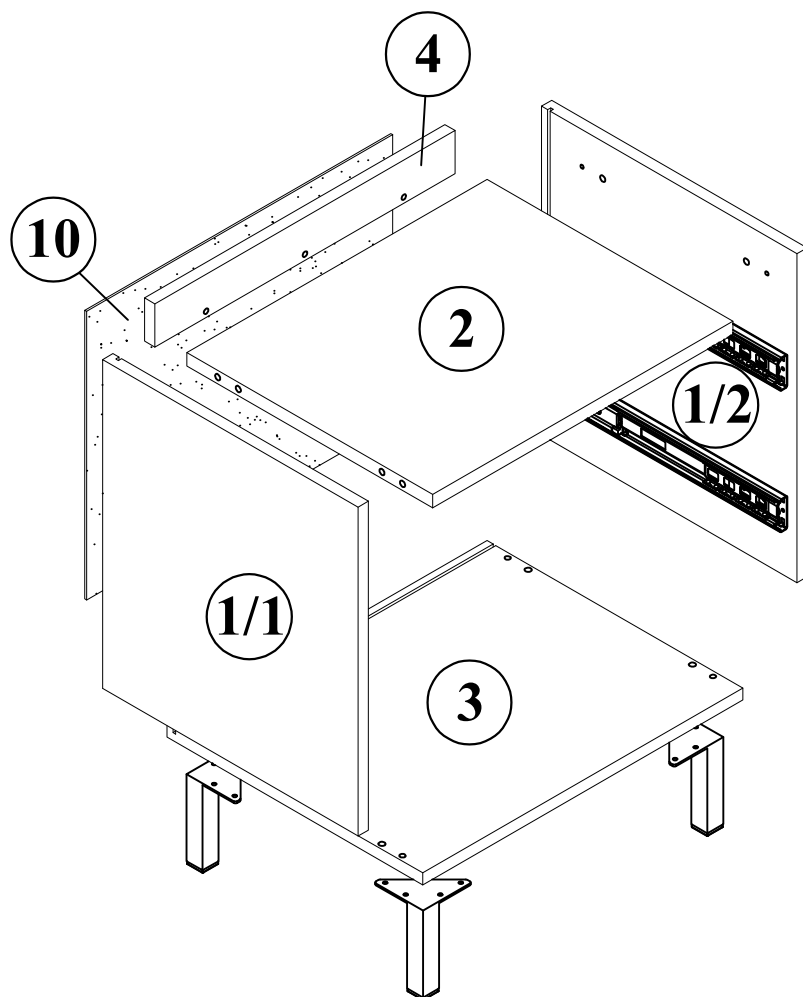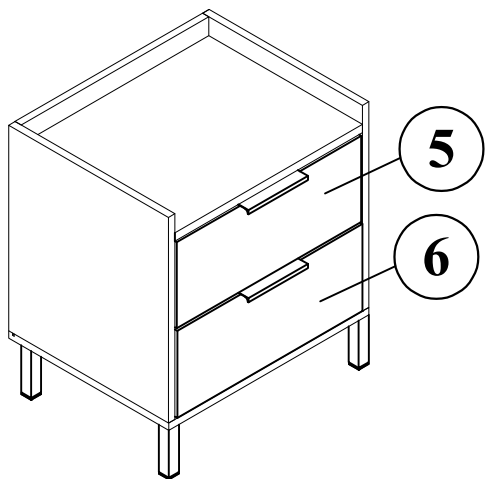


x2

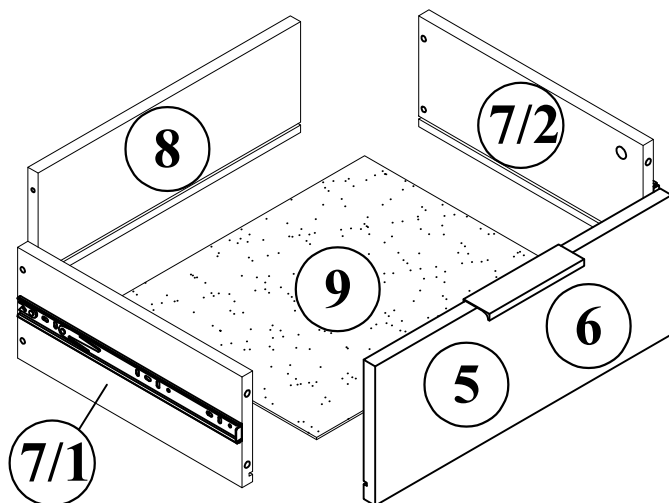


 (A1) 8*30mm x4	 (D1) 15/15 x4
---	--


2


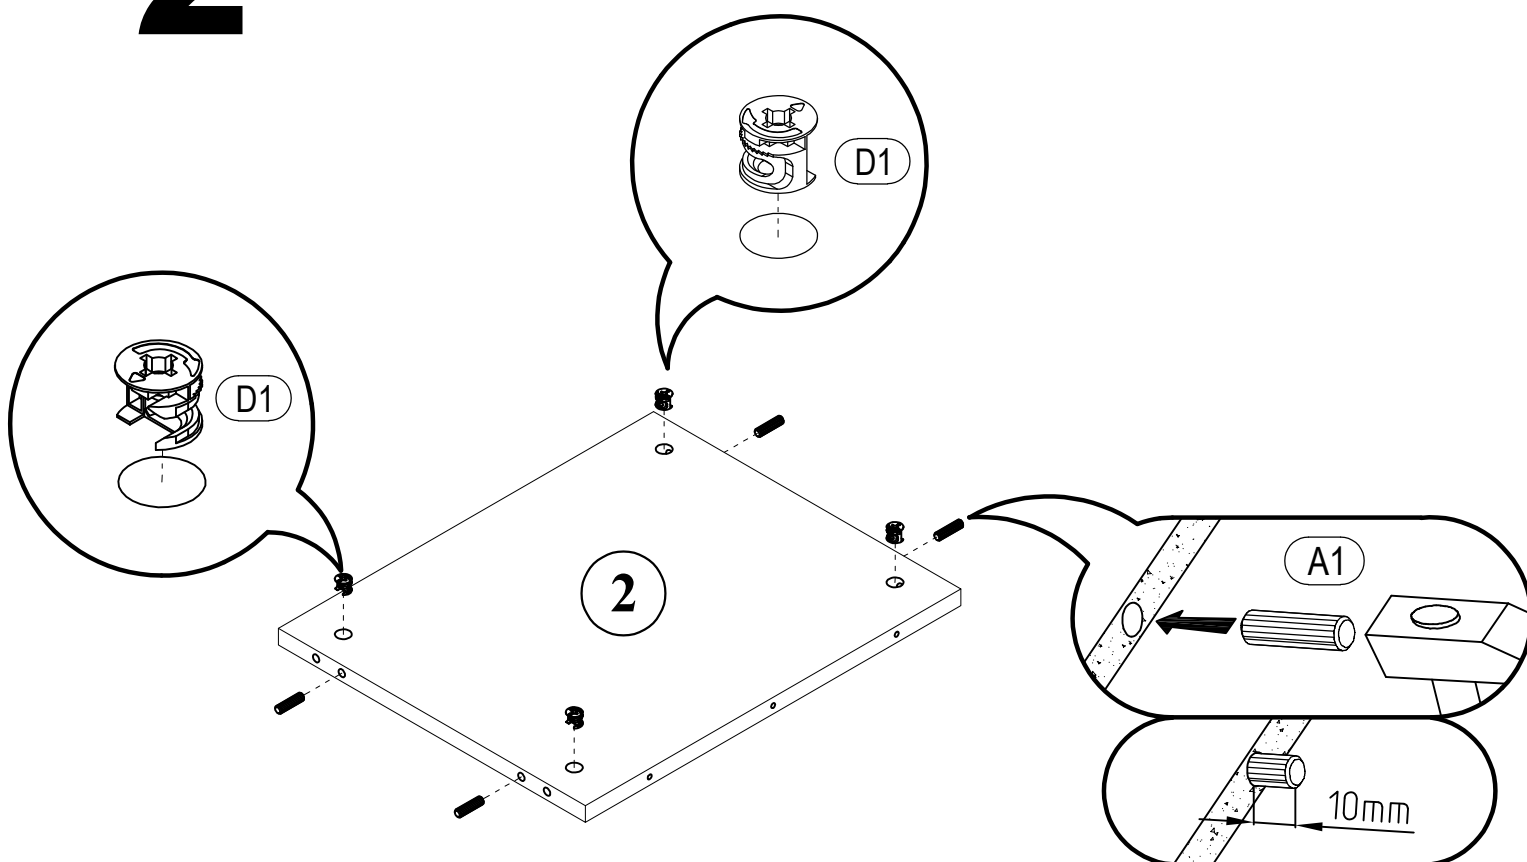



3

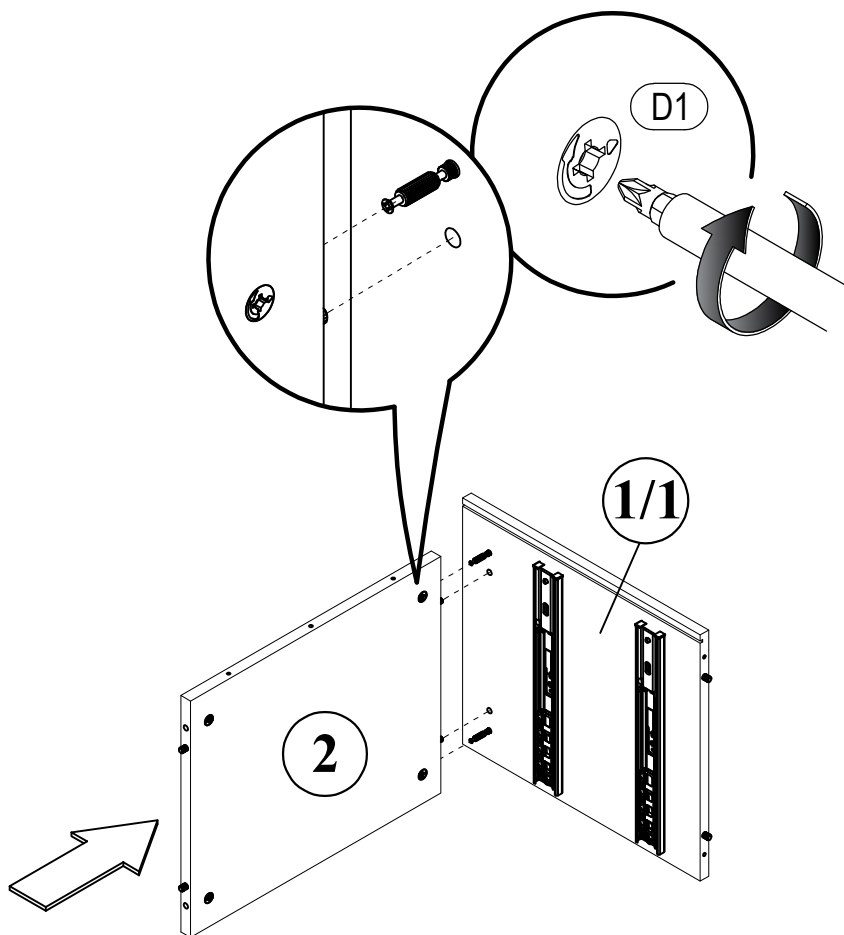





4

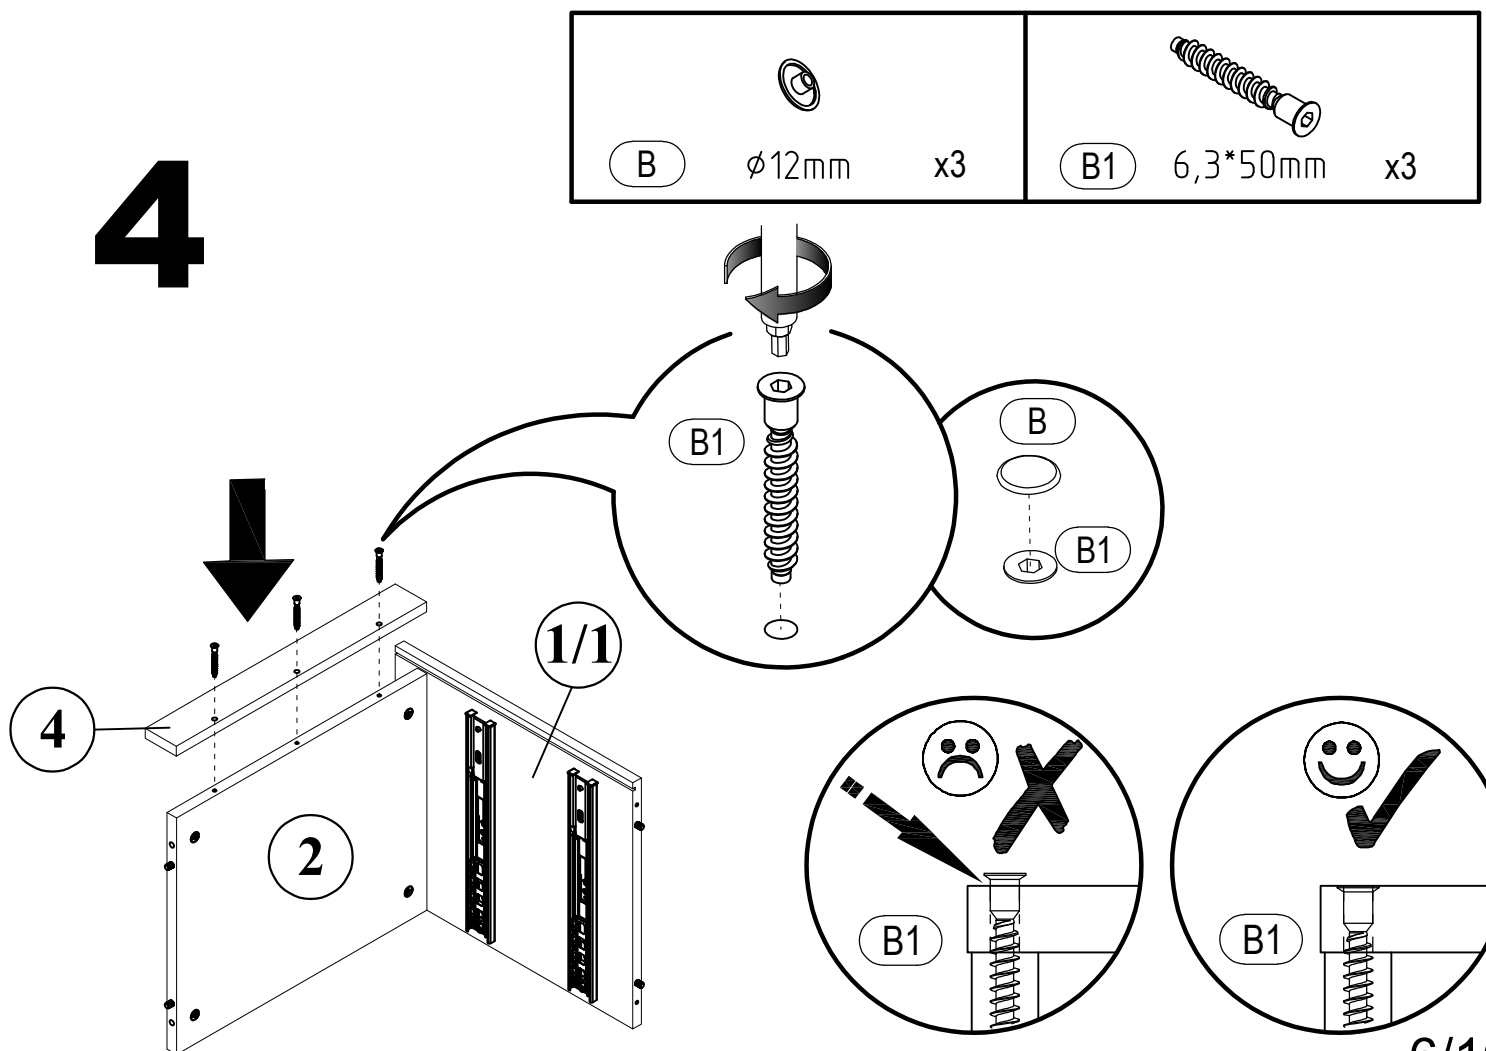


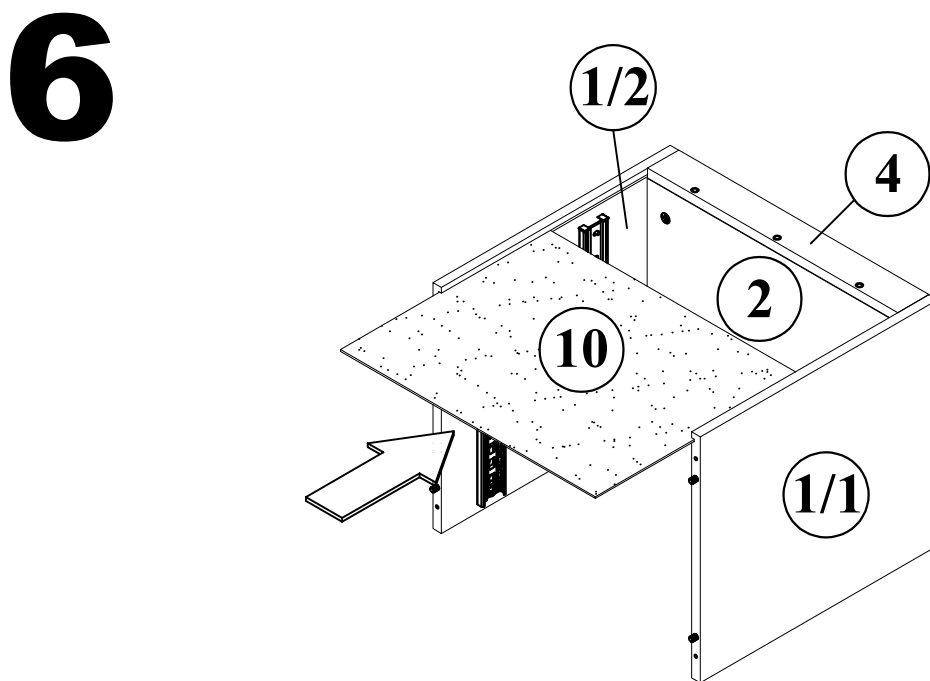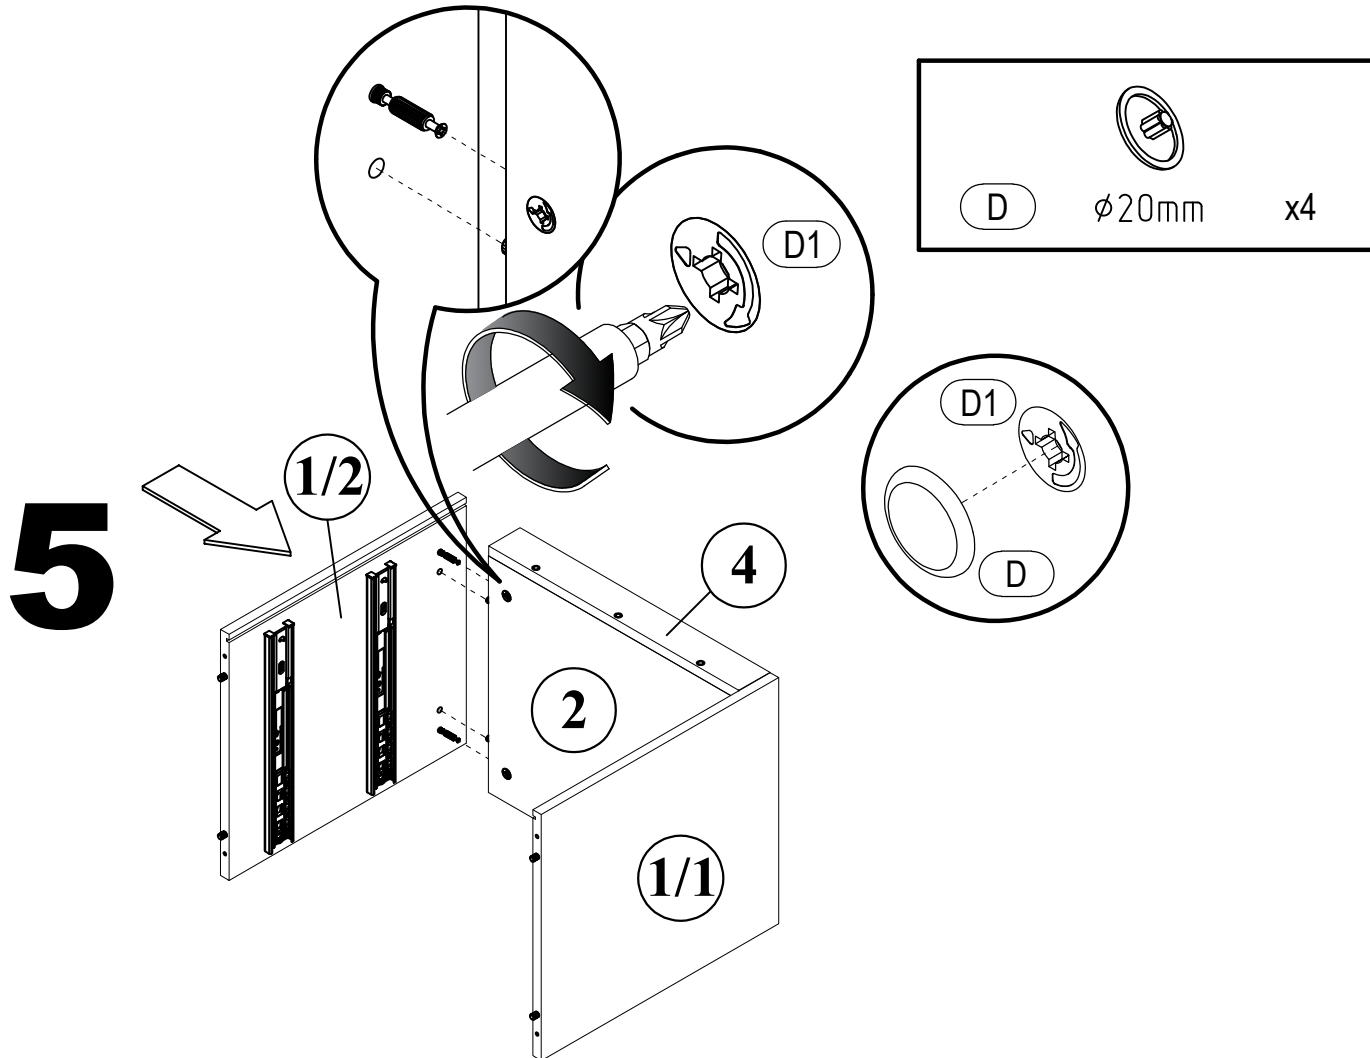


 (B) $\varnothing 12\text{mm}$ x4	 (B1) 6,3*50mm x4
--	---


7

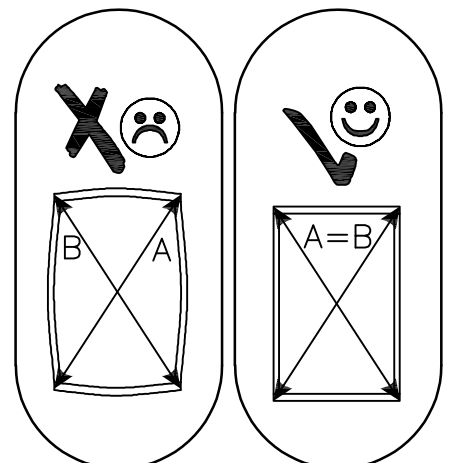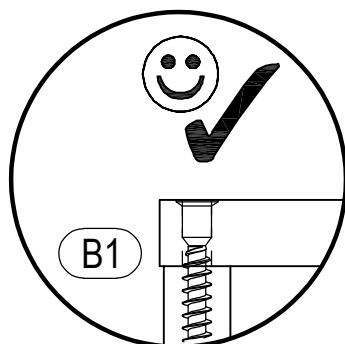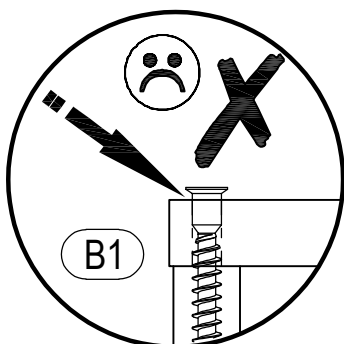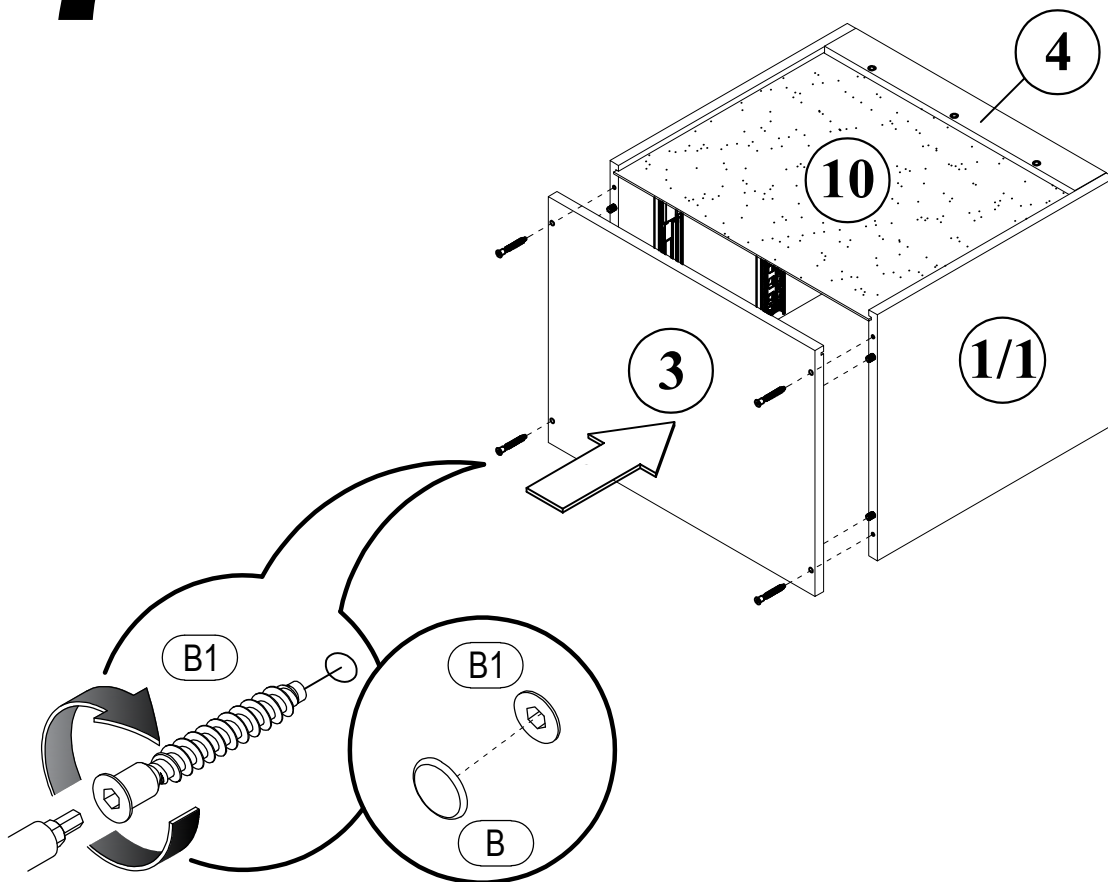

 (E6) 3,5*16mm x16	 (H2) RV-8 x6	 (K38) h-120mm x4
---	--	--

8



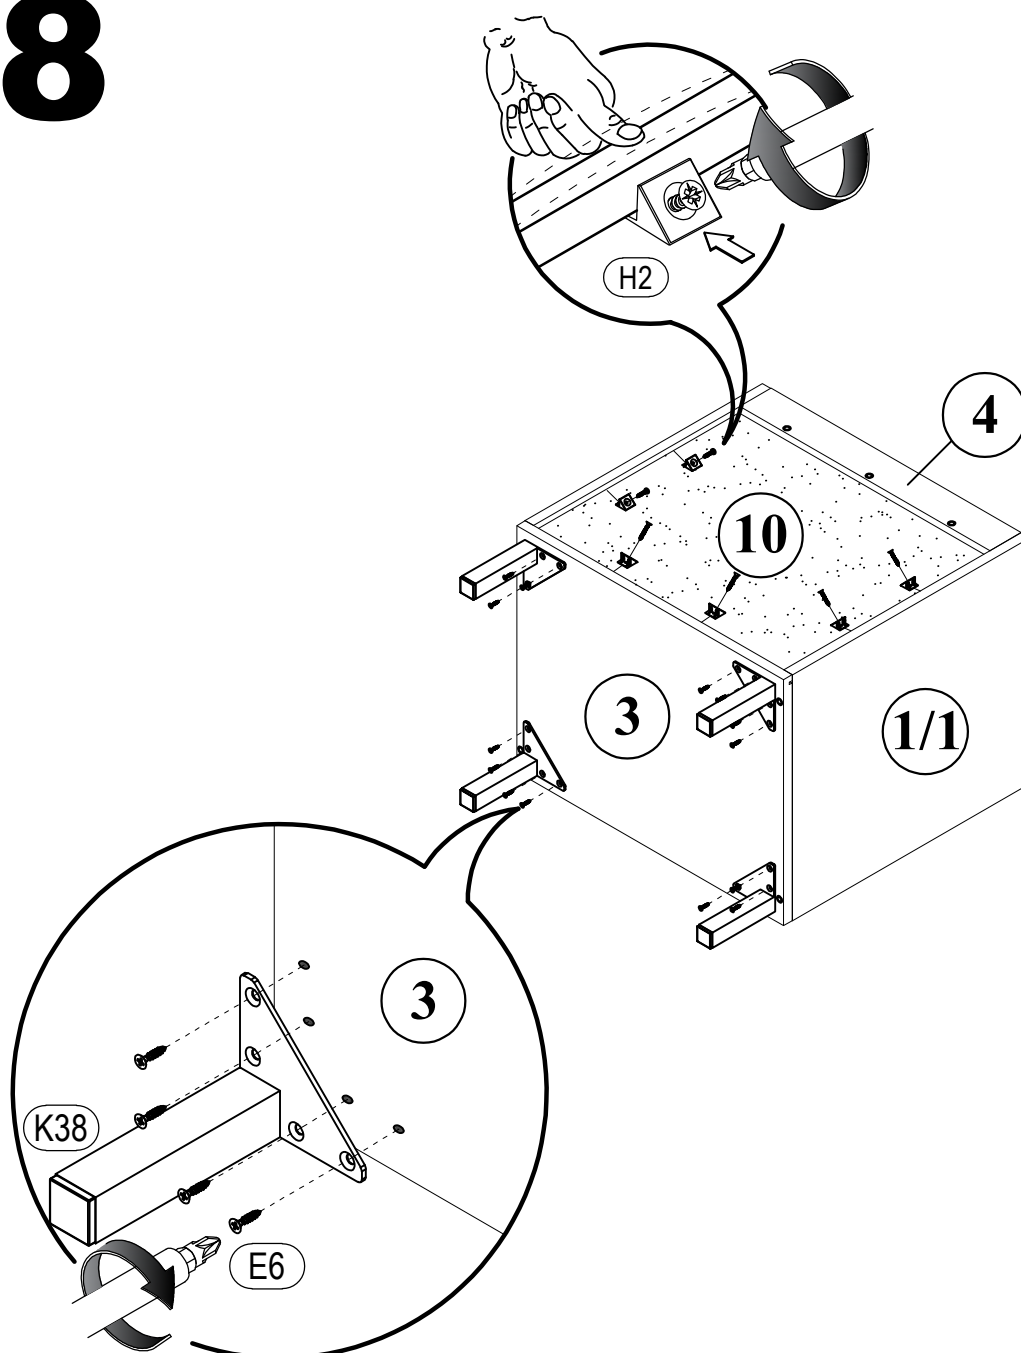


 (B) $\varnothing 12\text{mm}$ x8	 (B1) 6,3*50mm x8	 (D1) 15/15 x8
---	---	--

9



9.1

x2

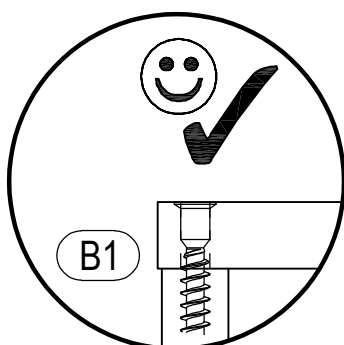
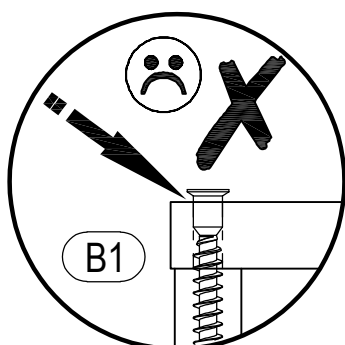
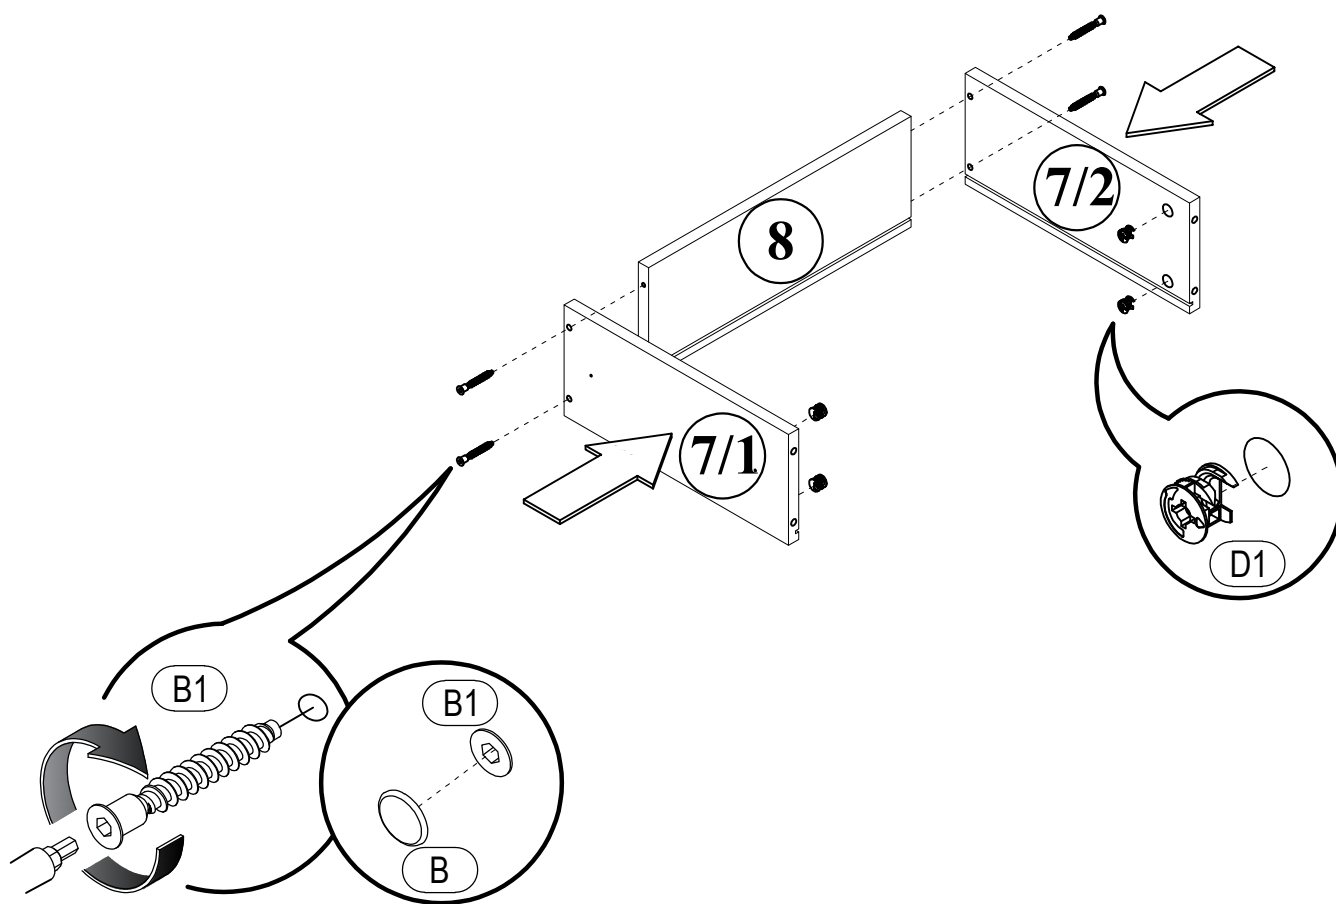


9


9.2
x2

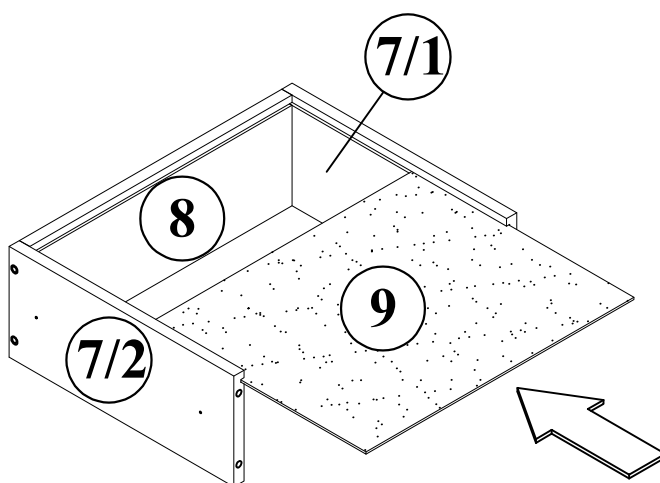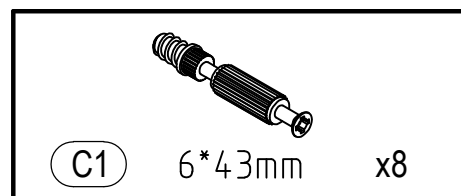


9.3
x2

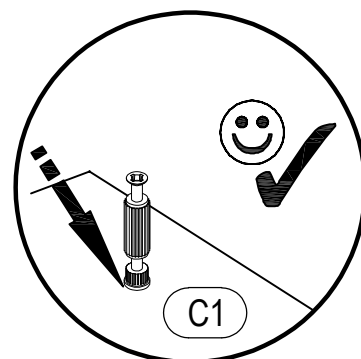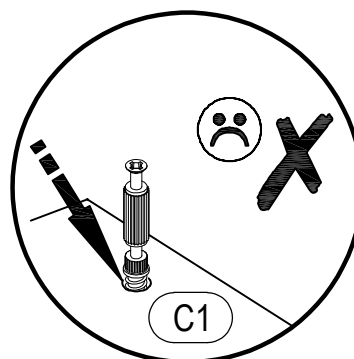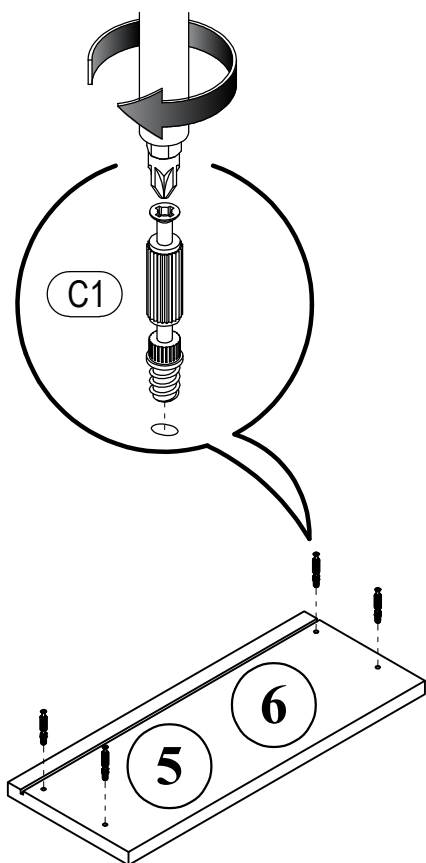


9


 (D) $\phi 20\text{mm}$ x8	 (H2) RV-8 x12
--	--

9.4
x2

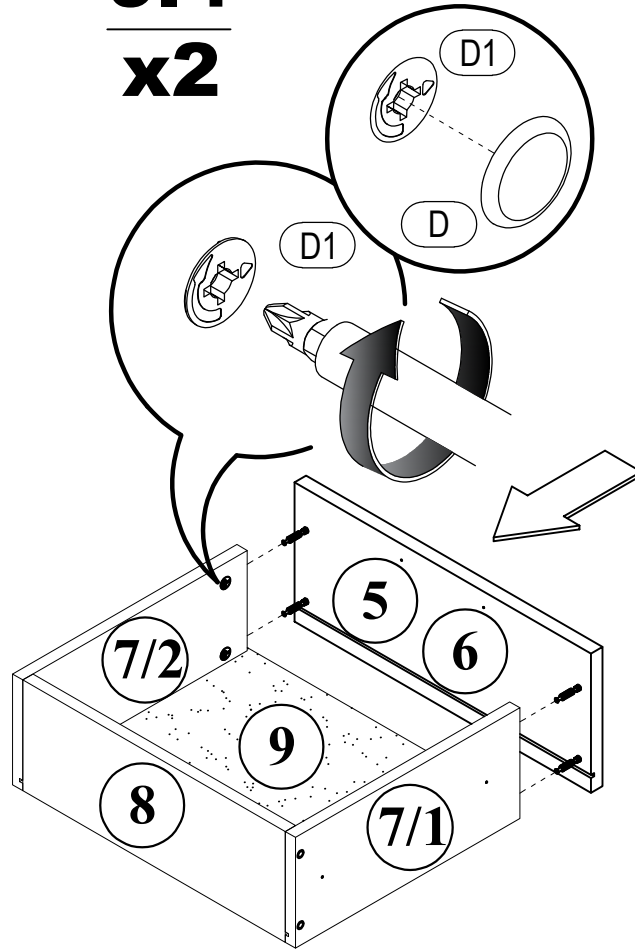


9.5
x2

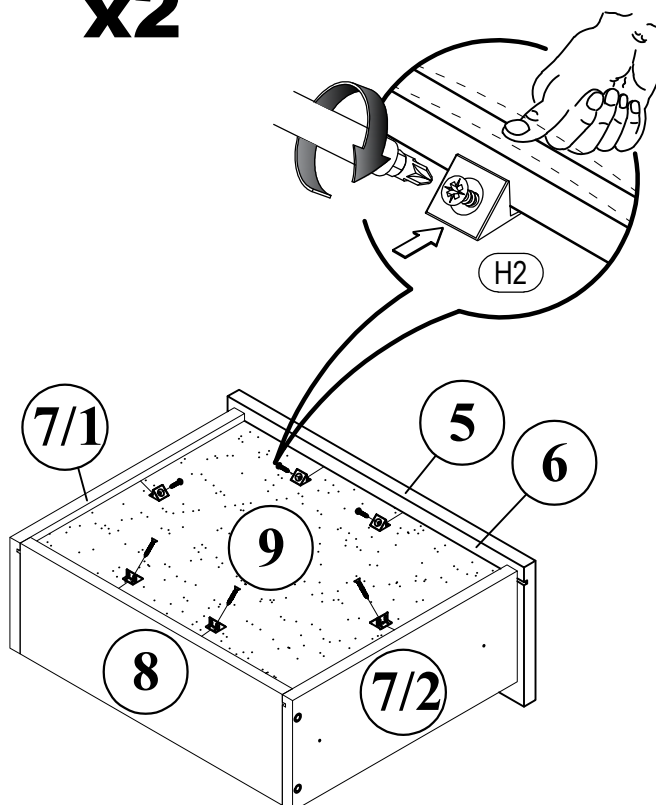



 (E4) 3*15mm x4	 (E6) 3,5*16mm x8	 (I33) L- 128mm x2
 (M14) L- 350 x2		

9

9.6
x2

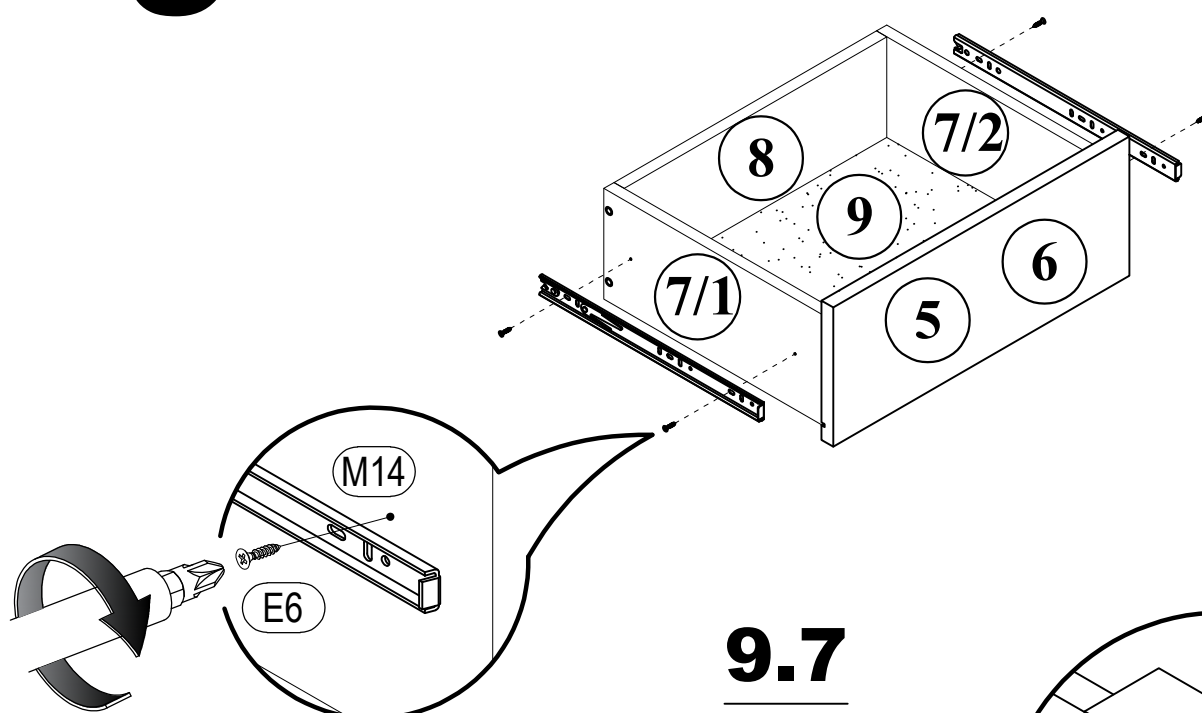

9.7
x2

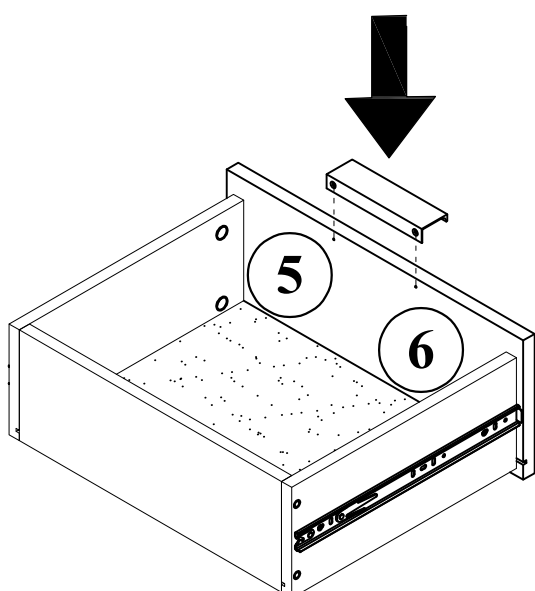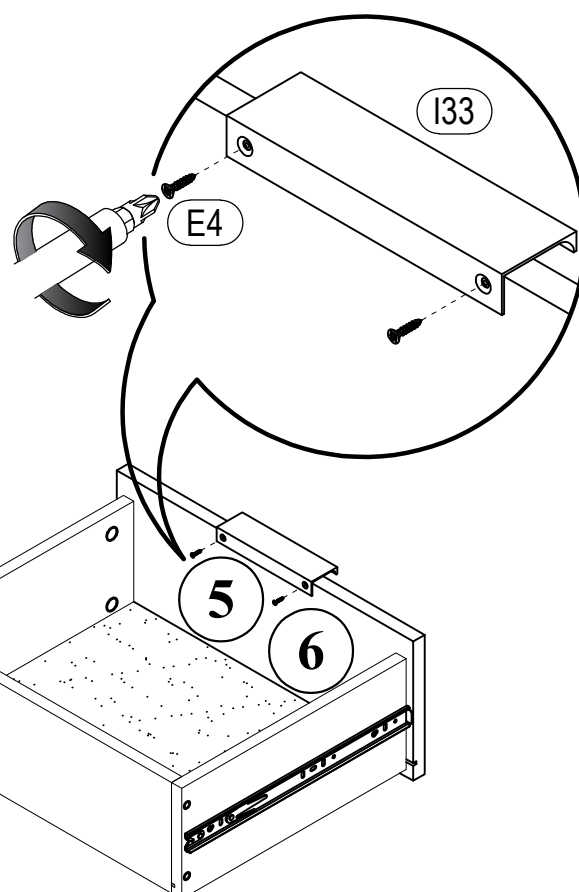

10

