

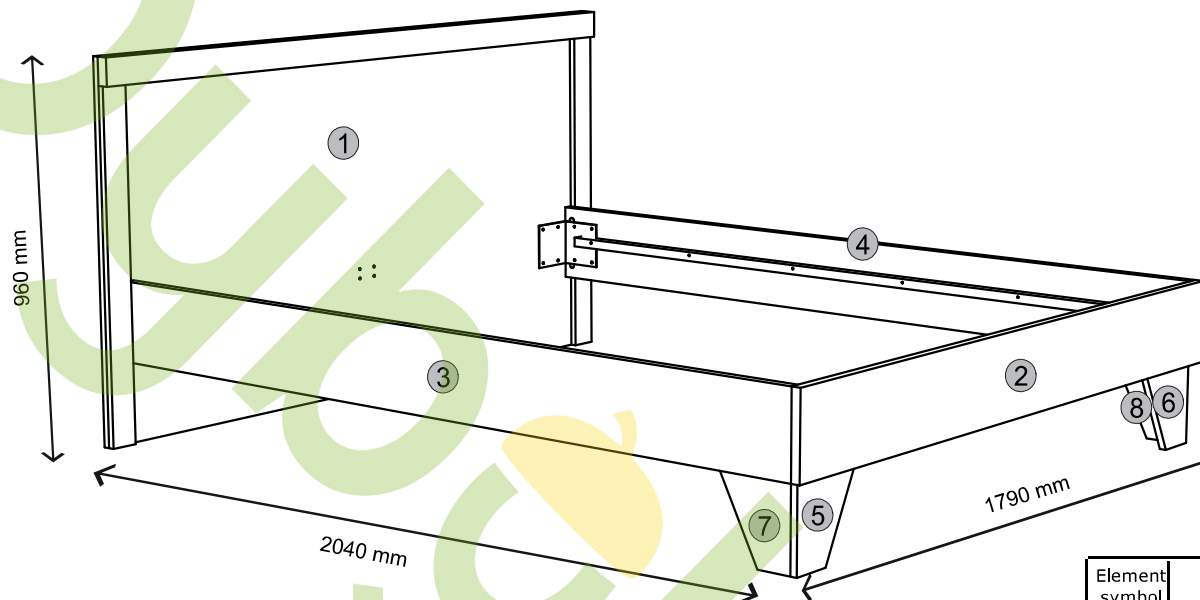
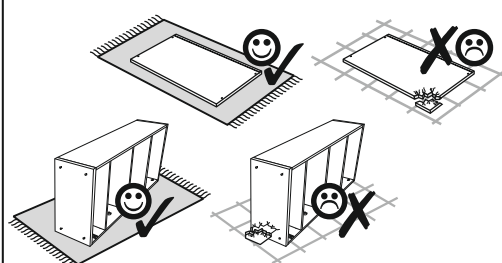
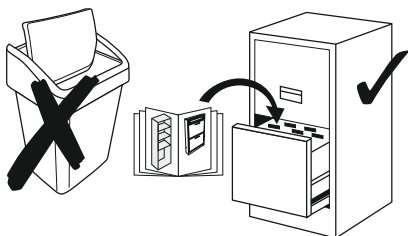
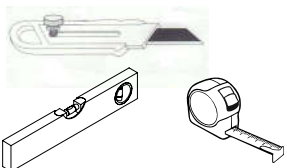










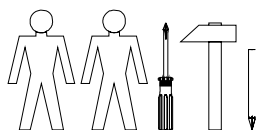


Instalation manual

LAWENDA: Bed 160

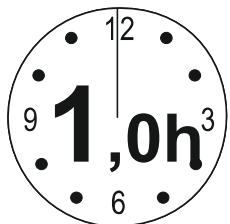


Element symbol	Dimensions				Code	Package
1	950	1786	16	1	L-009	1/1
2	200	1644	22	1	L-010	2/2
3	200	1998	22	1	L-120	2/2
4	200	1998	22	1	L-121	2/2
5	300	200	16	1	L-407	2/2
6	300	200	16	1	L-408	2/2
7	300	184	16	1	L-409	2/2
8	300	184	16	1	L-410	2/2
9	184	184	16	1	L-411	2/2
10	184	184	16	1	L-412	2/2
11	1880	30	25	2		
12	1980	70	27	1		
13	235	70	27	1		
14	786	2000	20	2		




3

Diagram illustrating the assembly of the side panels (5, 6, 7, 8, 9) onto the main body. The panels are secured using screws (r16) and pins (k1). A warning callout indicates that screws should not be inserted into the wrong holes. A dimension of 2-3cm is specified for the placement of the pins (k1).


5

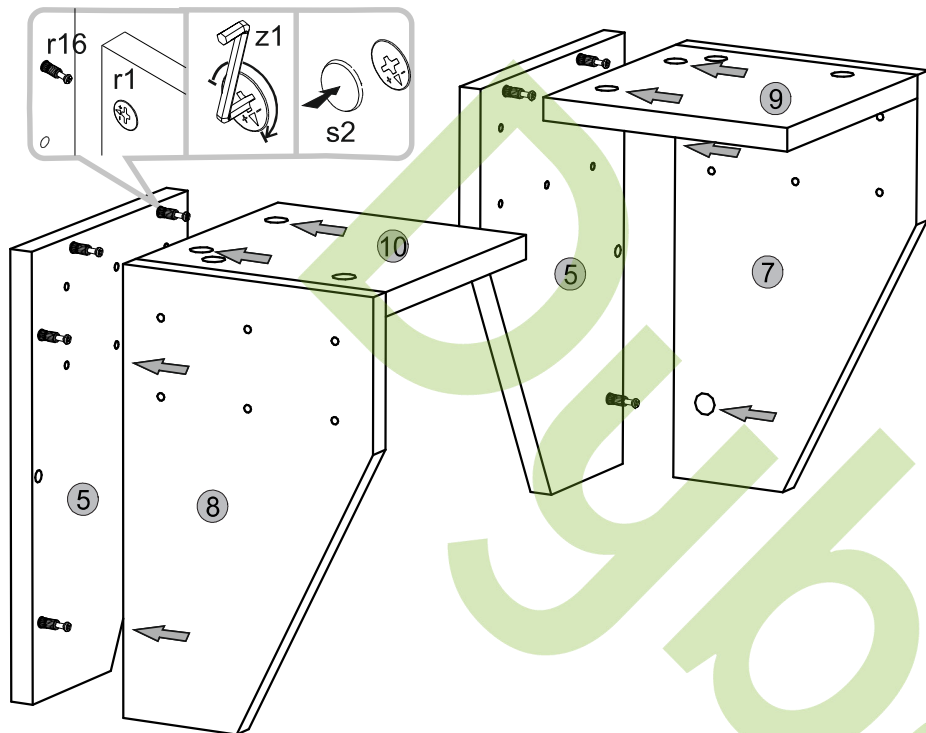


7

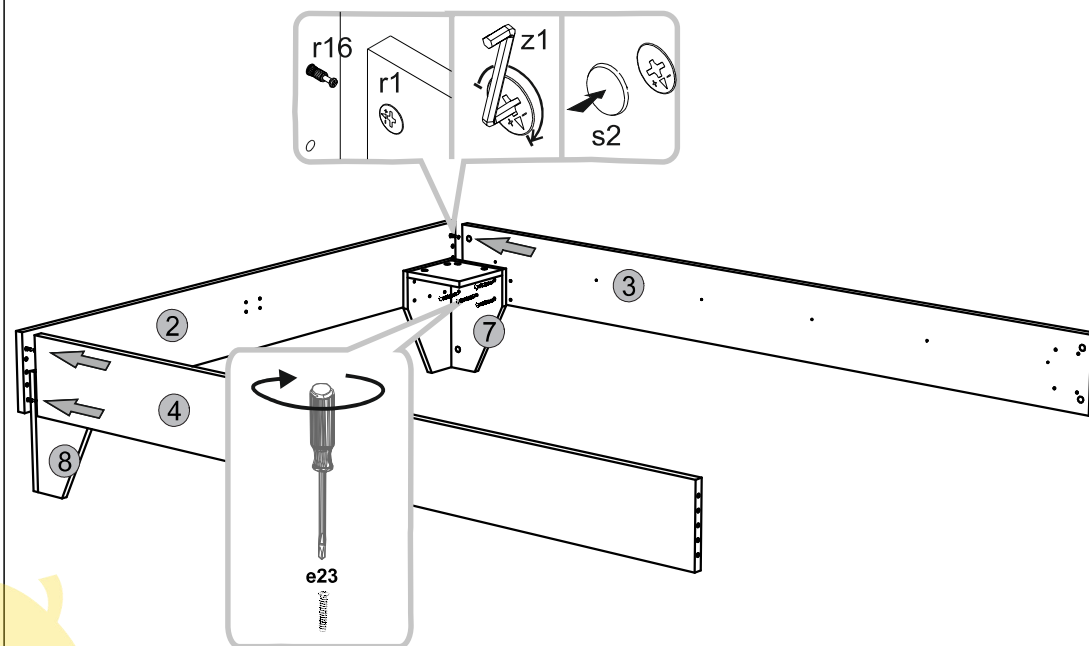


6

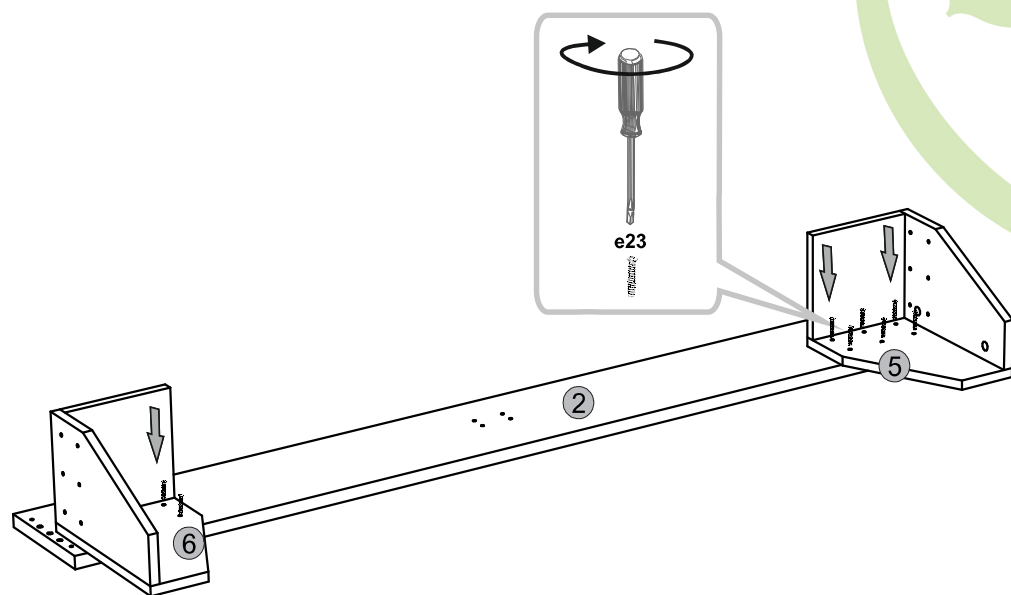


8

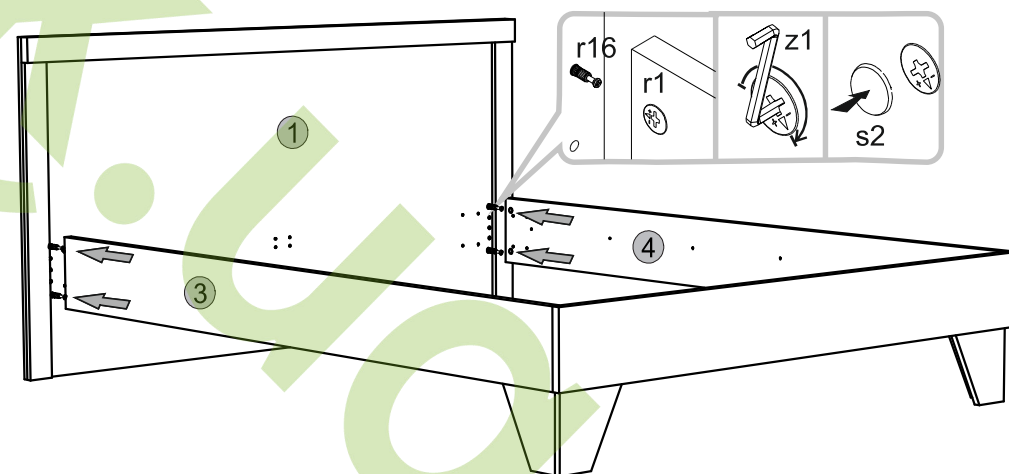


9

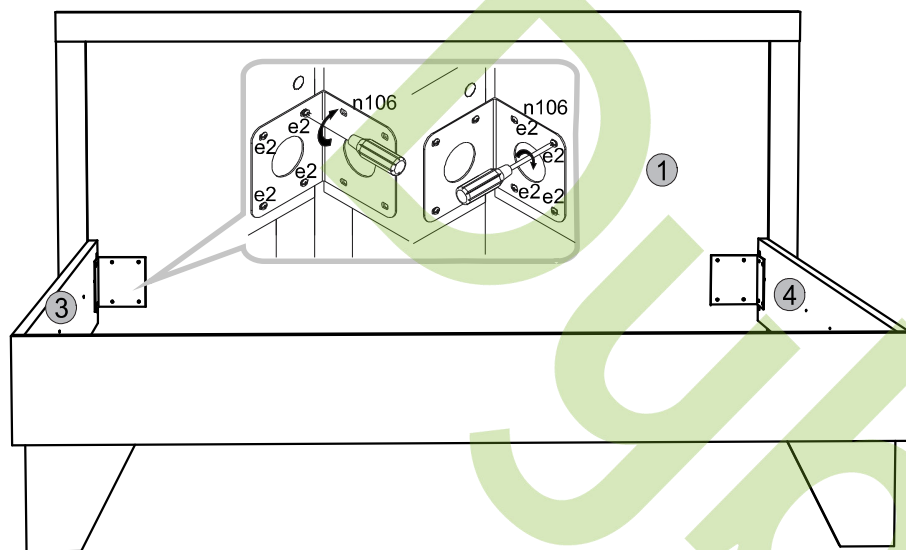

11

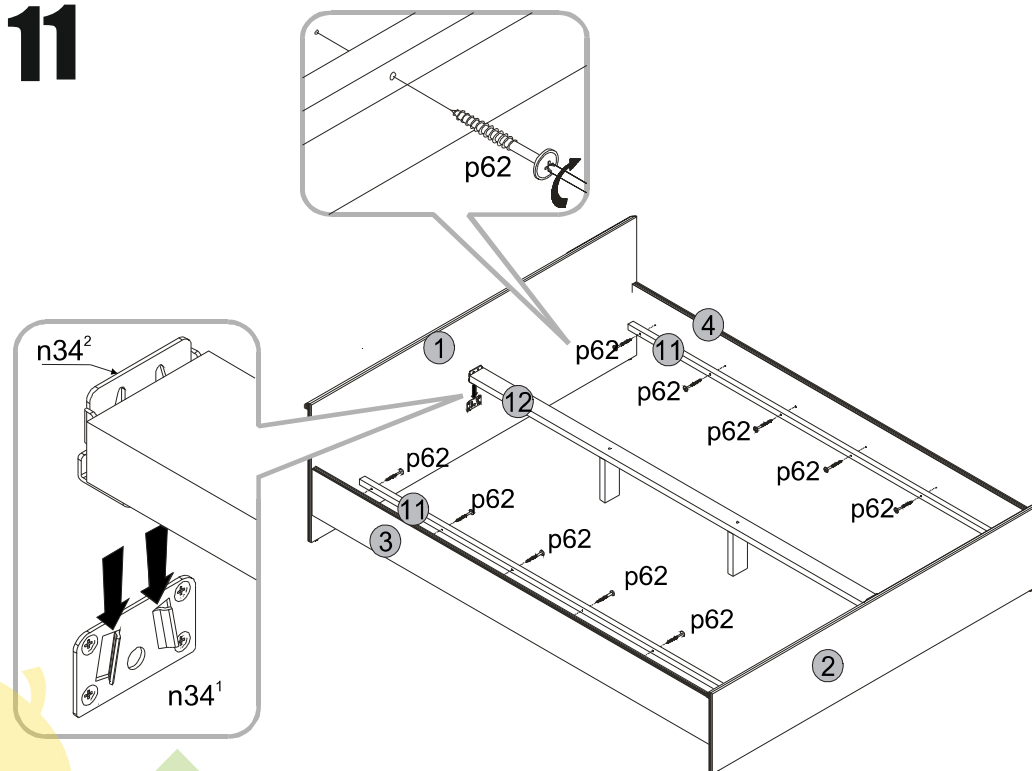

10

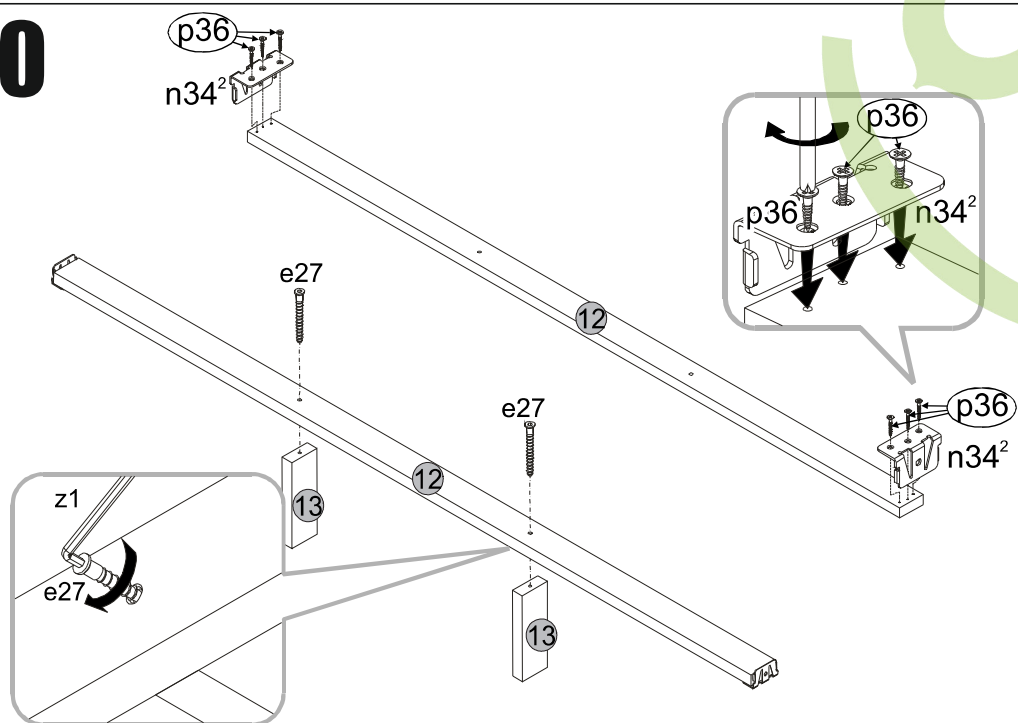

12

