
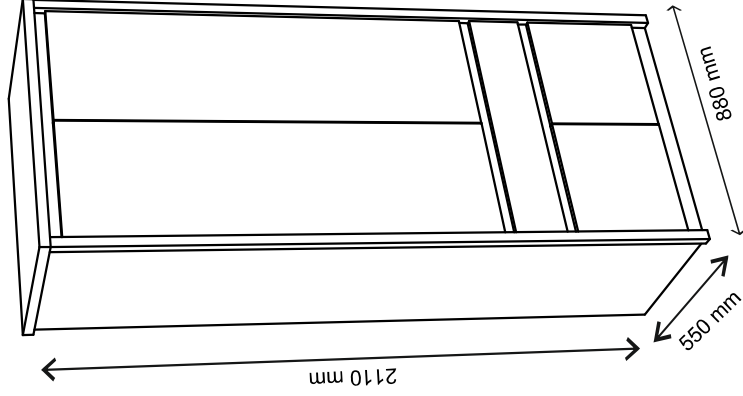
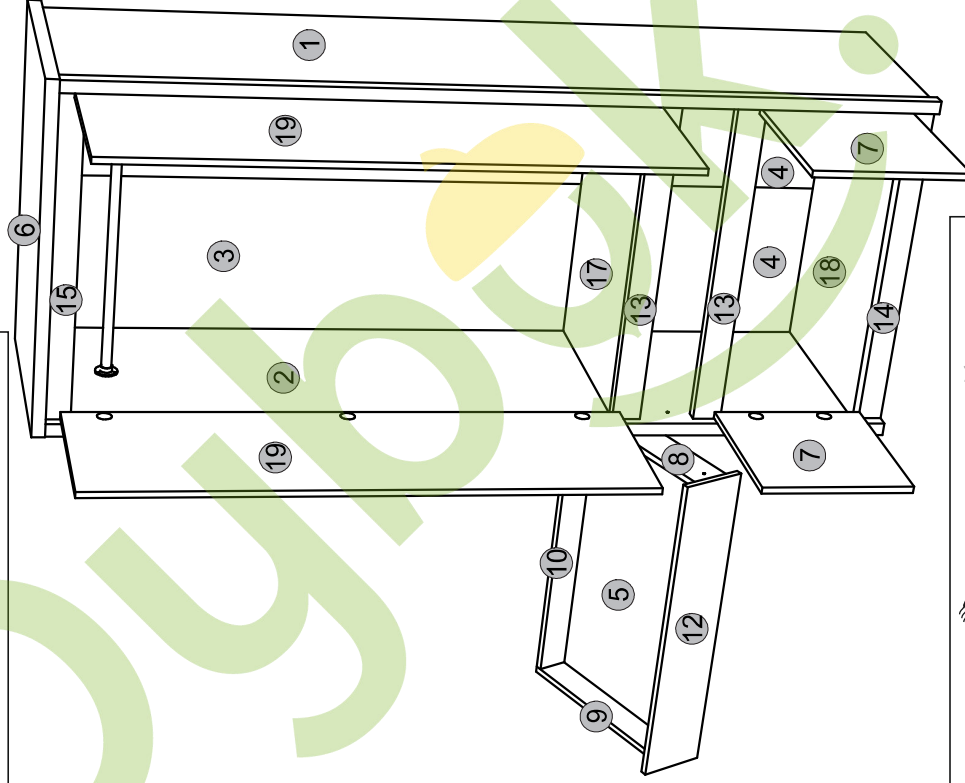
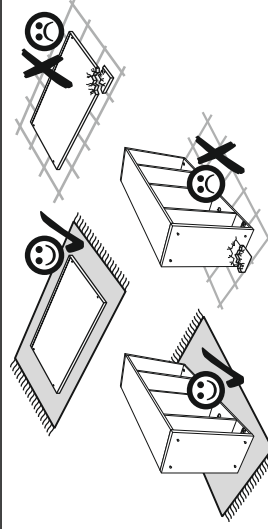
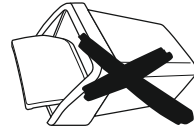
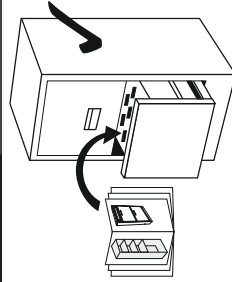
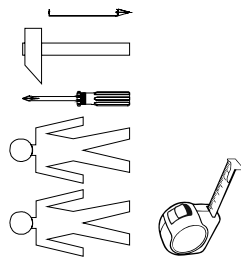
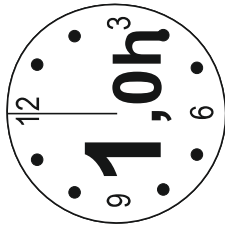


Instalation manual

NORTON: SZF_4D1S

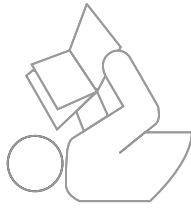


Element symbol	Dimensions				Code	Package
1	2068	548	16/32	1	K-126	1/1
2	2068	548	16/32	1	K-127	1/1
3	1407	415	3	2	K-615	1/1
4	626	415	3	2	K-616	1/1
5	771	482	3	1	K-617	1/1
6	880	550	16/32/32	1	K-208	2/2
7	376	403	16	2	K-008	4/4
8	500	100	16	1	K-521	2/2
9	500	100	16	1	K-522	2/2
10	757	100	16	1	K-523	2/2
11	757	100	16	1	K-524	2/2
12	170	808	16	1	K-013	4/4
13	70	814	30	2	K-417	2/2
14	60	814	16	1	K-418	2/2
15	60	814	16	1	K-419	2/2
16	60	468	16	1	K-420	2/2
17	814	489	16	1	K-318	2/2
18	814	519	16	1	K-319	2/2
19	1354	403	16	2	K-009	3/3


1x	f3	1x	n14	1x	p17	16x	p21	6x	s1	6x	p52	4x	e1	80x	k1	10x	b119
1x	10 mm	1x	10 mm	1x	10 mm	16x	10 mm	6x	10 mm	6x	10 mm	4x	10 mm	80x	10 mm	10x	10 mm




1

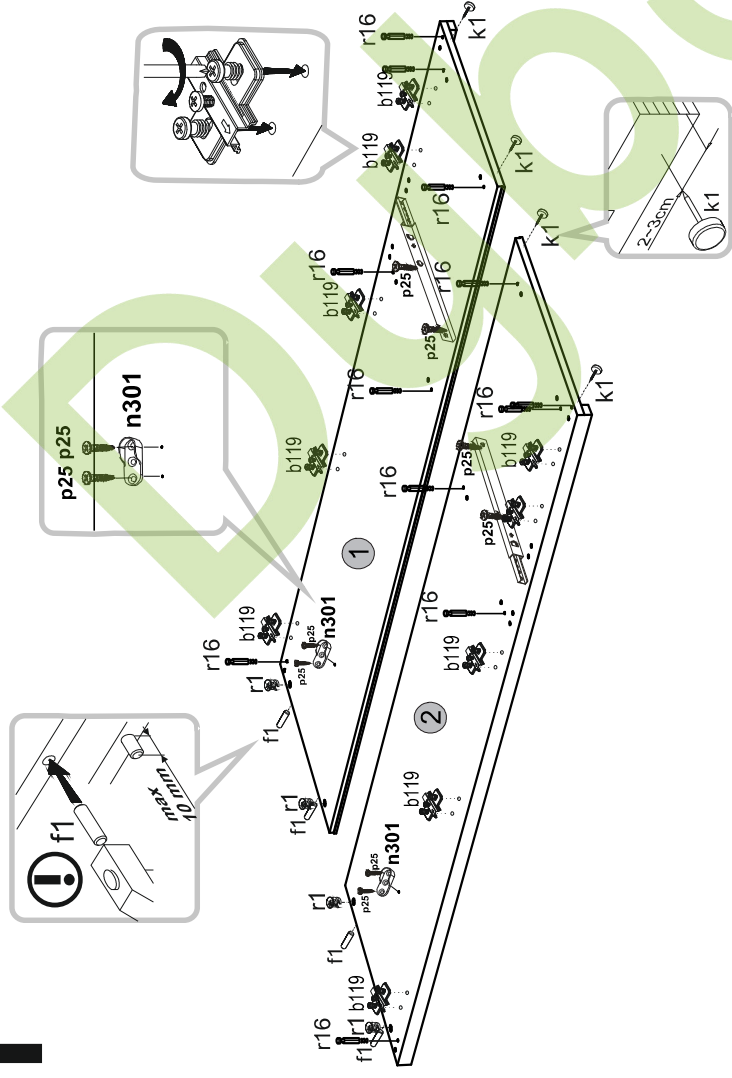


3

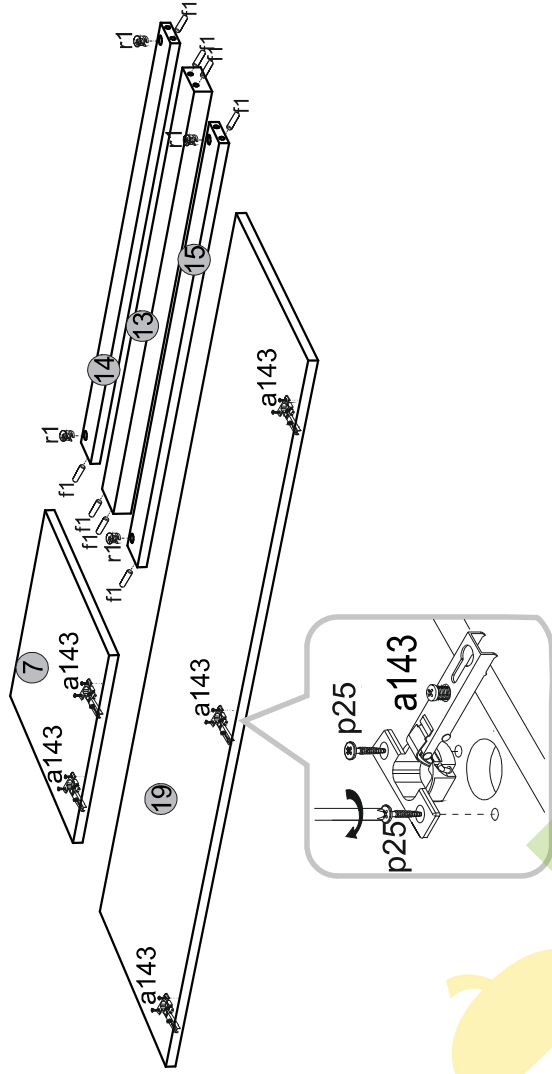


2

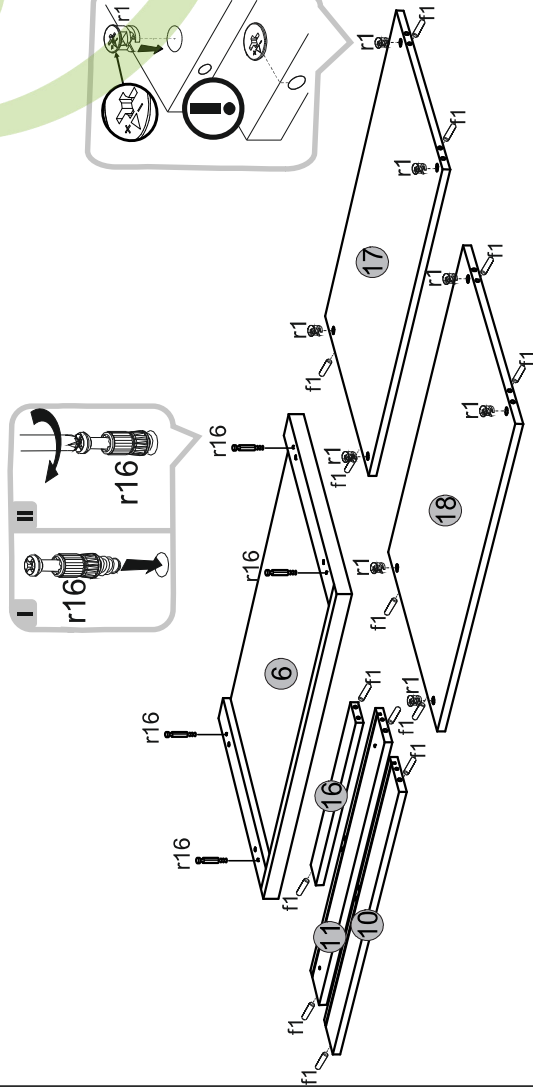



4

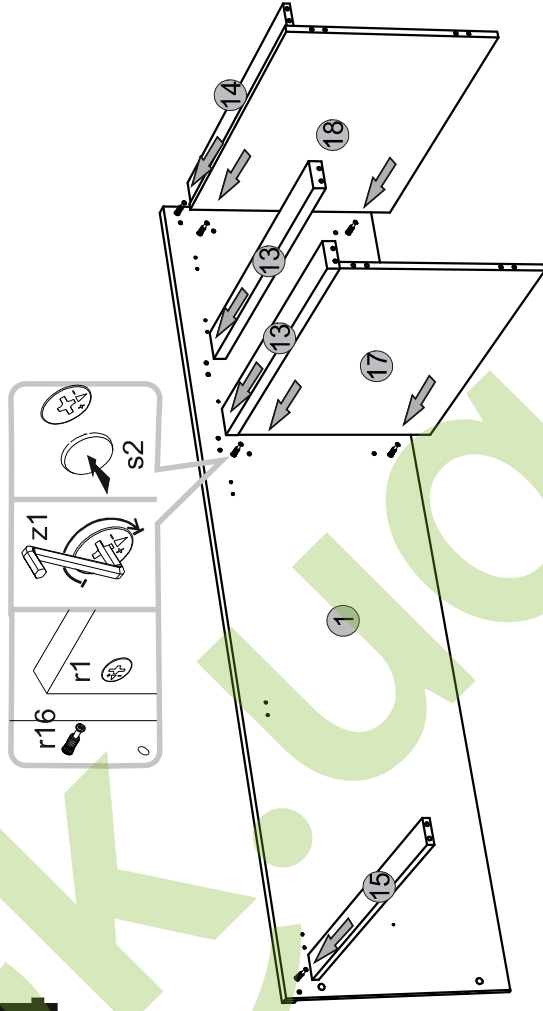



5

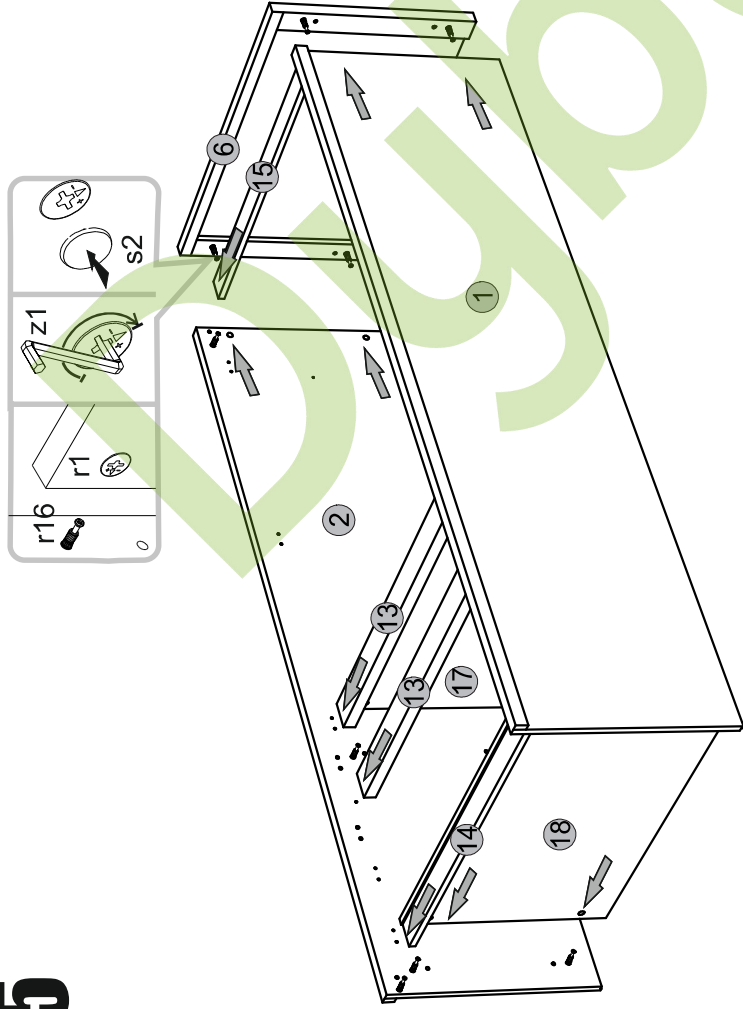



7

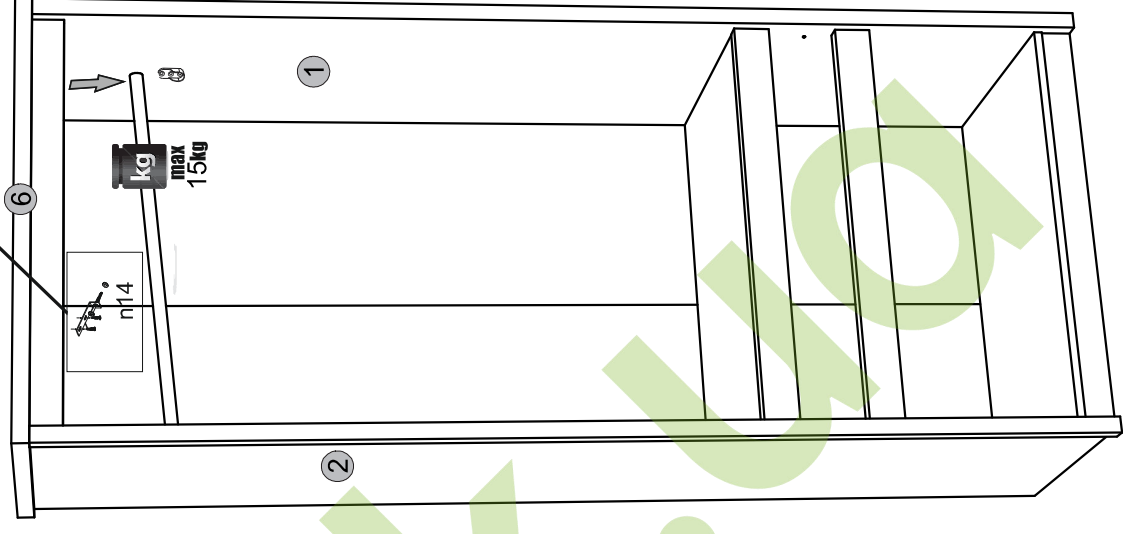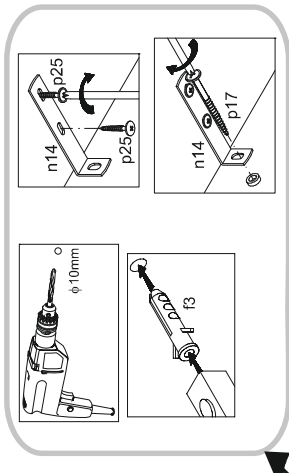

6

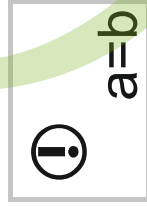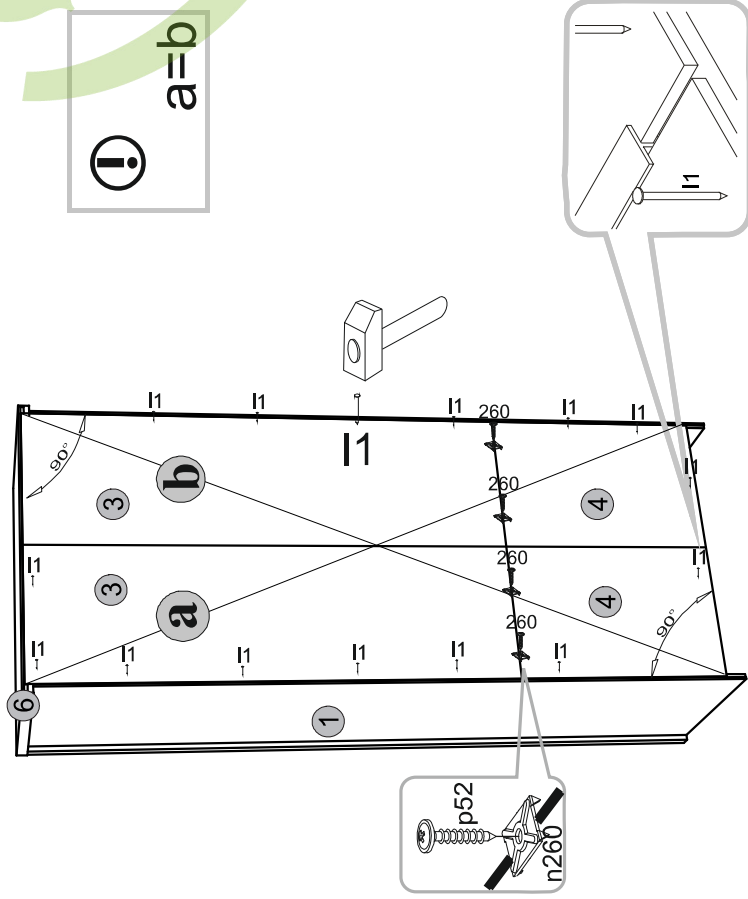

8

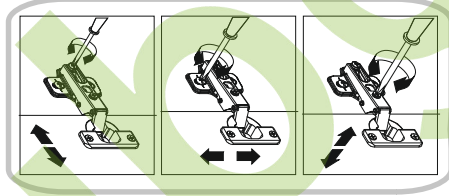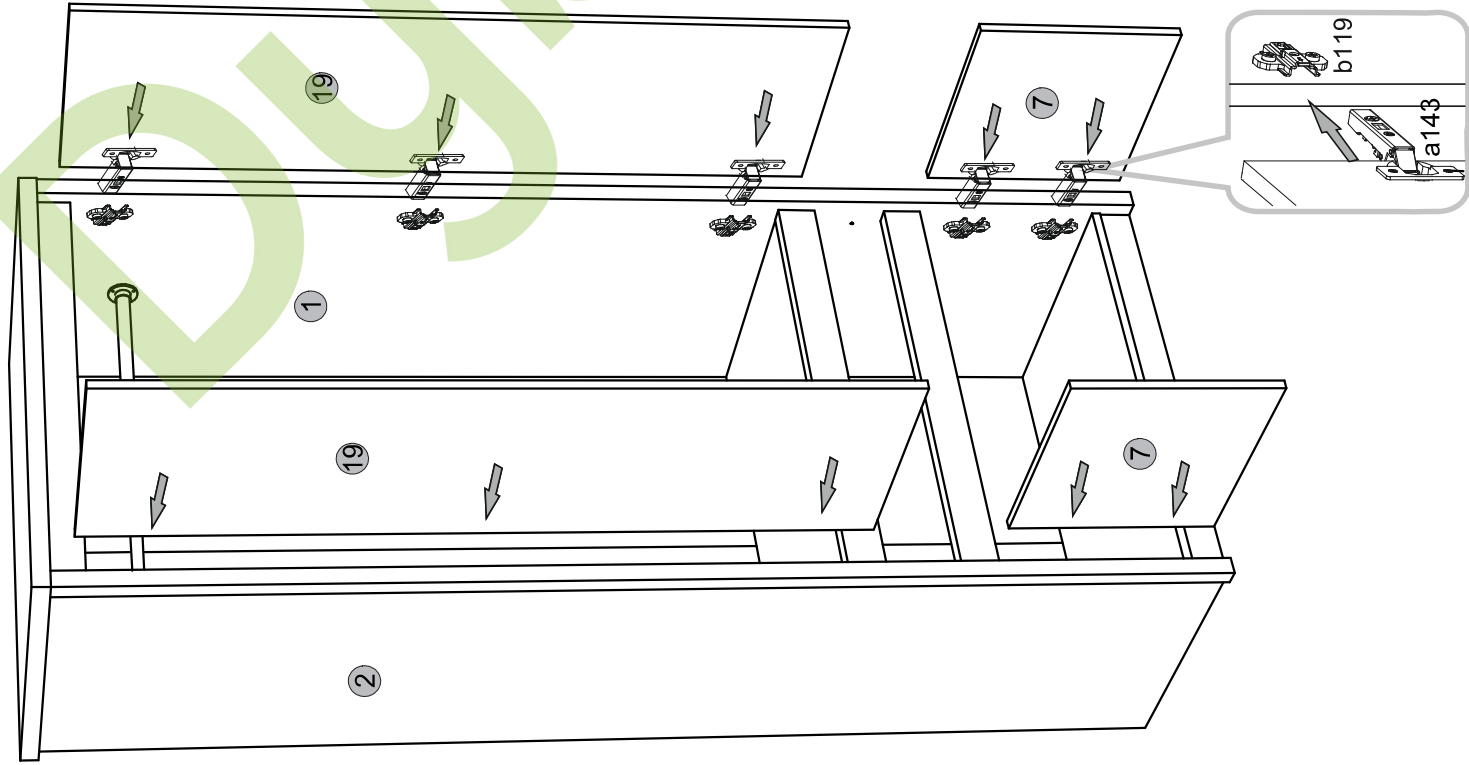

9

