
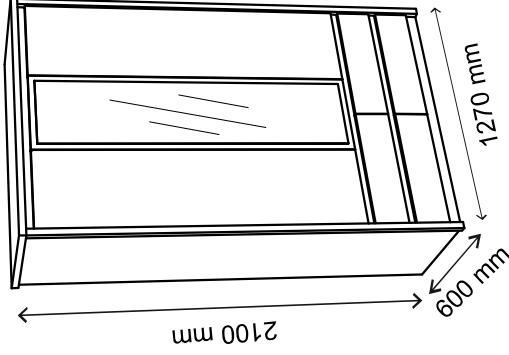
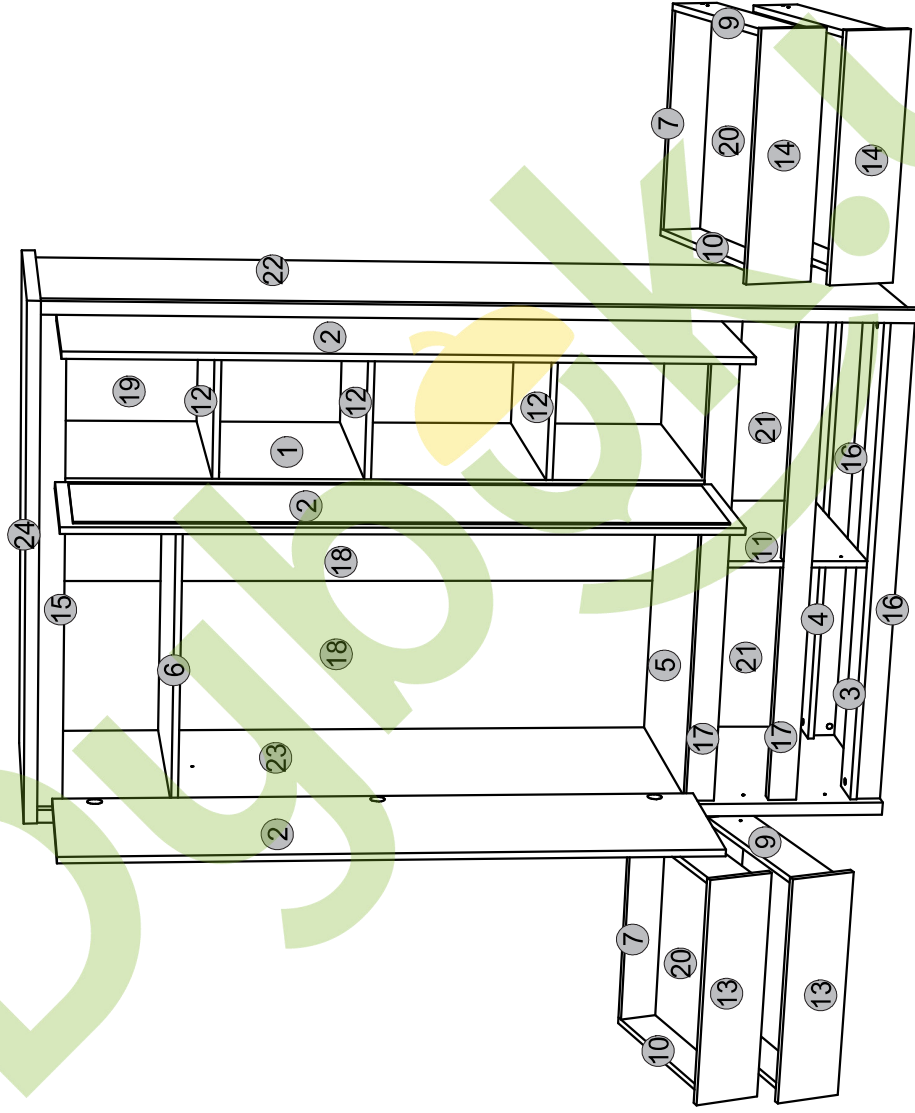
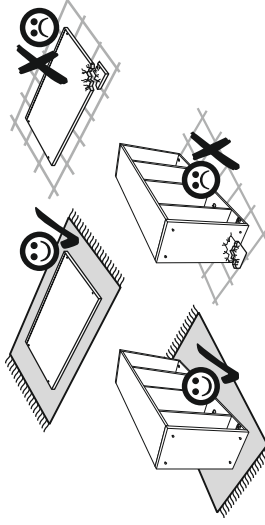
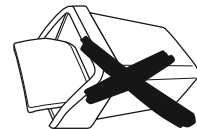
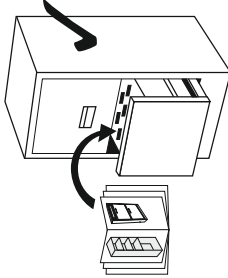
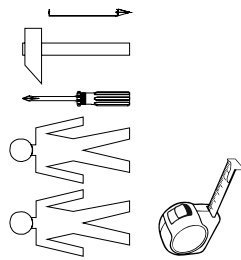
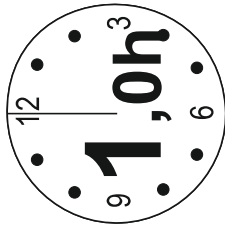


Instalation manual

NORTON: SZF_3D4S

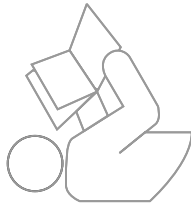


Element symbol	Dimensions			Code	Package
1	1596	16	1	NS-107	1/1
2	1560	398	16	NS-002	4/4
3	1204	100	16	NS-403	3/3
4	1204	100	16	NS-404	3/3
5	1204	539	16	NS-302	3/3
6	794	569	16	NS-303	3/3
7	537	120	16	NS-505	2/2
8	537	120	16	NS-506	2/2
9	500	120	16	NS-507	3/3
10	500	120	16	NS-508	2/2 3/3
11	396	569	16	NS-108	1/1
12	394	569	16	NS-304	2/2 3/3
13	170	598	16	NS-003	4/4
14	170	598	16	NS-004	4/4
15	60	1204	16	NS-405	2/2
16	60	1204	16	NS-406	3/3
17	70	1204	30	NS-407	3/3
18	1613	405	3	NS-603	1/1
19	1613	411	3	NS-604	1/1
20	551	482	3	NS-605	2/2
21	419	611	3	NS-606	2/2
22	2068	598	16/32	NS-109	1/1
23	2068	598	16/32	NS-110	1/1
24	1270	600	16/32	NS-202	2/2


4x e3 4x 16 mm	1x f3 4x 16 mm	1x p17 4x 16 mm	1x n14 4x 16 mm
59x f1 4x 16 mm	6x a143 4x 16 mm	2x p25 4x 16 mm	2x n301 4x 16 mm
1x h1 4x 16 mm	1x r1 4x 16 mm	1x z1 4x 16 mm	1x e1 4x 16 mm
12x d1 4x 16 mm	26x s2 4x 16 mm	80x p21 4x 16 mm	10x p52 4x 16 mm




1

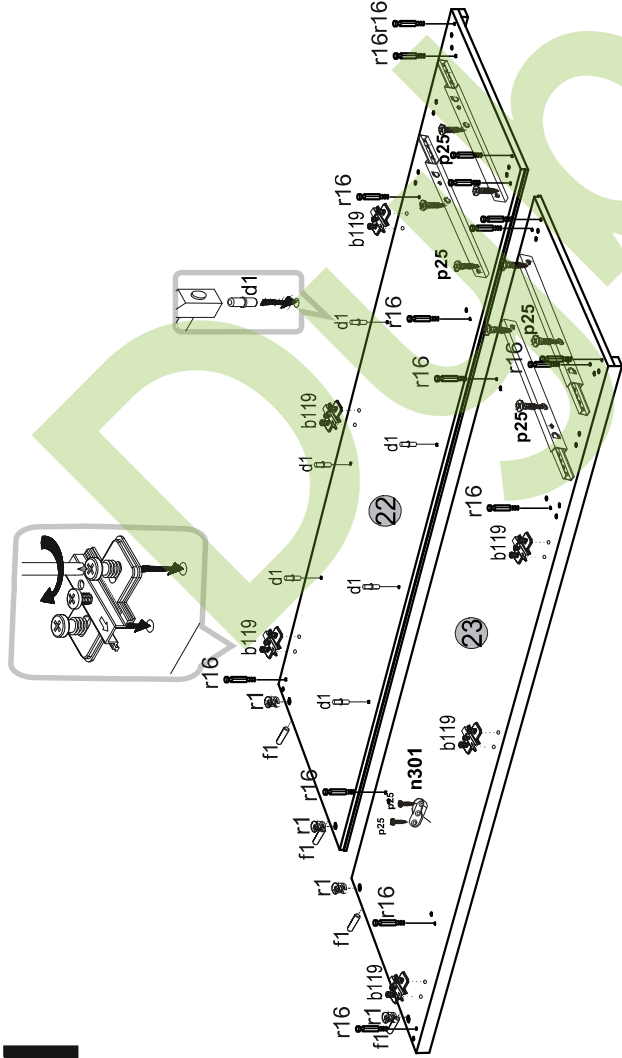


3

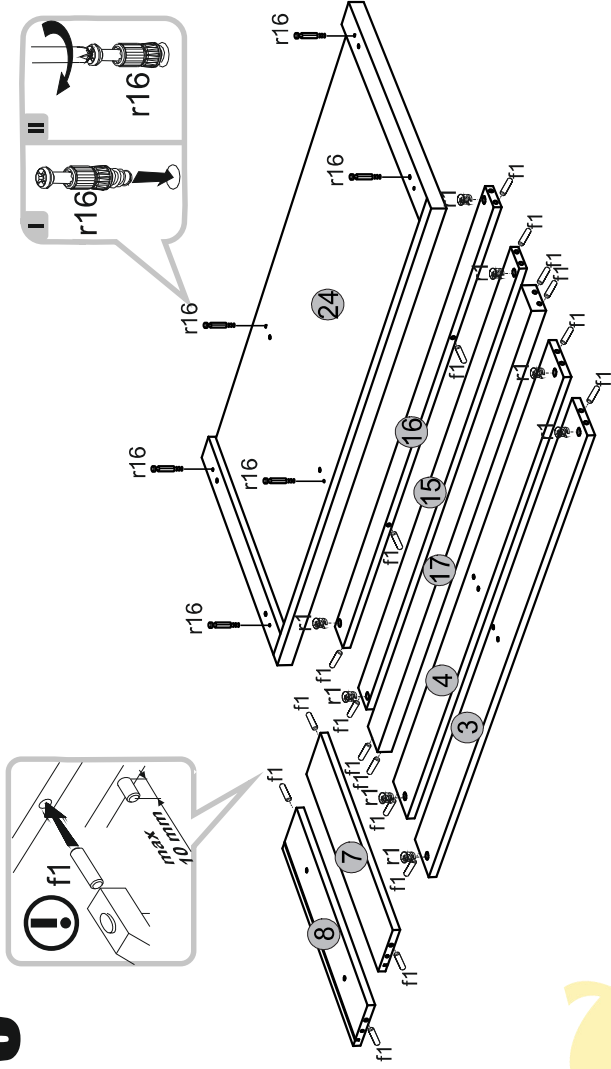


2

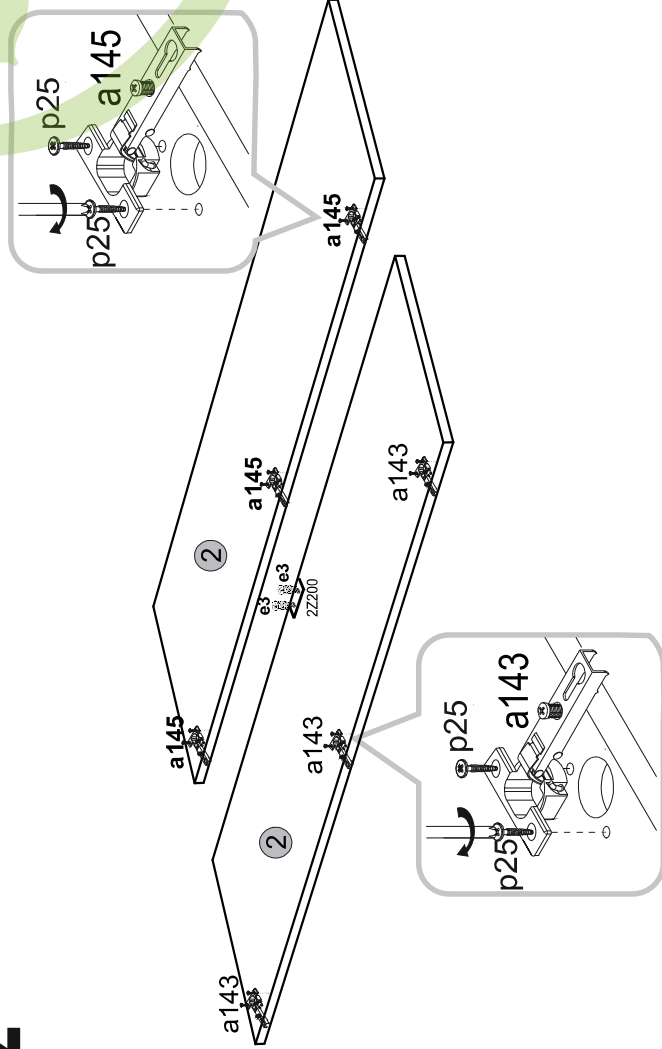


4

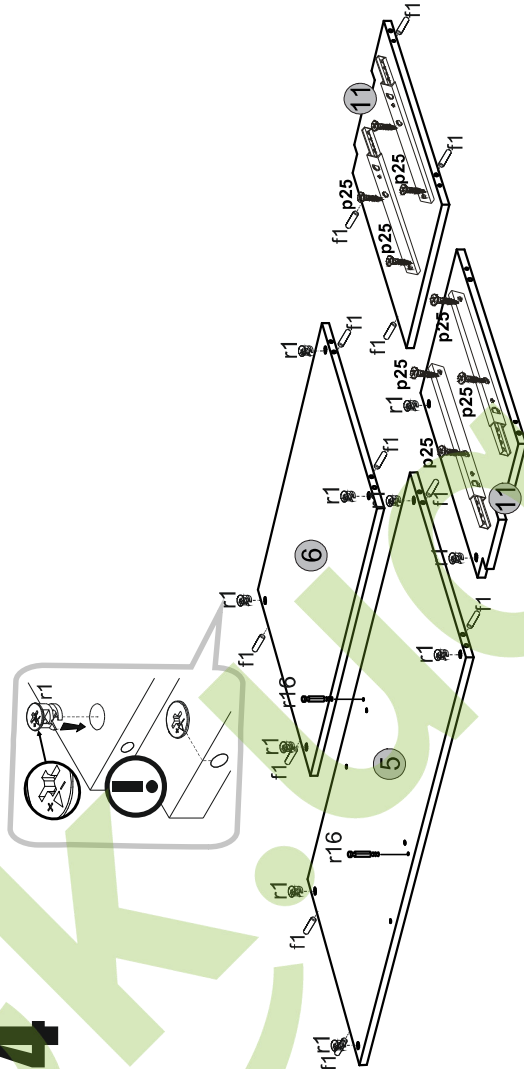


5

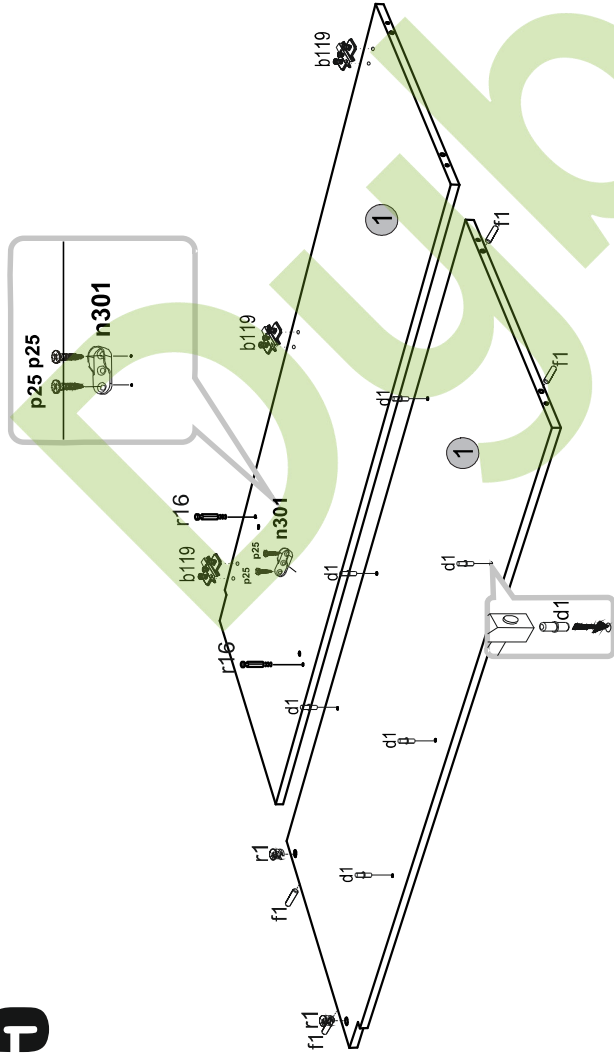


7

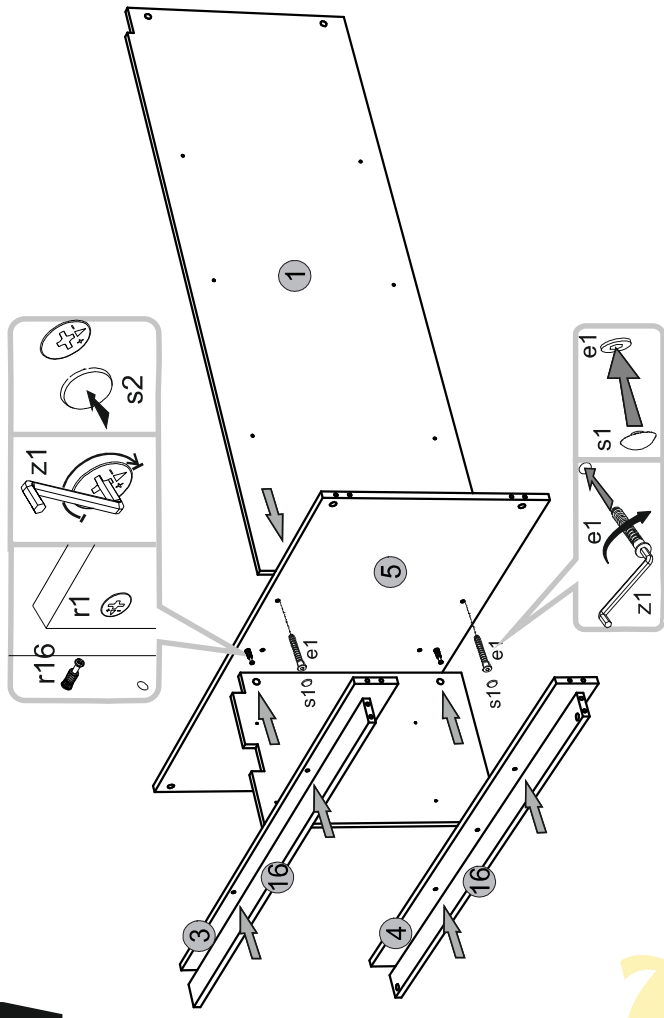


6

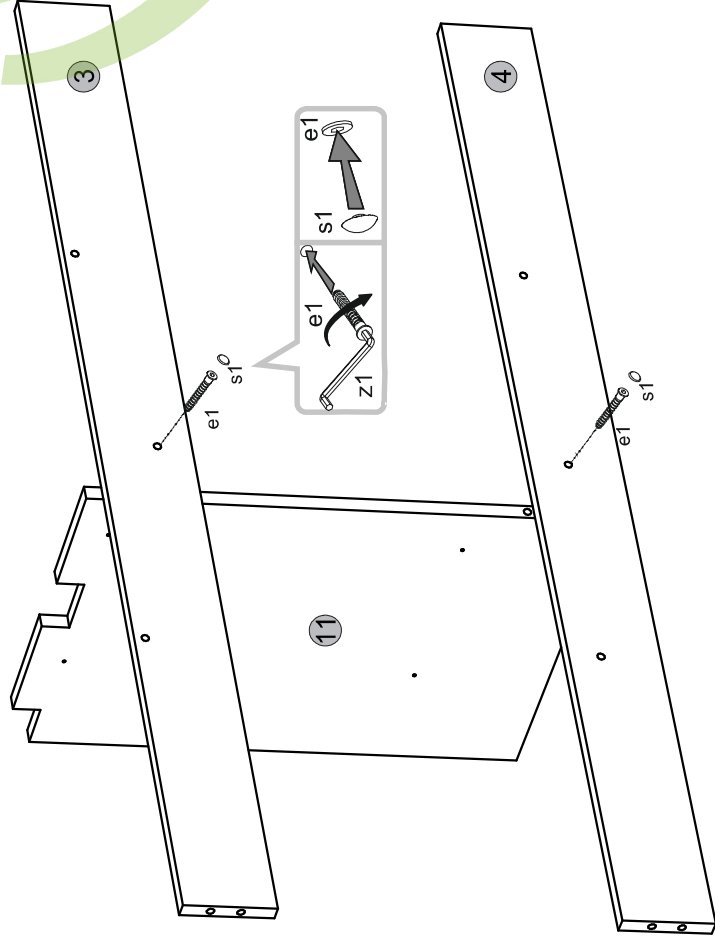


8

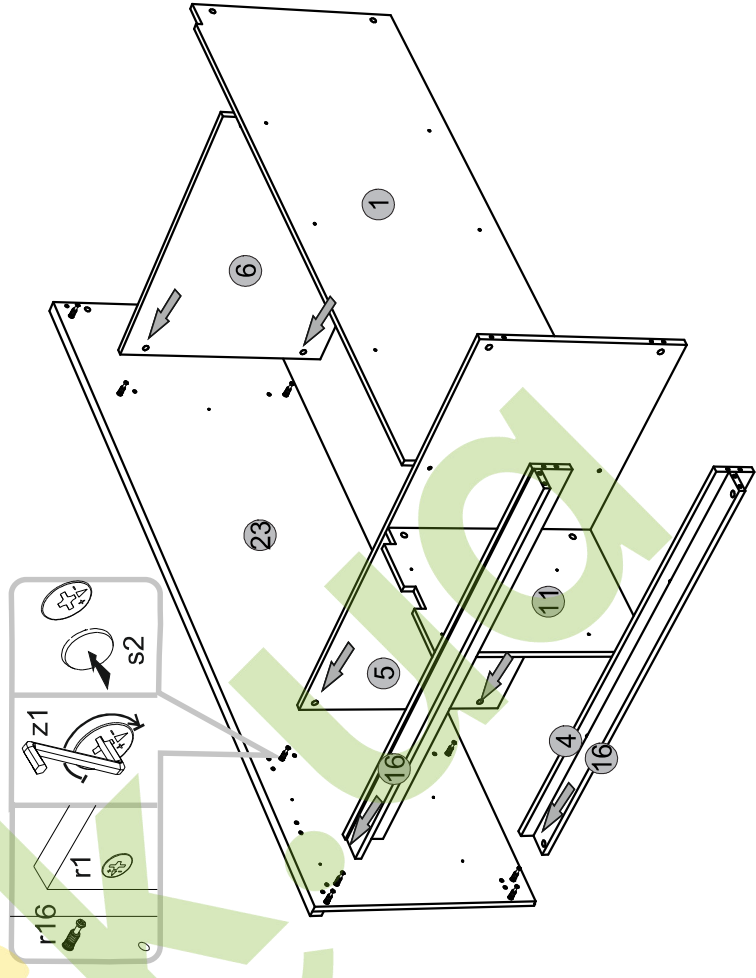


9

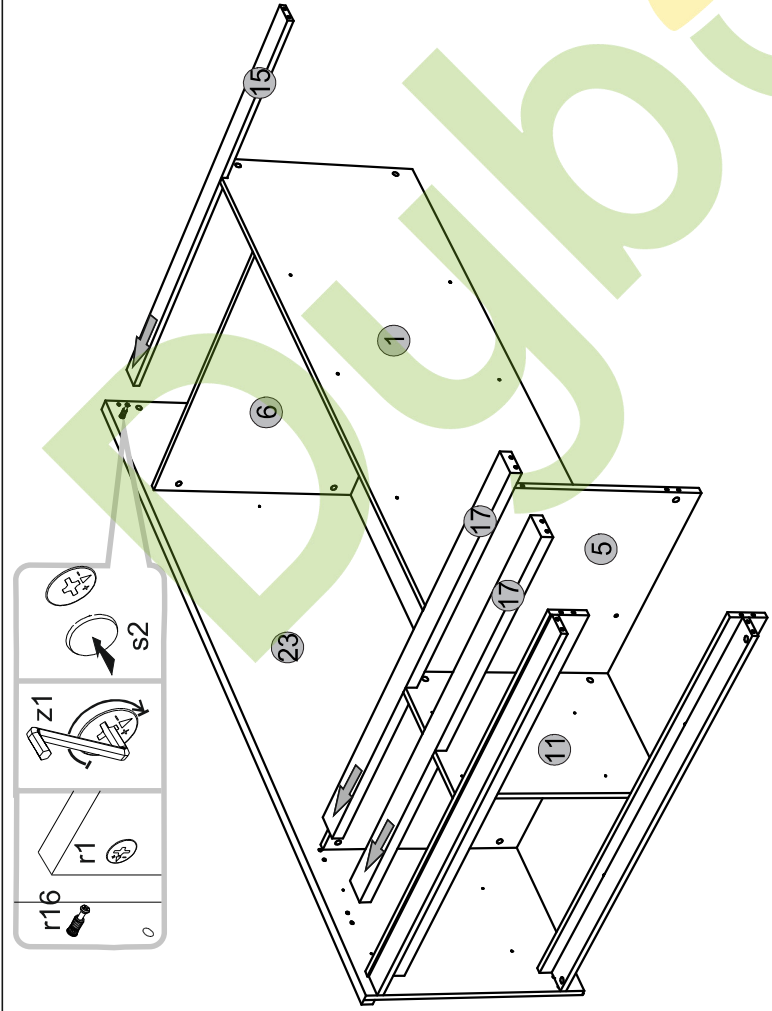


11

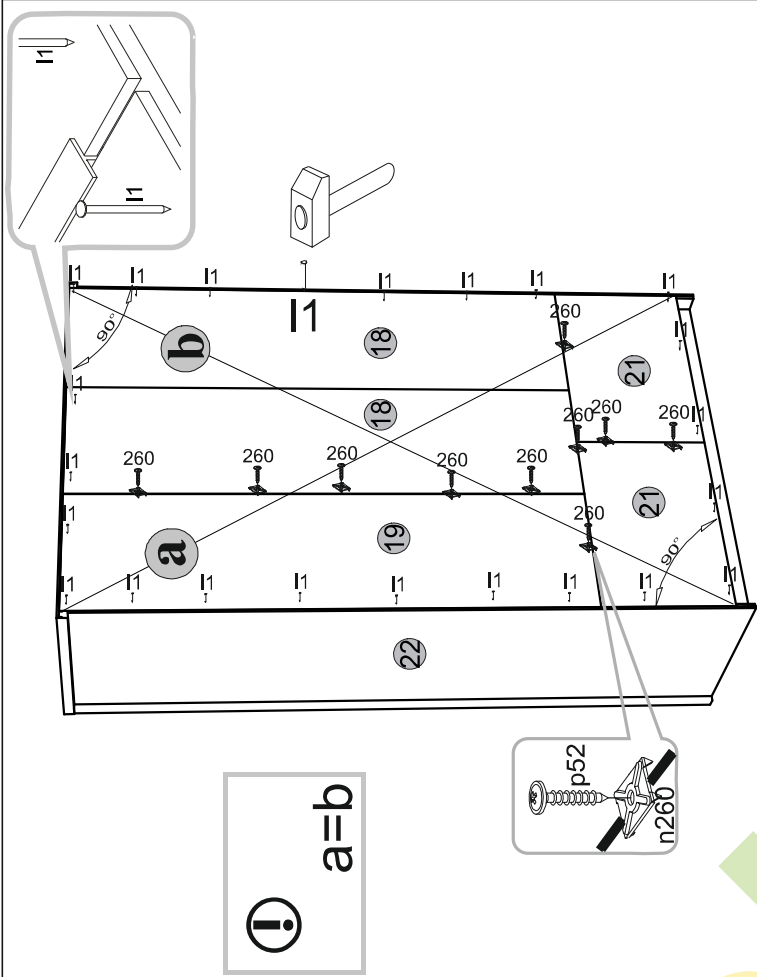

10

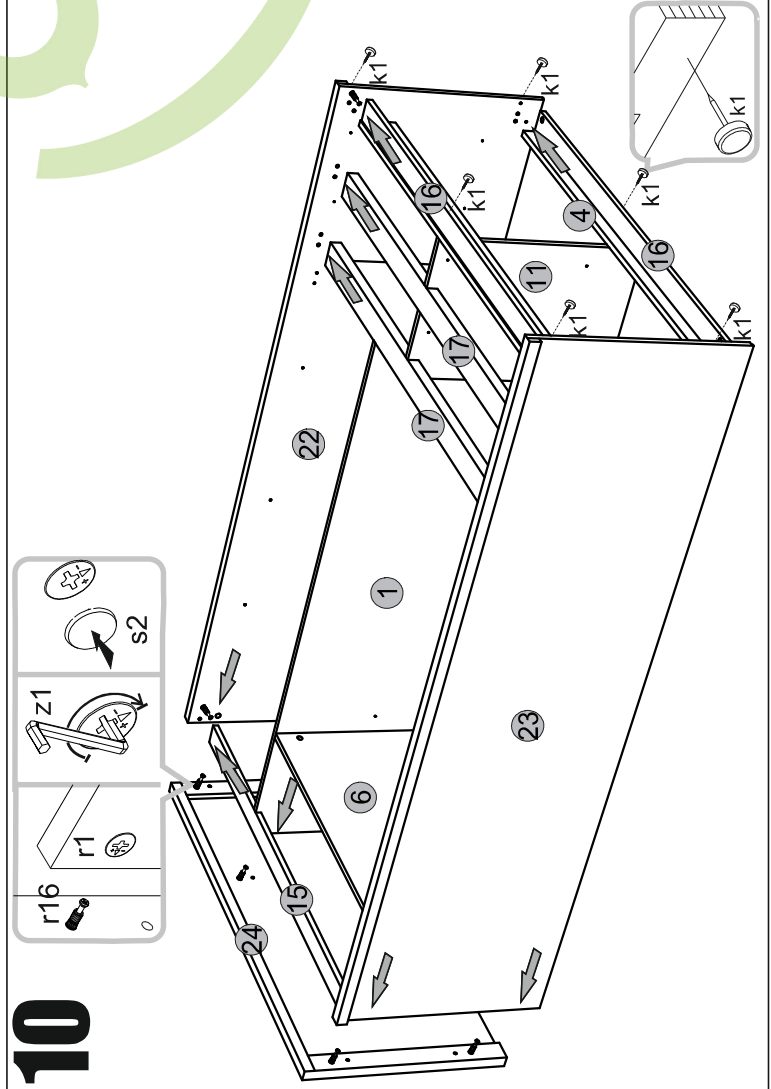

12

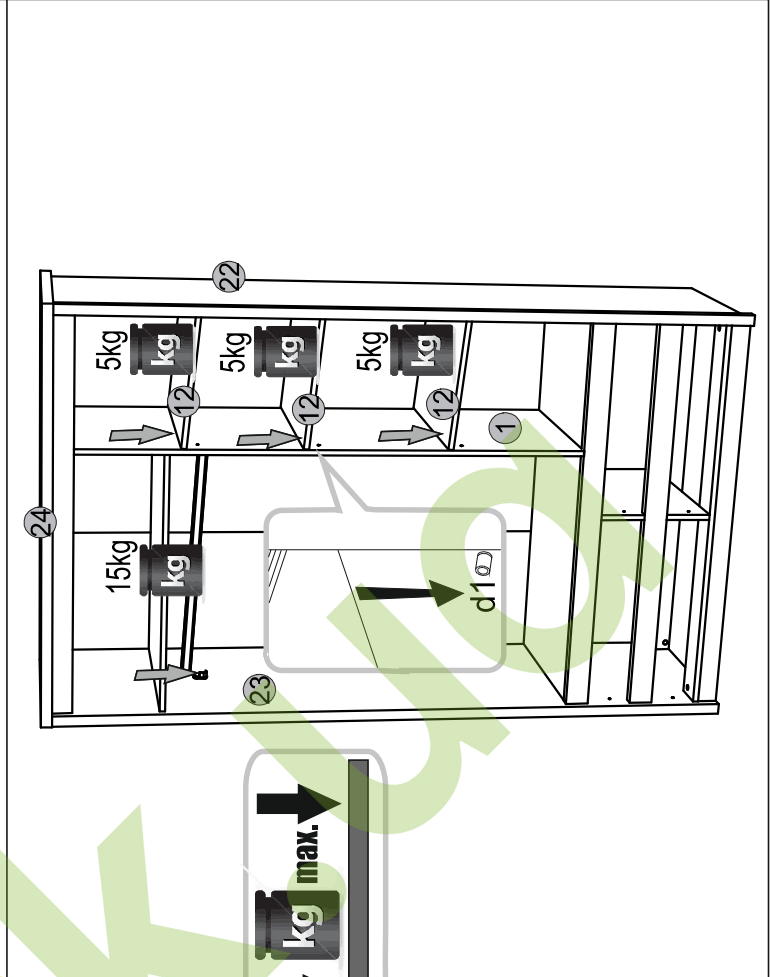

13

14

