

Complete set of packings

# " PETERSBURG "


## TABLE

The instruction of installation  
Dimensional section (1 segments)

Length 1800 mm

Depth 900 mm

Height 750 mm

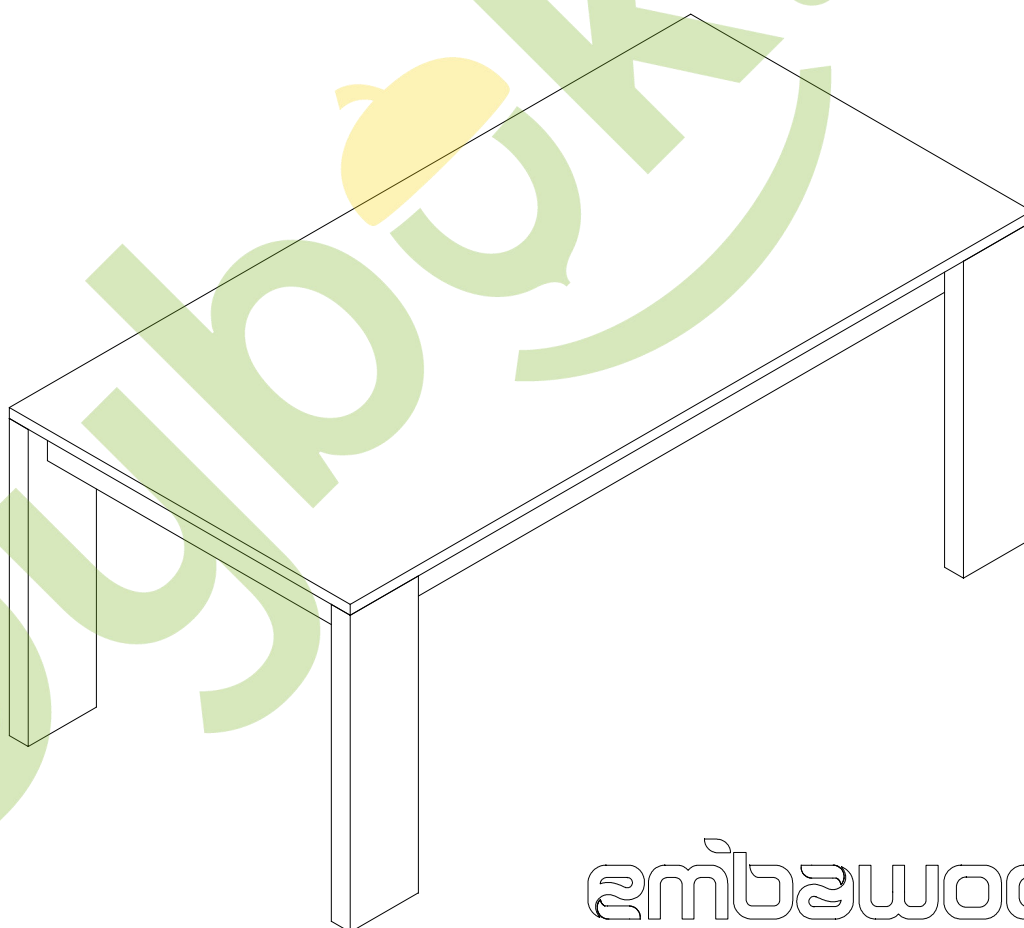


embawood




## PACK LIST

| Length         | Width | Amount | Detailed number |
|----------------|-------|--------|-----------------|
| 1800           | 900   | 1      | 6               |
| 1742           | 96    | 2      | 1-3             |
| 794            | 96    | 2      | 4-5             |
| 744            | 96    | 2      | 2               |
| The spare part |       |        | -               |
| 725            | 164   | 4      | 7-9             |
| 725            | 164   | 4      | 8-10            |

## GENERAL VIEW OF THE SPARE PARTS

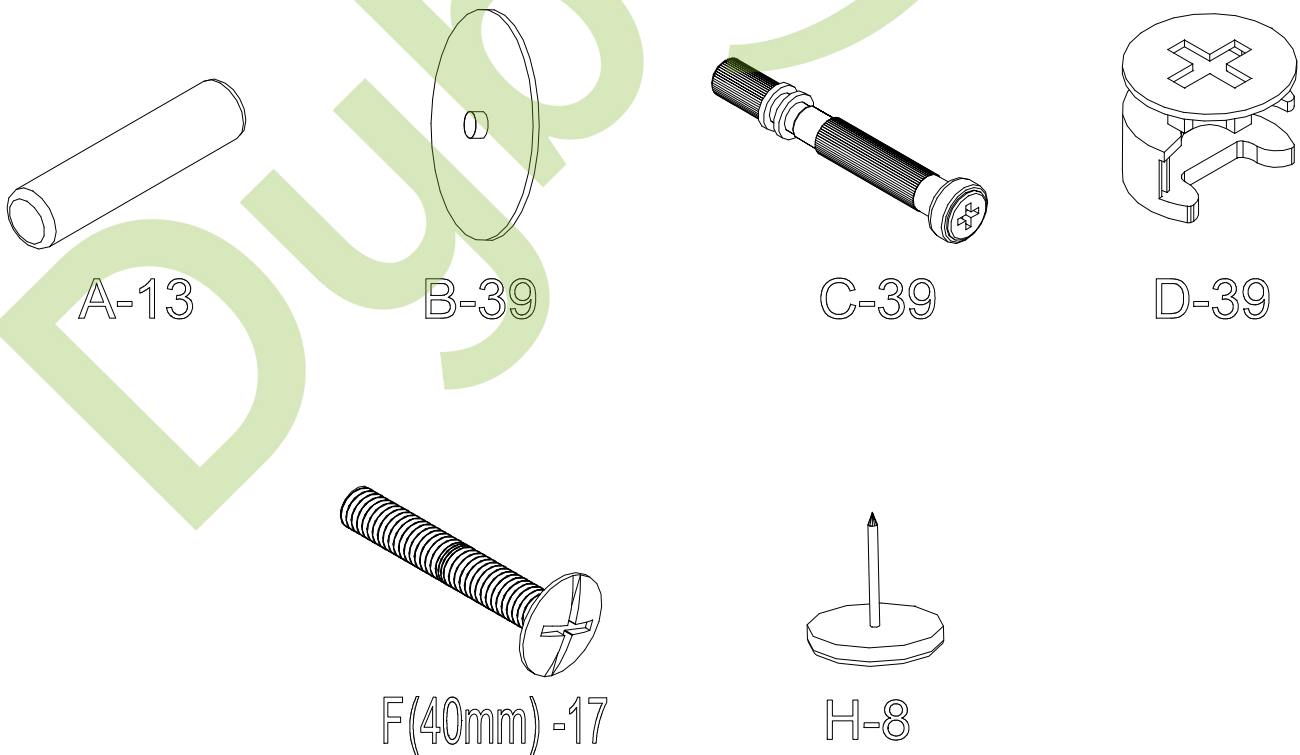


1/3

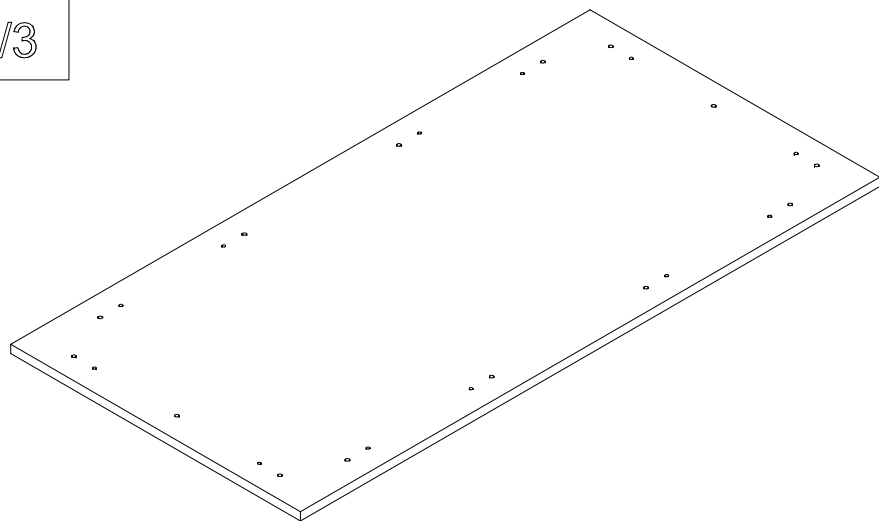


1 x 1

2/3


PETERSBURG

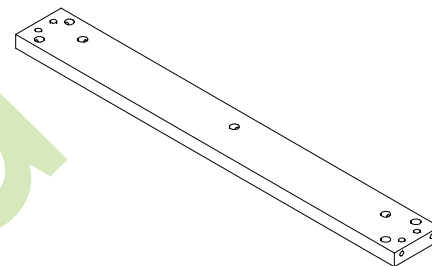


4 x 2

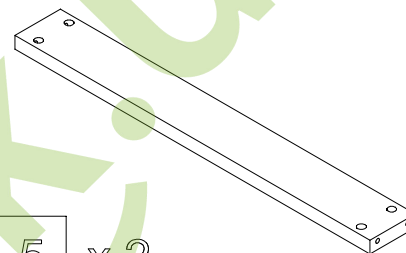


5 x 2

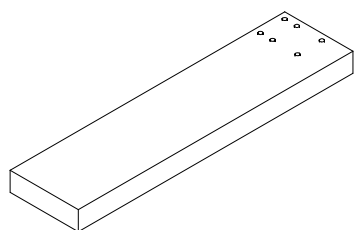

6 x 2

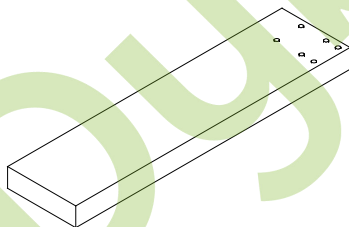

7 x 2

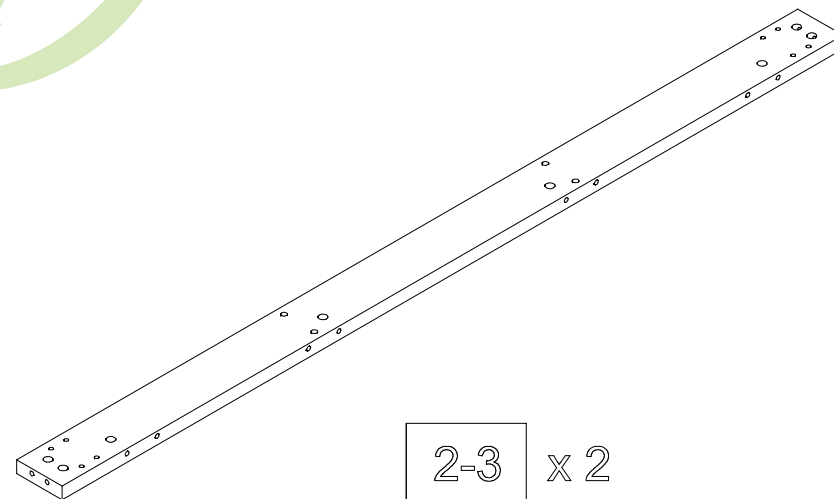



2-3 x 2

3/3


3/10

PETERSBURG

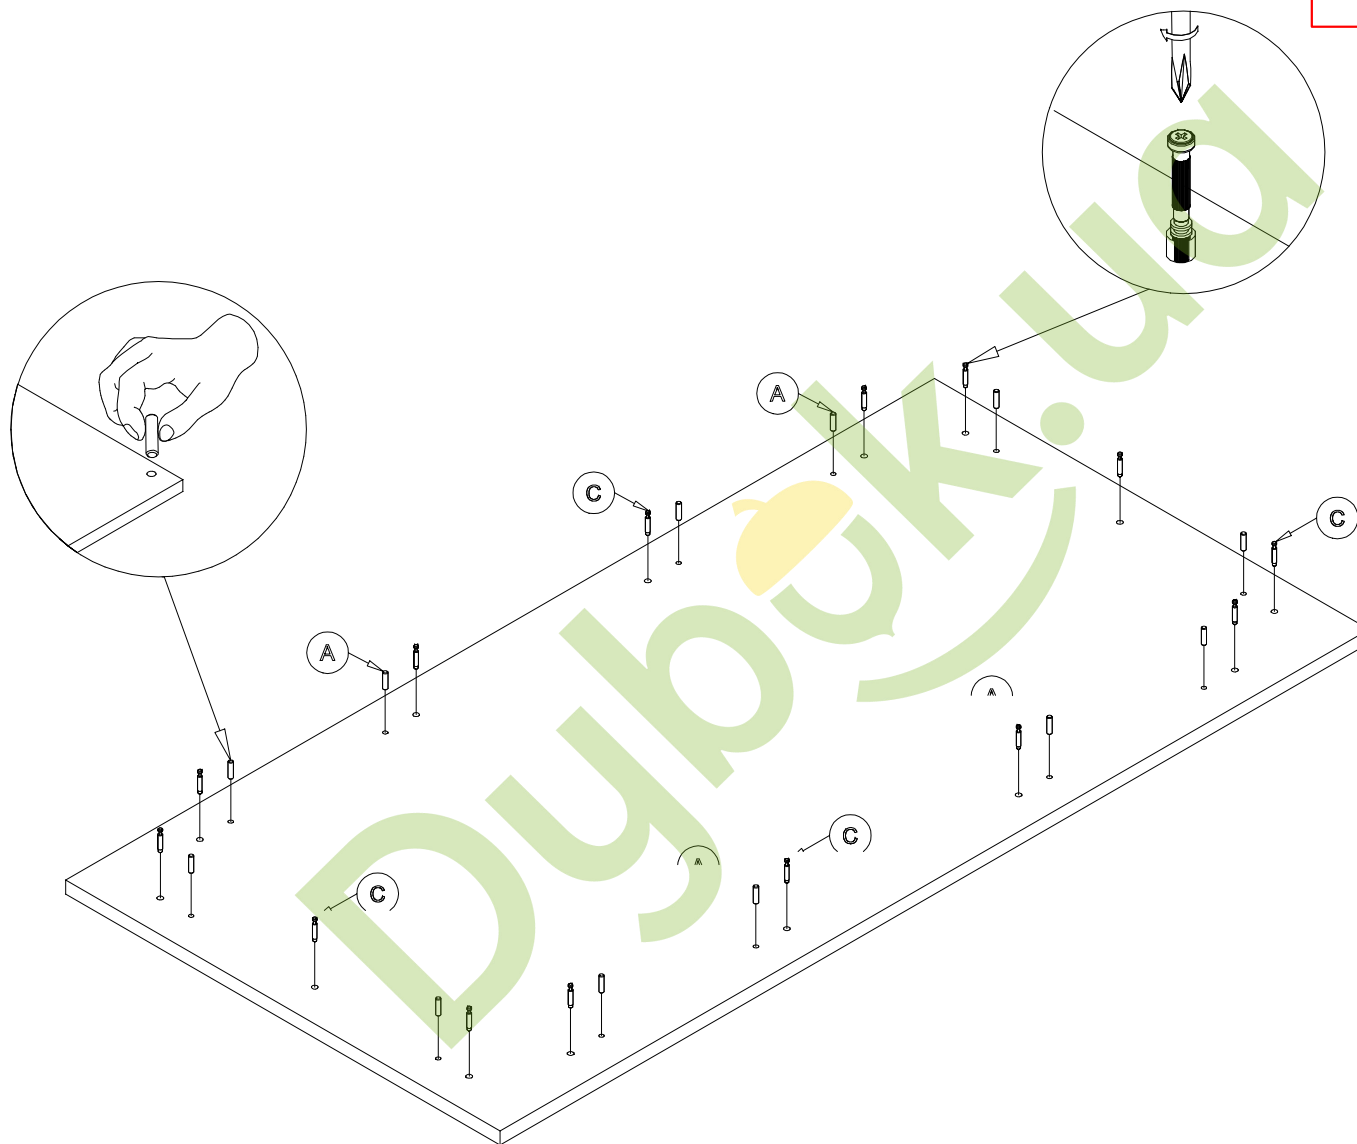


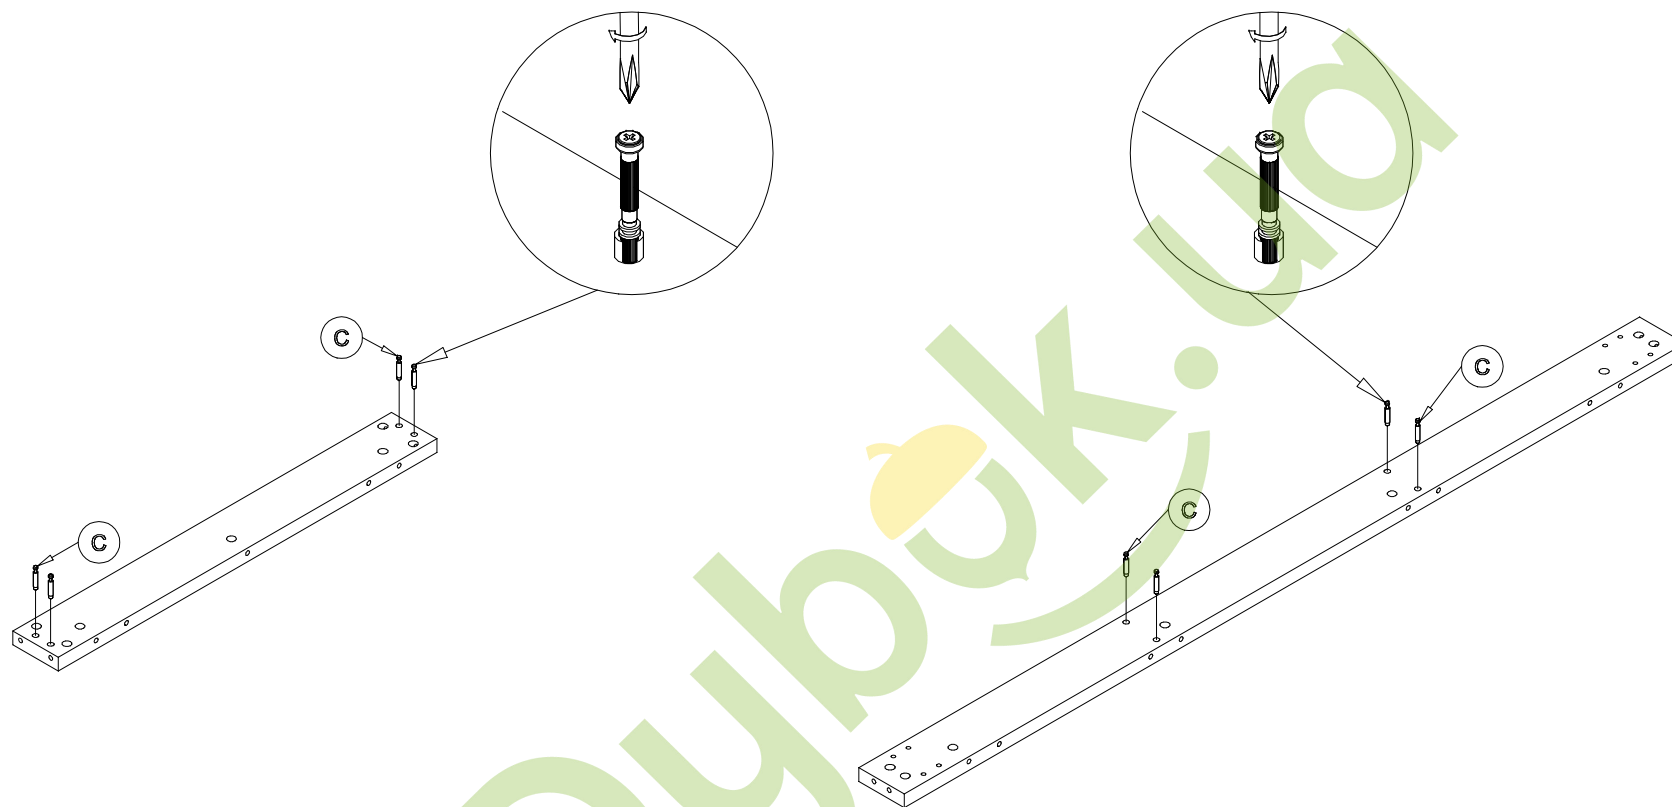


PETERSBURG

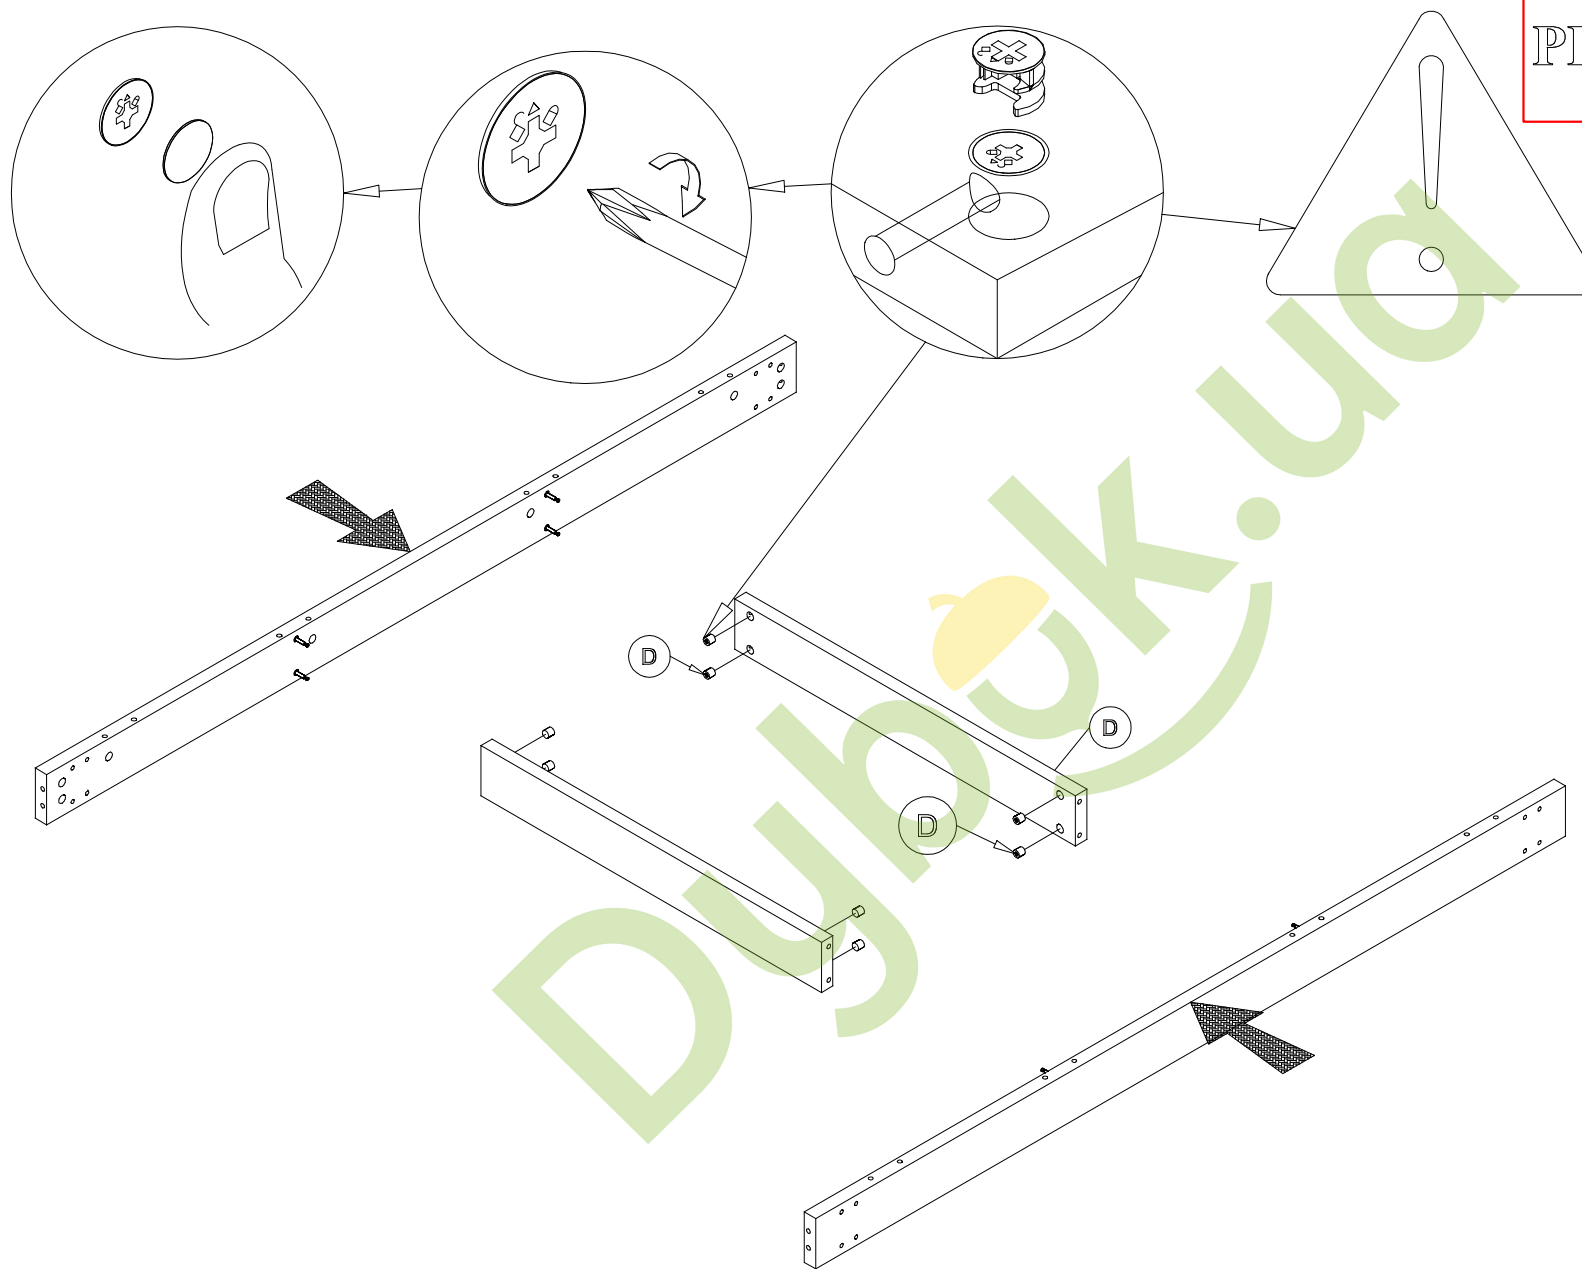


PETERSBURG

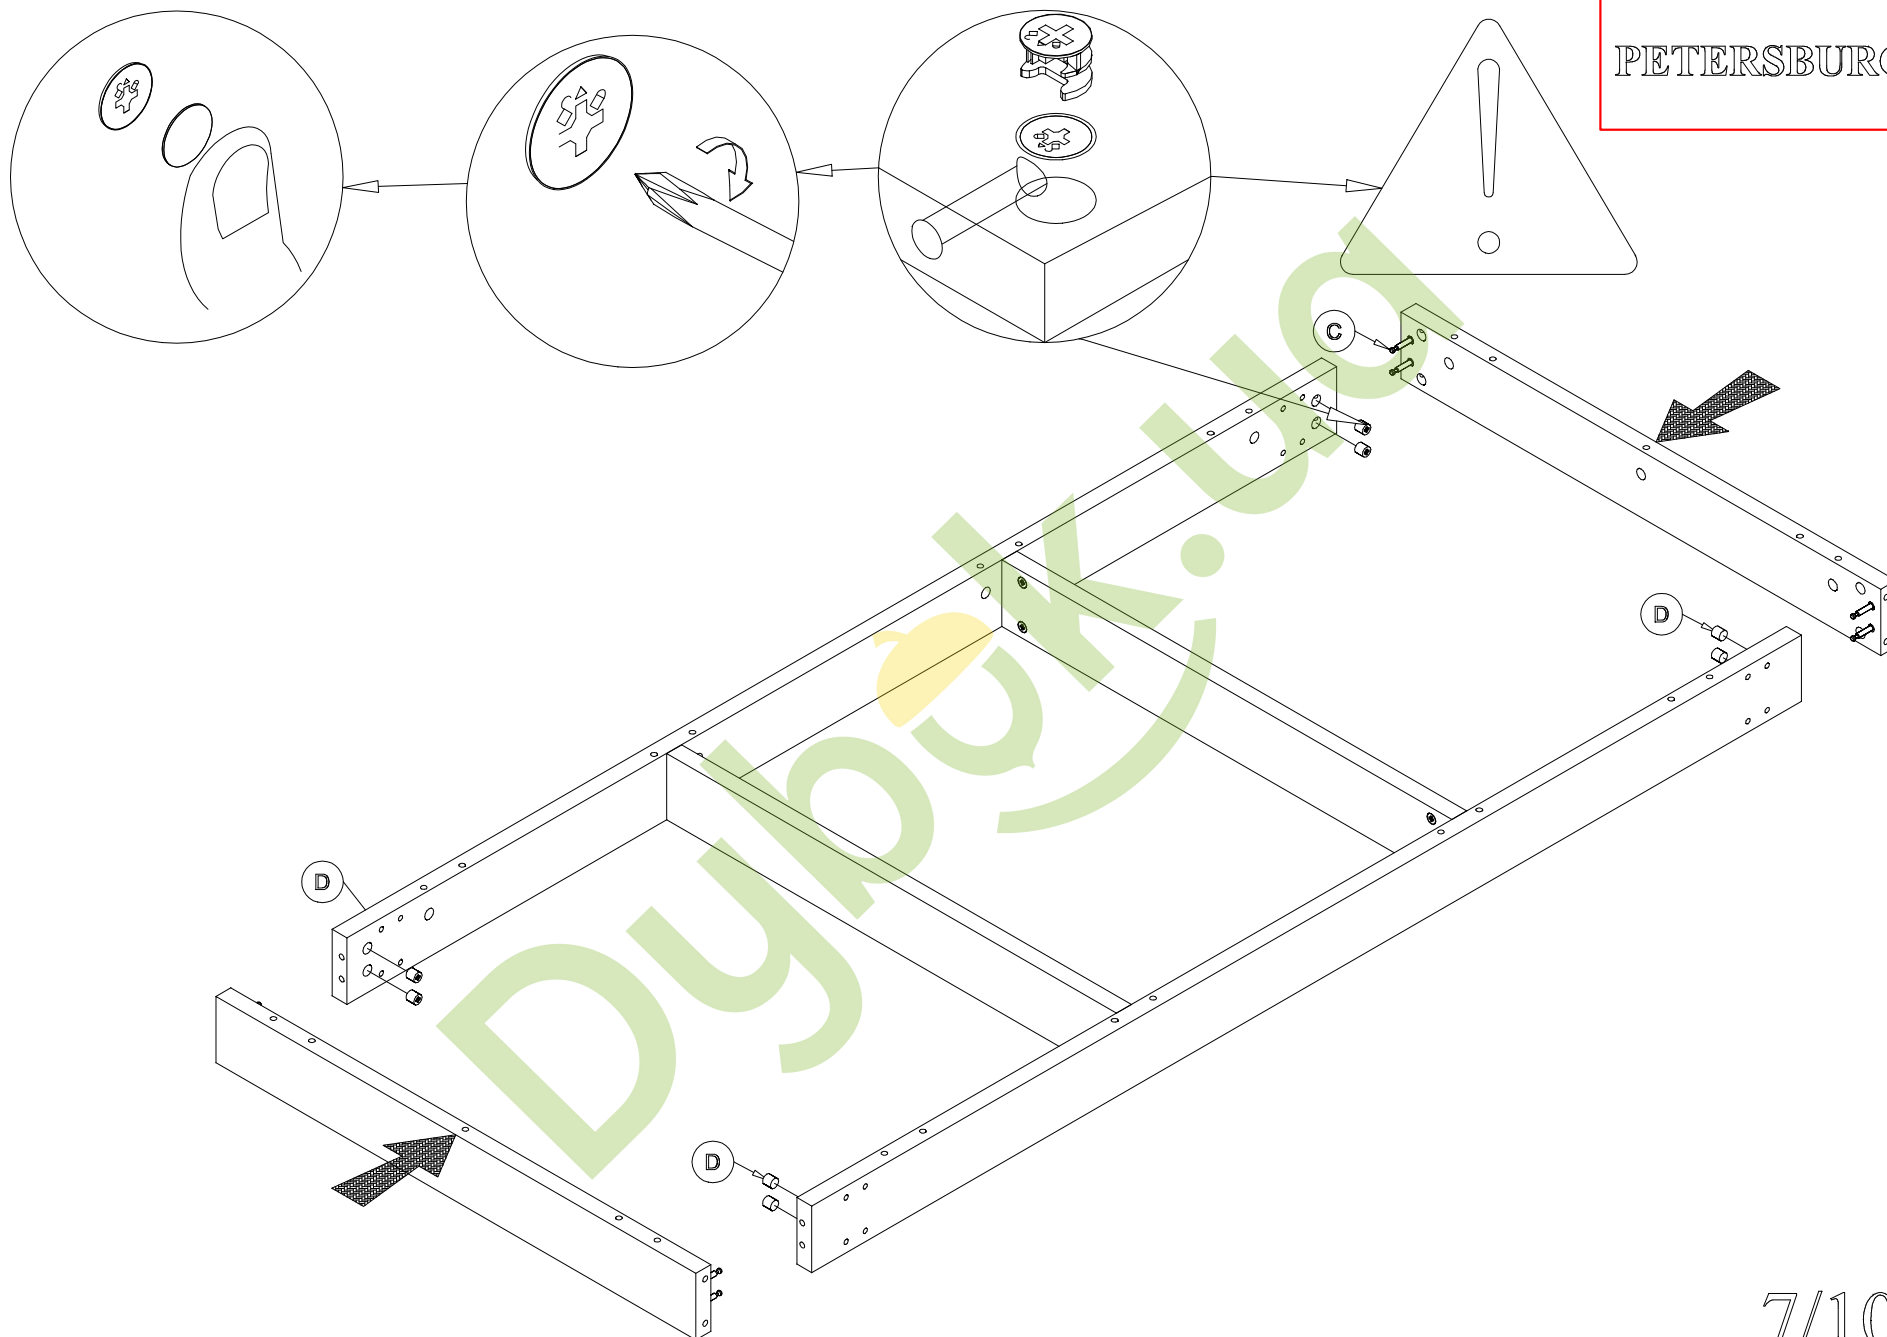

PETERSBURG

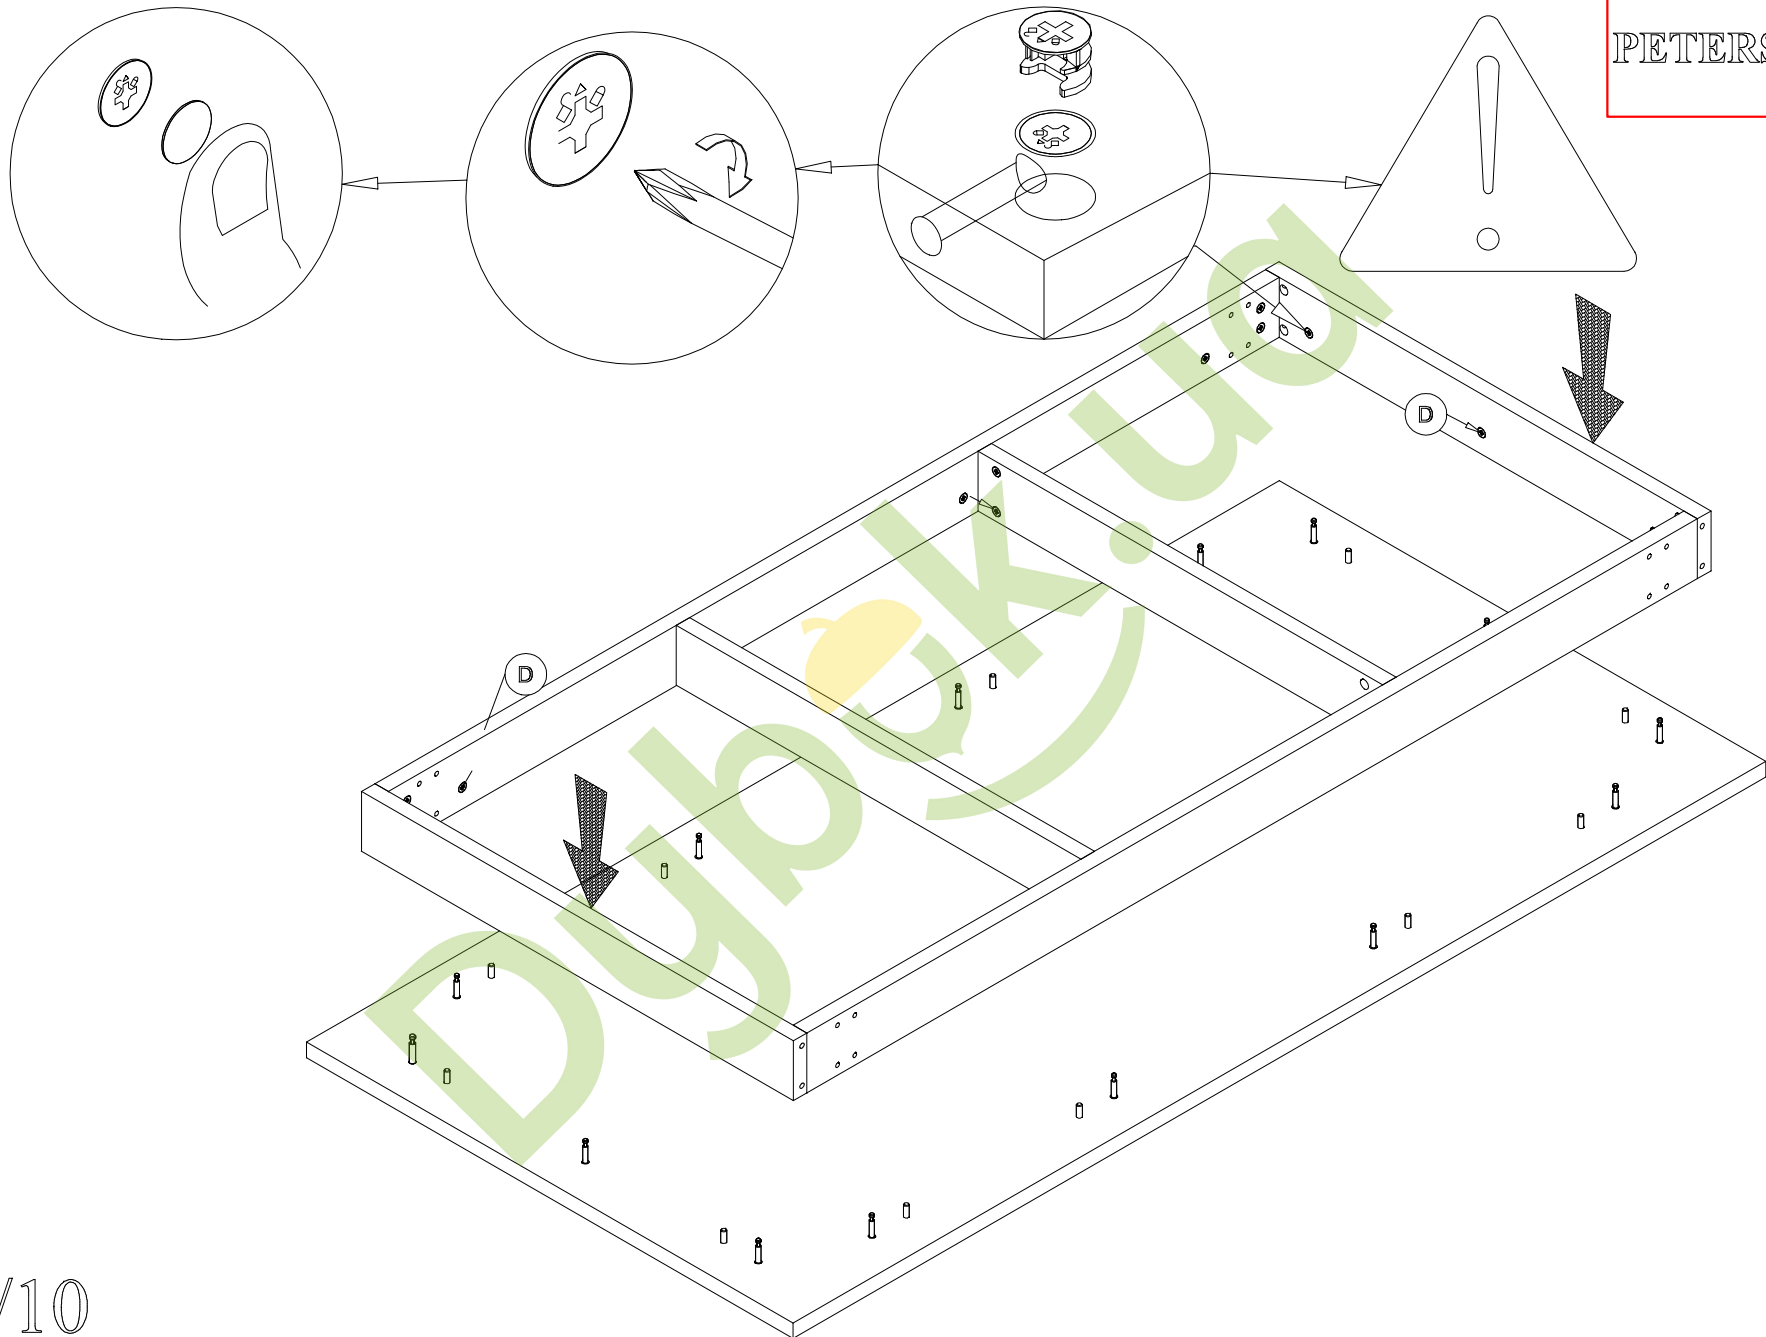



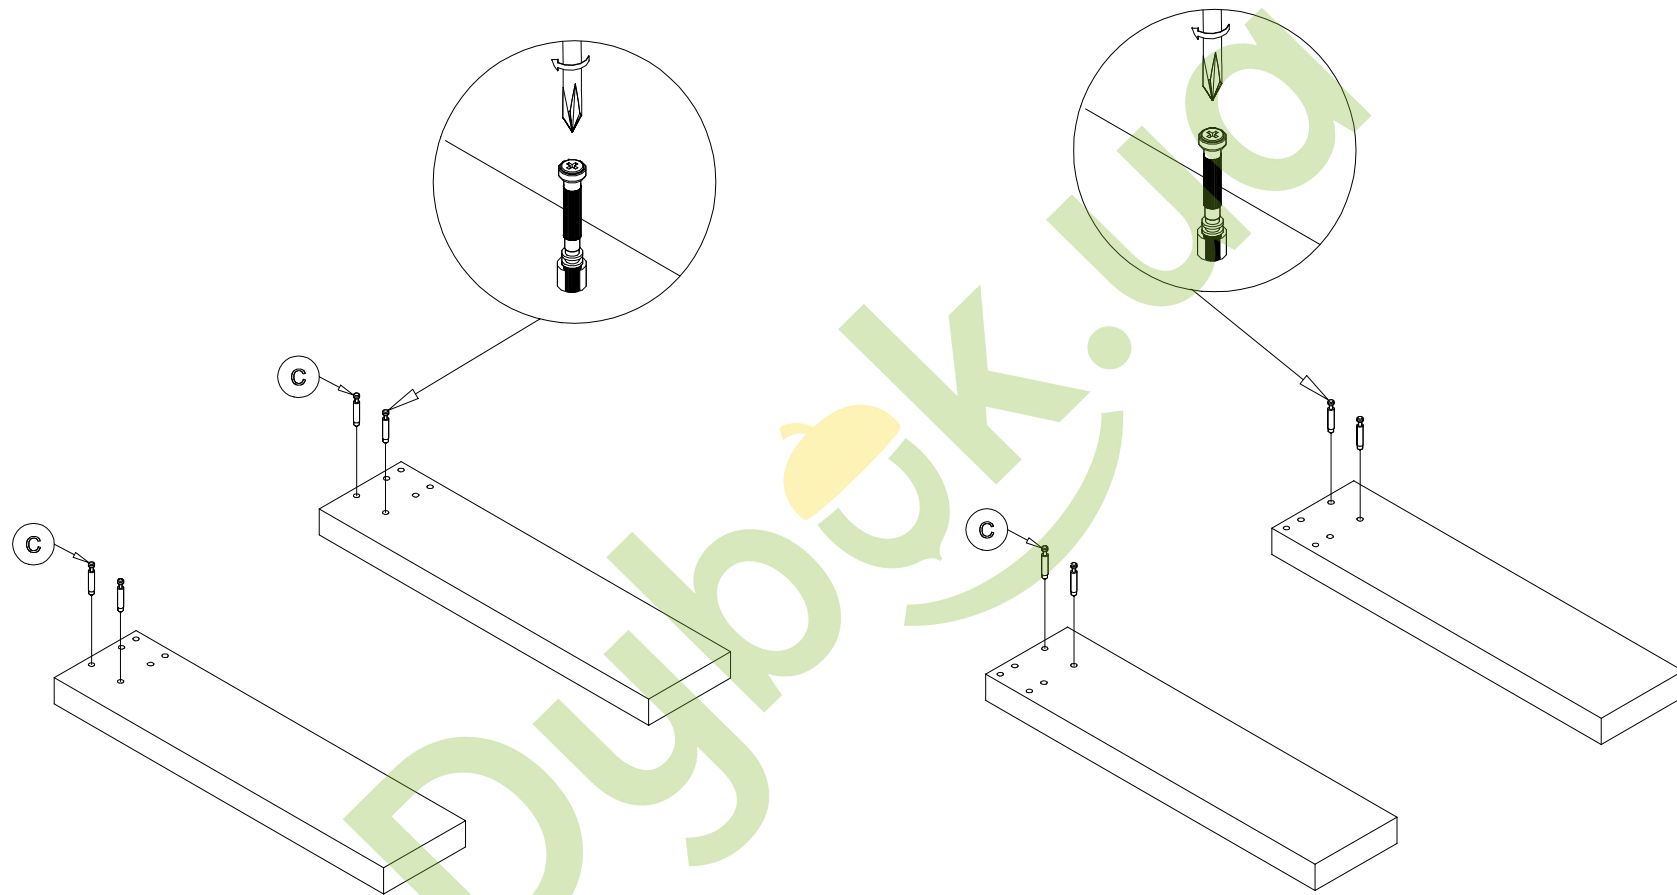

# PETERSBURG

