

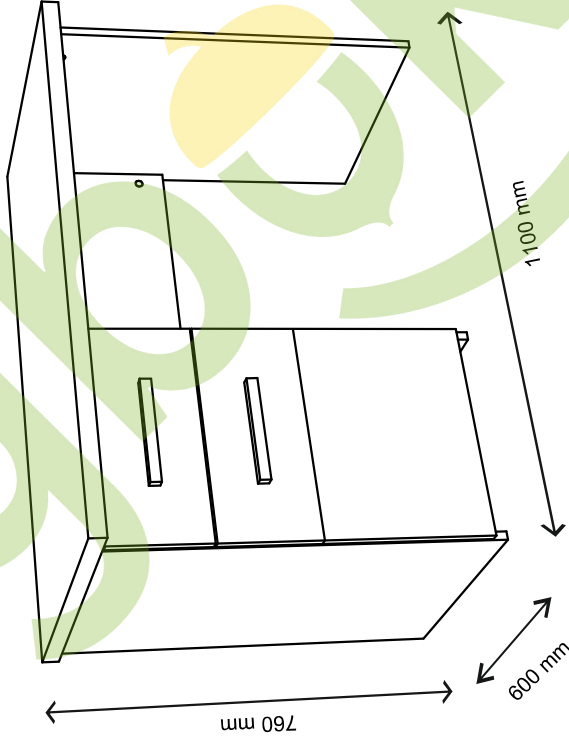
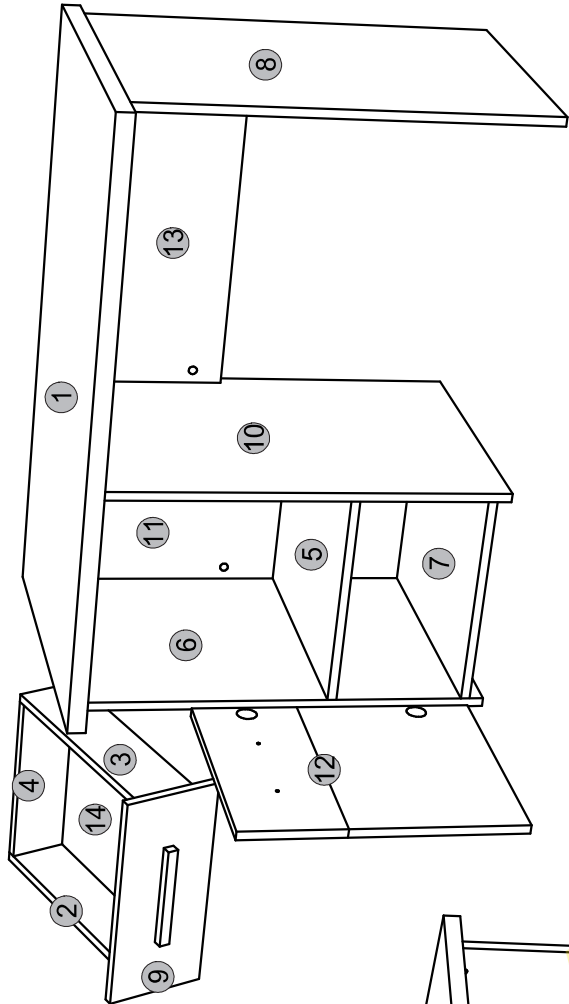
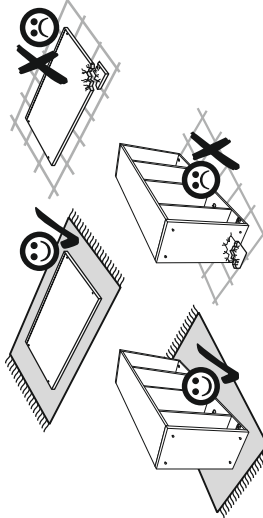
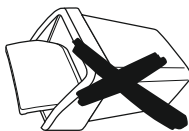
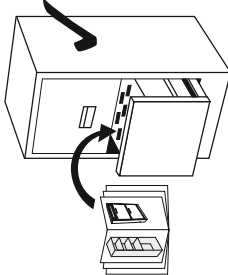
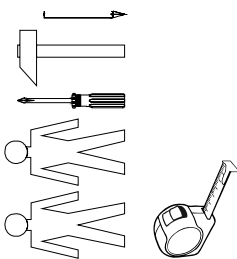
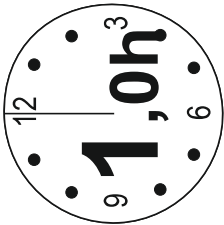


Installation manual



SOLO: BIU_1D1S

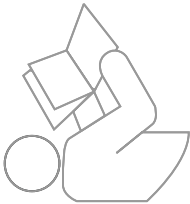



Element symbol	Dimensions	Code	Package
1	1100	16/32/32 1	SN-215 1/1
2	450	120 16 1	SN-420 1/1
3	450	120 16 1	SN-421 1/1
4	326	120 16 1	SN-422 1/1
5	384	479 16 1	SN-321 1/1
6	723	500 16 1	SN-130 1/1
7	384	500 16 1	SN-320 1/1
8	723	500 16 1	SN-131 1/1
9	188	412 16 1	SN-036 1/1
10	723	500 16 1	SN-132 1/1
11	682	384 16 1	SN-133 1/1
12	500	412 16 1	SN-035 1/1
13	300	658 16 1	SN-134 1/1
14	340	448 3 1	SN-621 1/1

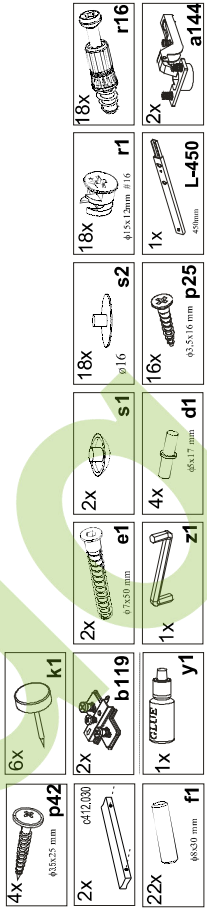



1

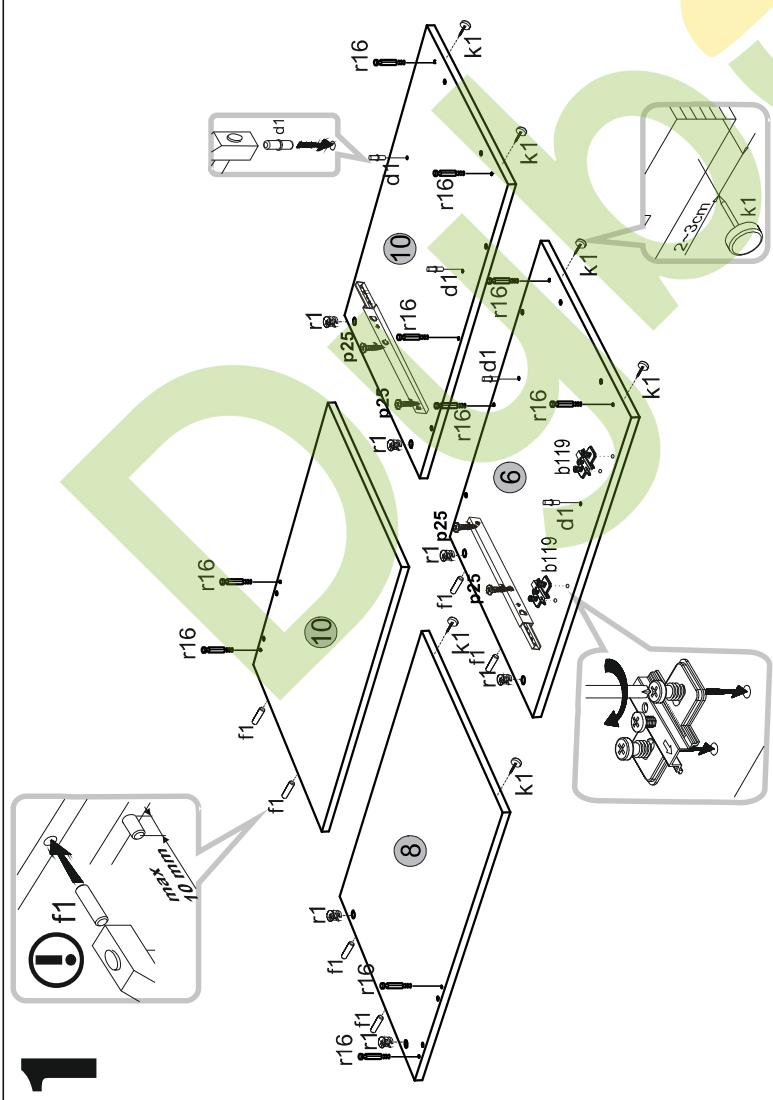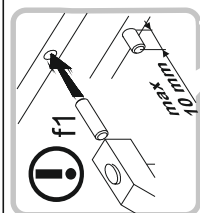


3

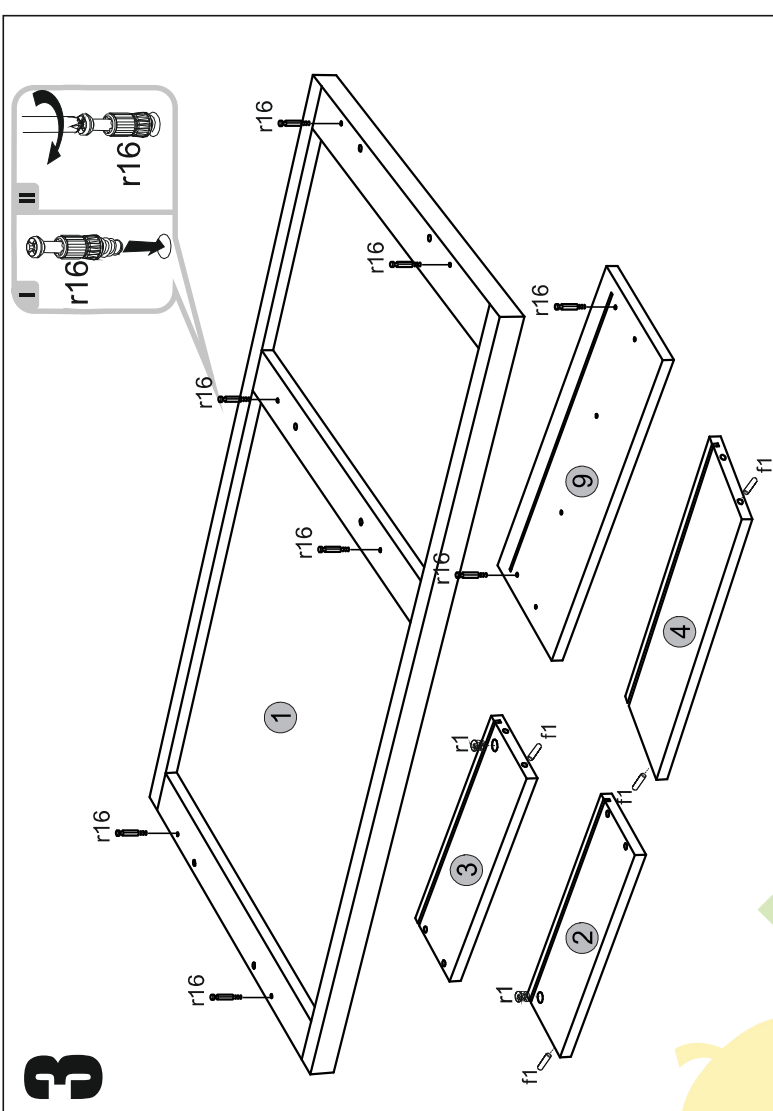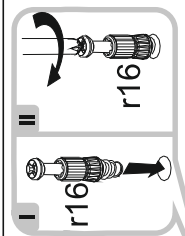


2

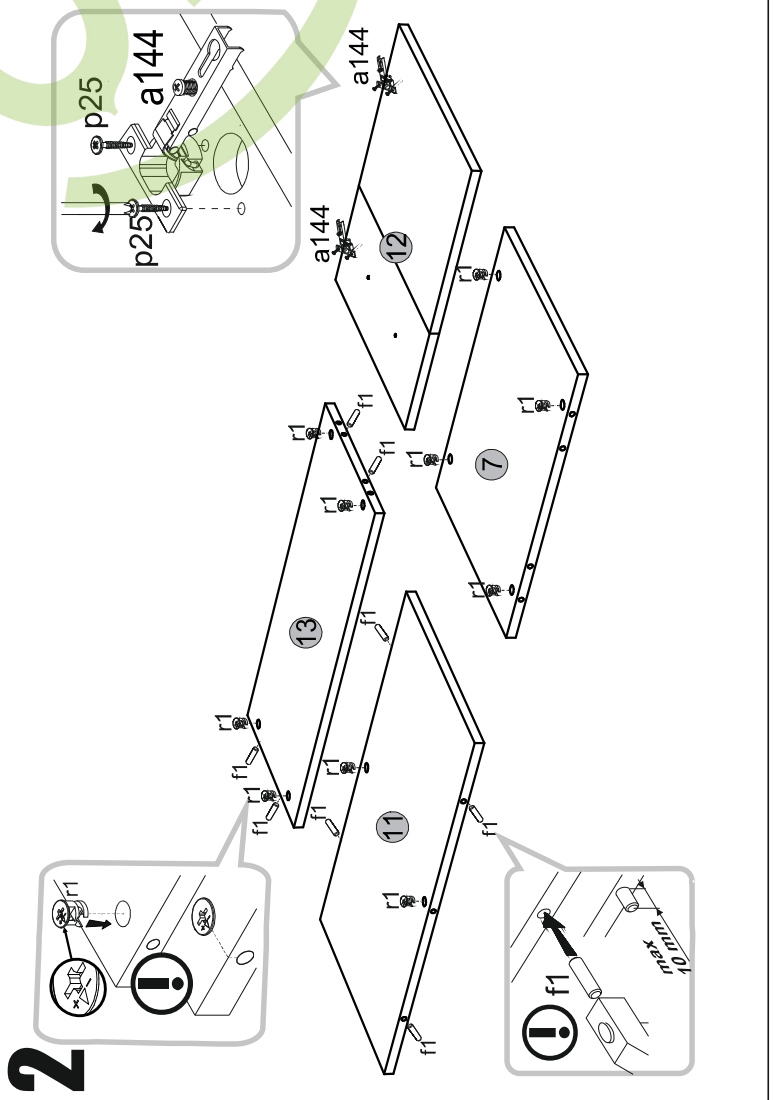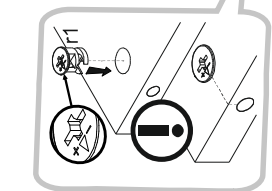


4

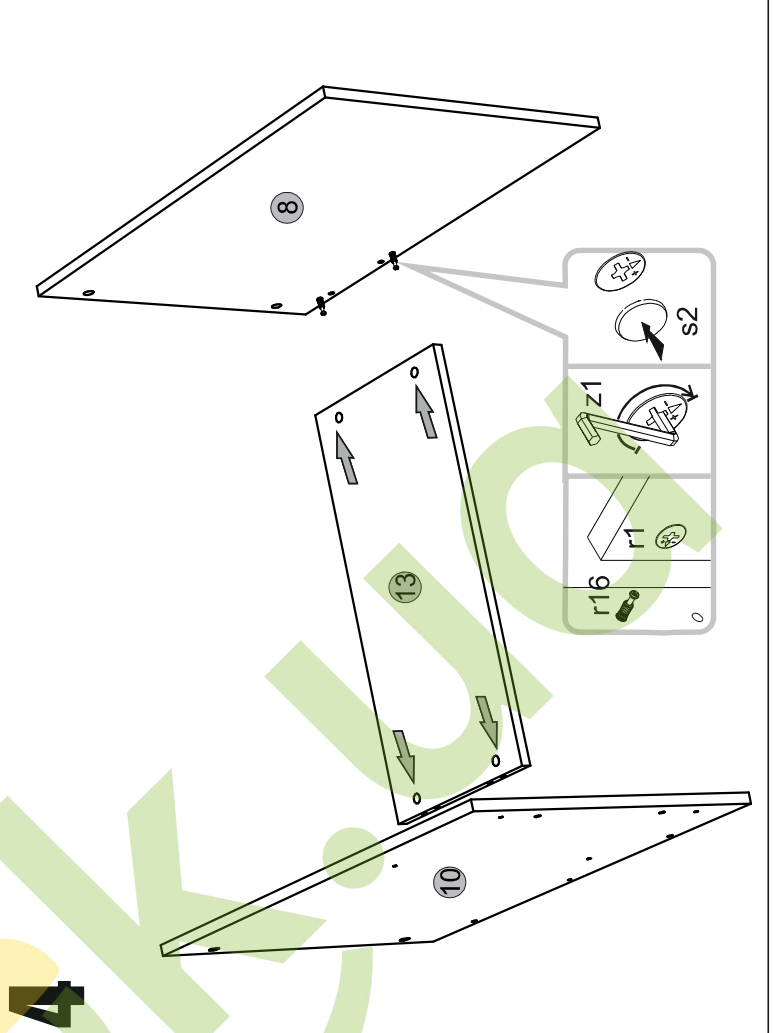


7

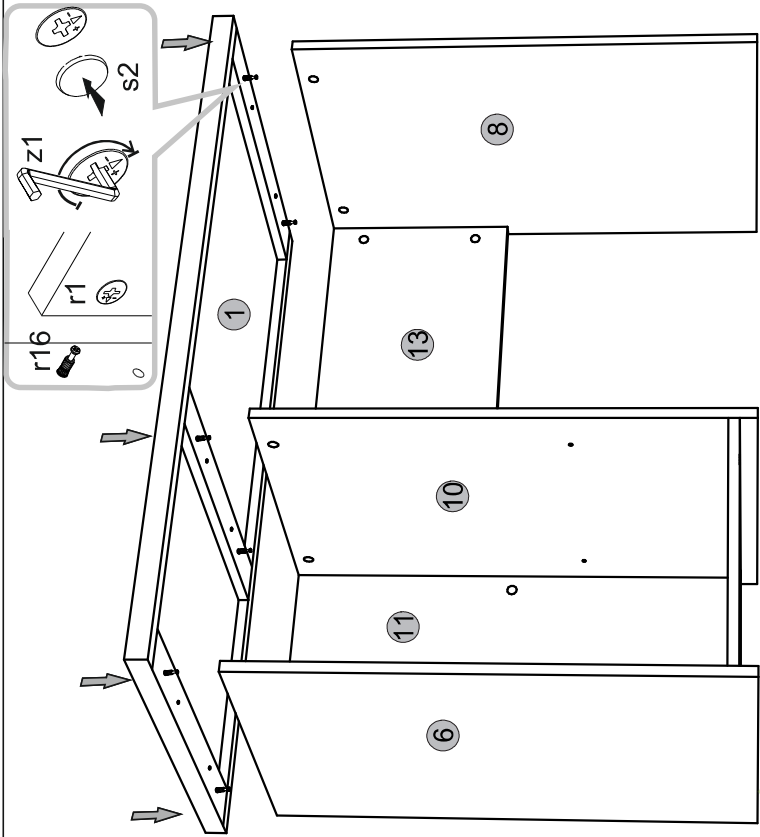


8

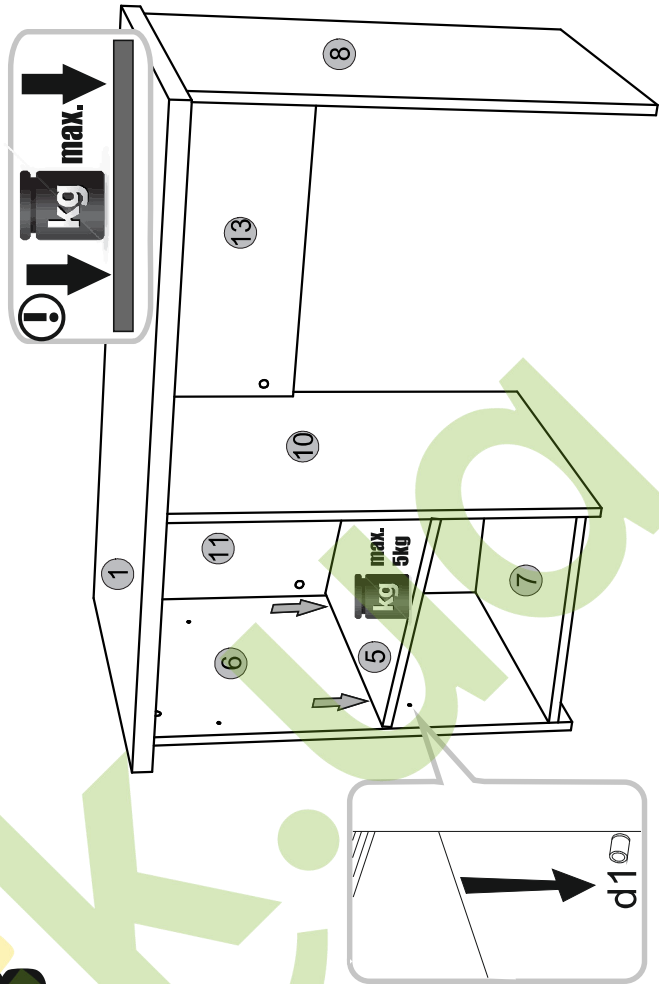


5

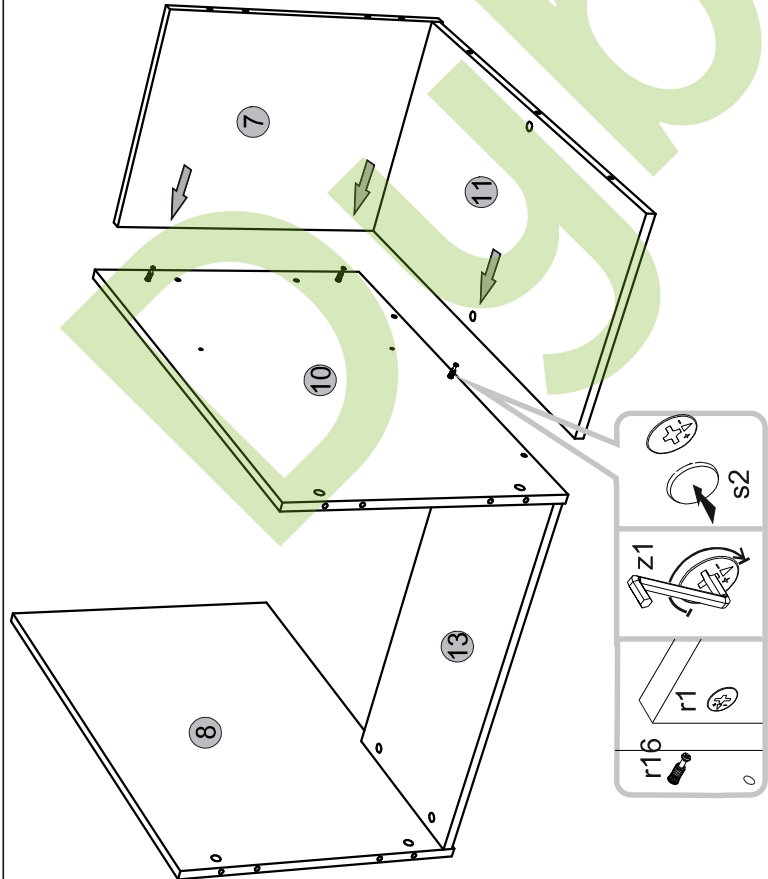

6

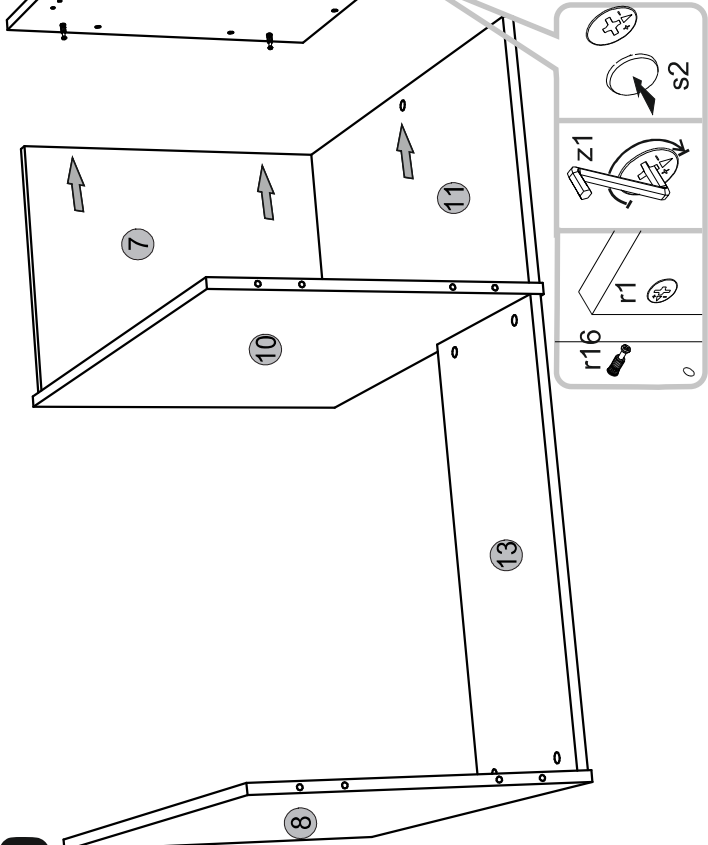

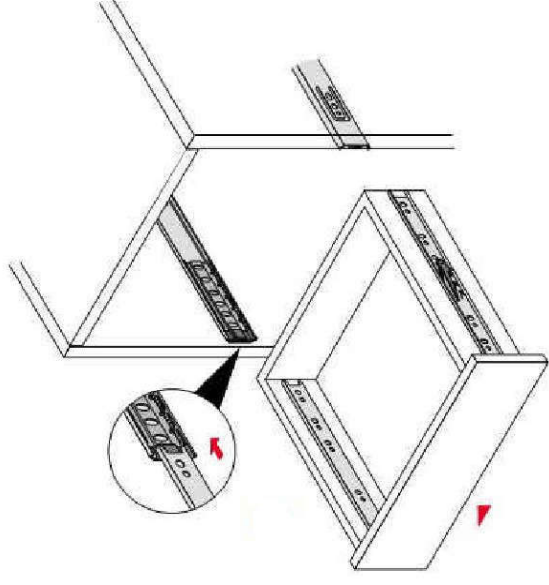

This exploded view diagram illustrates the assembly of a wooden cabinet. The main components are labeled with numbers in circles: 1 (top panel), 2 (left side panel), 3 (right side panel), 4 (bottom panel), 5 (top panel), 6 (left side panel), 7 (right side panel), 8 (bottom panel), 9 (top panel), 10 (left side panel), 11 (right side panel), 12 (bottom panel), 13 (top panel), 14 (left side panel), 15 (right side panel), and 16 (bottom panel). The diagram shows the relative positions of these parts and the sequence of assembly steps indicated by arrows.

Callout boxes provide detailed instructions for specific assembly steps:

- Callout 1 (Top Left):** Shows the assembly of a corner joint using a screwdriver (s1) and a screw (e1). The screw is inserted into a pre-drilled hole (z1) in the side panel (2) and tightened against the top panel (1).
- Callout 2 (Top Right):** Shows the assembly of a corner joint using a screwdriver (s2) and a screw (e2). The screw is inserted into a pre-drilled hole (z2) in the side panel (7) and tightened against the top panel (5).
- Callout 3 (Bottom Left):** Shows the assembly of a corner joint using a screwdriver (s3) and a screw (e3). The screw is inserted into a pre-drilled hole (z3) in the side panel (10) and tightened against the bottom panel (8).
- Callout 4 (Bottom Right):** Shows the assembly of a corner joint using a screwdriver (s4) and a screw (e4). The screw is inserted into a pre-drilled hole (z4) in the side panel (13) and tightened against the bottom panel (12).

The diagram also includes various other labels for parts and assembly points, such as p42, p25, and c412.030, which likely refer to specific hardware or assembly instructions.

