
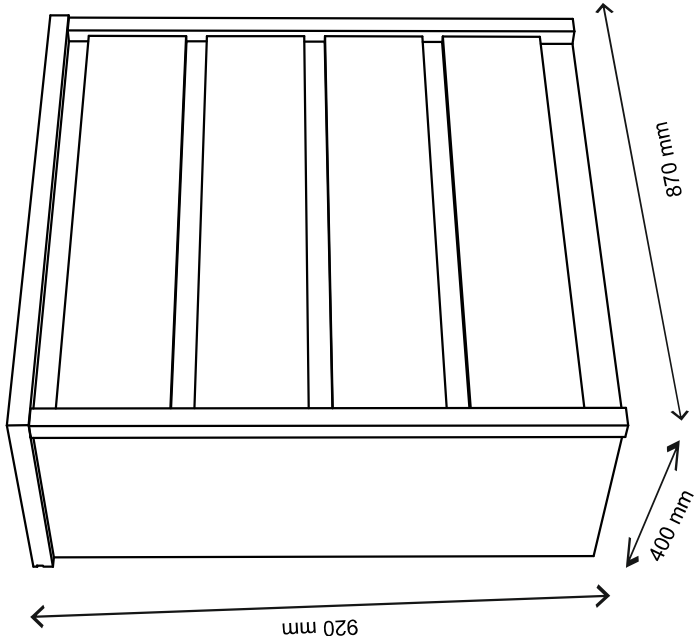
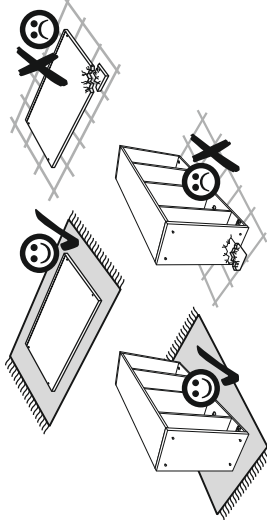
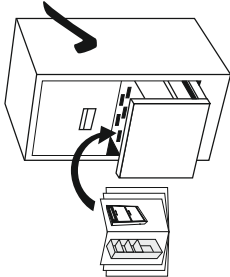
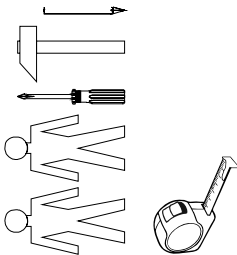
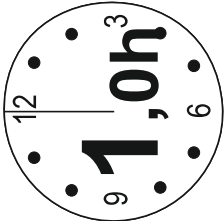



Installation manual

NORTON: KOM_4S

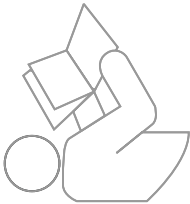


Element symbol	Dimensions				Code	Package
1	884	398	16/32	1	NK-101	1/1
2	884	398	16/32	1	NK-102	1/1
3	870	402	16/32/32	1	NK-201	2/2
4	70	804	30	1	NK-401	1/1
5	70	804	30	3	NK-402	1/1
6	804	70	16	1	NK-403	1/1
7	746	100	16	1	NK-501	2/2
8	746	120	16	3	NK-502	2/2
9	746	100	16	1	NK-503	2/2
10	746	120	16	3	NK-504	2/2
11	350	120	16	3	NK-505	2/2
12	350	100	16	1	NK-506	2/2
13	350	120	16	3	NK-507	2/2
14	350	100	16	1	NK-508	2/2
15	170	798	16	1	NK-001	1/1
16	170	798	16	3	NK-002	1/1
17	70	804	16	1	NK-404	1/1
18	60	318	16	4	NK-405	1/1
19	855	411	3	2	NK-601	1/1
20	760	332	3	4	NK-602	2/2


10x	10x	10x	1x
r16	s2	s2	z1
24x	4x	10x	r1
s1	L 350mm	32x	p25
24x	8x	p21	40x
e1	4x	k1	l1
38x	4x	f1	




1

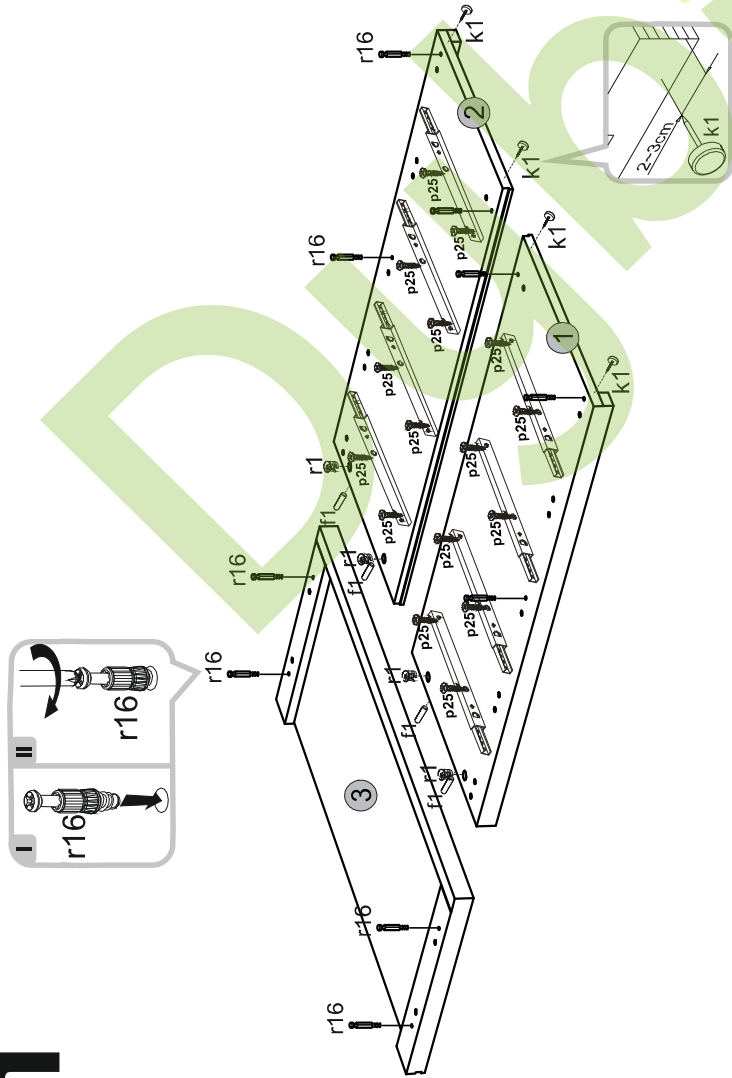


3

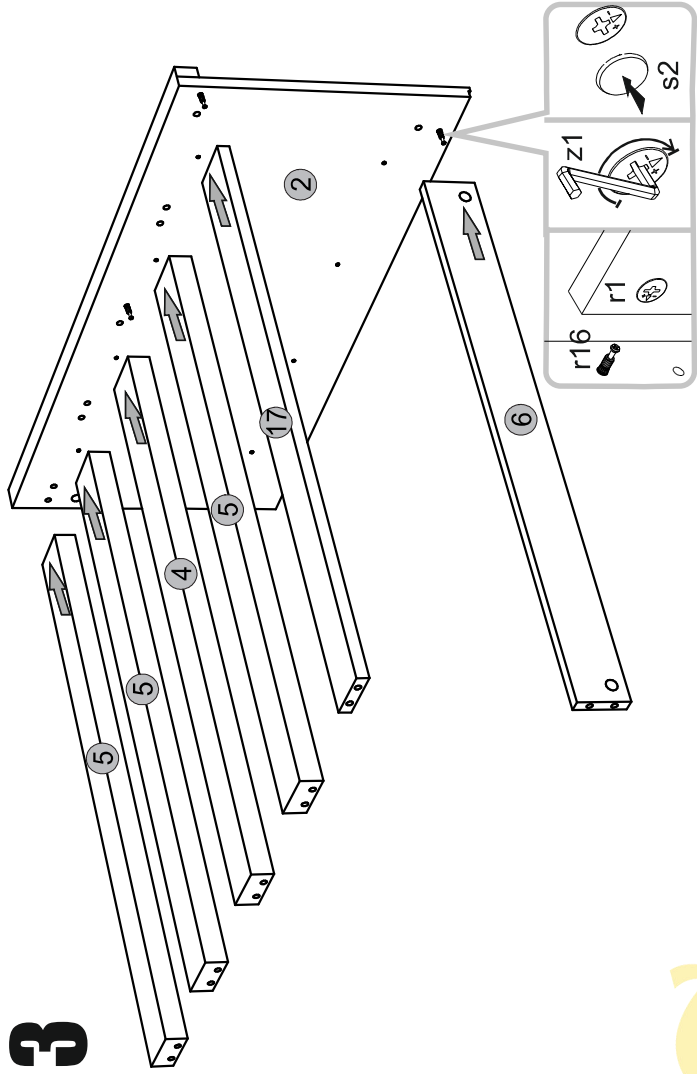

2

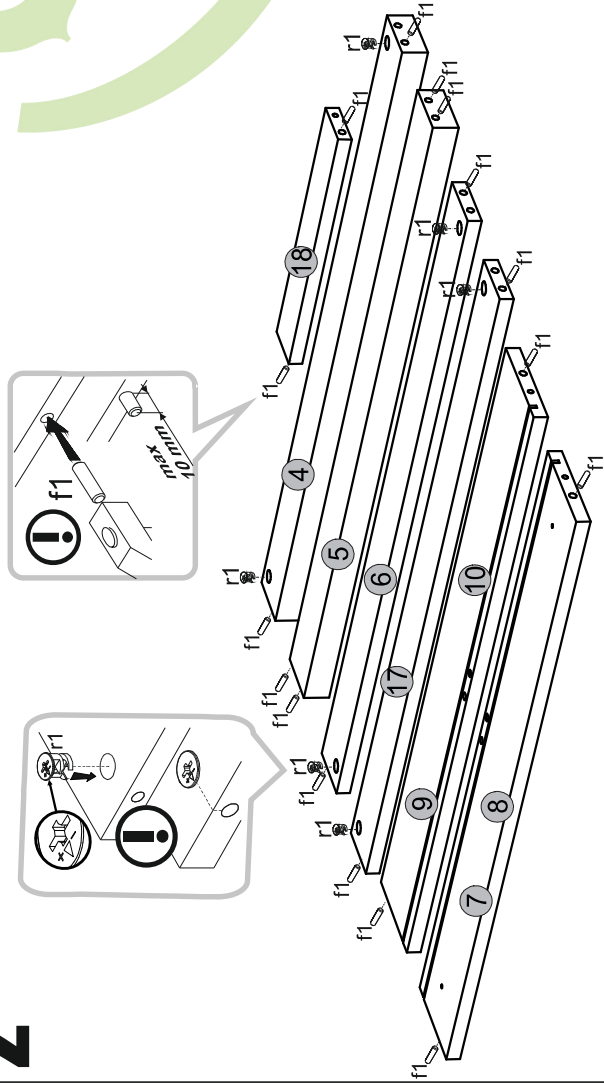


4

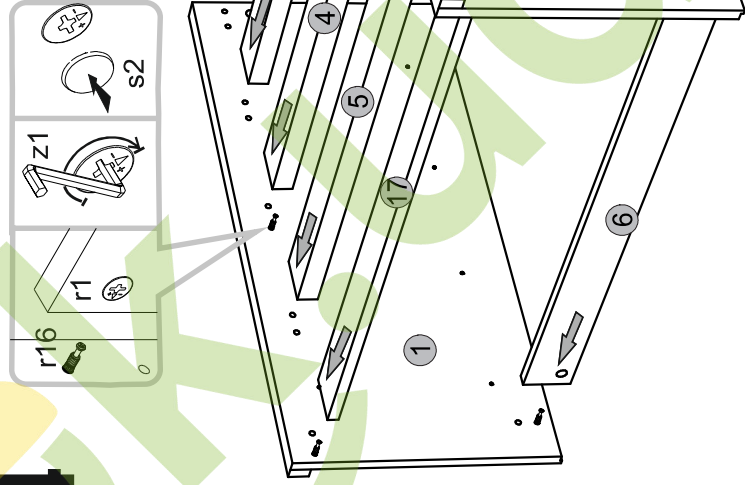

5

! a=b

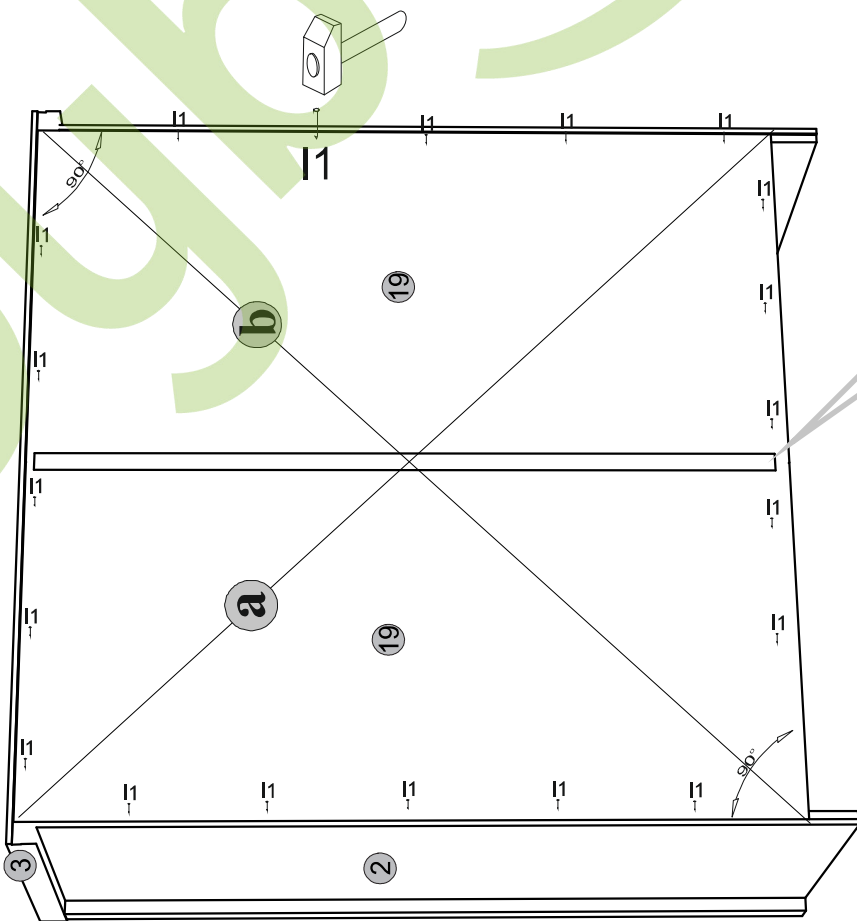

6

