

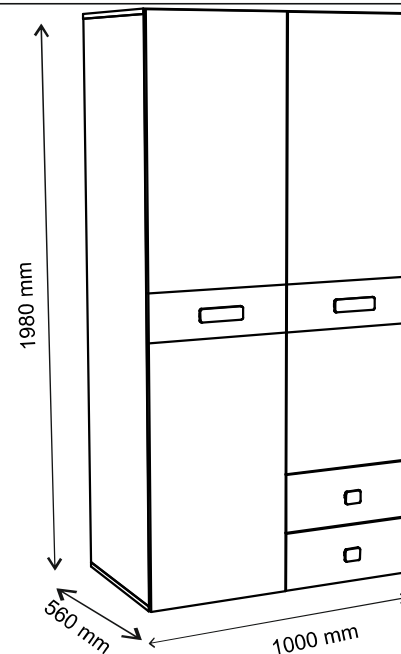
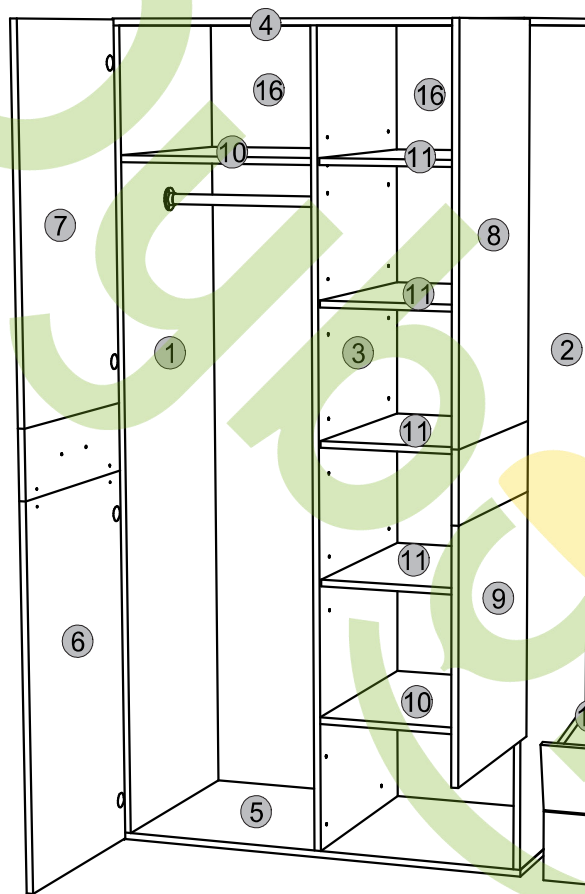
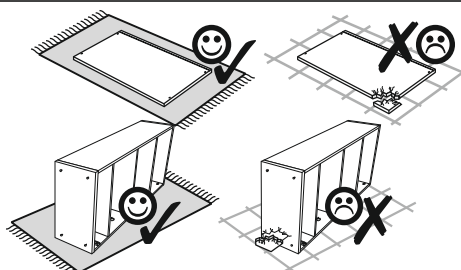

















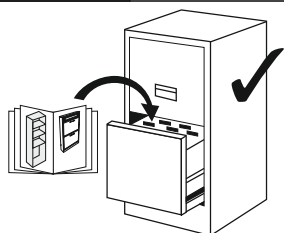


Installation manual


PAMP: Wardrobe 2D2S

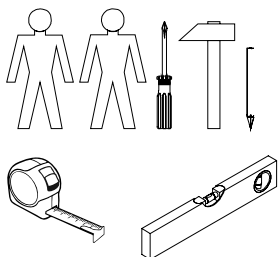


Element symbol	Dimensions				Code	Package
1	1928	544	16	1	SZF 2D2S.001	1/1
2	1928	544	16	1	SZF 2D2S.002	1/1
3	1928	541	16	1	SZF 2D2S.003	1/1
4	1000	544	16	1	SZF 2D2S.004	2/2
5	1000	544	16	1	SZF 2D2S.005	2/2
6	897	496	16	1	SZF 2D2S.006	3/3
7	1059	496	16	1	SZF 2D2S.007	3/3
8	1059	496	16	1	SZF 2D2S.008	3/3
9	487	496	16	1	SZF 2D2S.009	3/3
10	475	541	16	2	SZF 2D2S.010	2/2
11	475	530	16	4	SZF 2D2S.011	2/2
12	500	120	16	2	SZF 2D2S.012	2/2
13	500	120	16	2	SZF 2D2S.013	2/2
14	417	120	16	2	SZF 2D2S.014	2/2
15	496	202	16	2	SZF 2D2S.018	1/1
16	1946	492	3	2	SZF 2D2S.015	1/1
17	431	498	3	2	SZF 2D2S.016	1/1




1

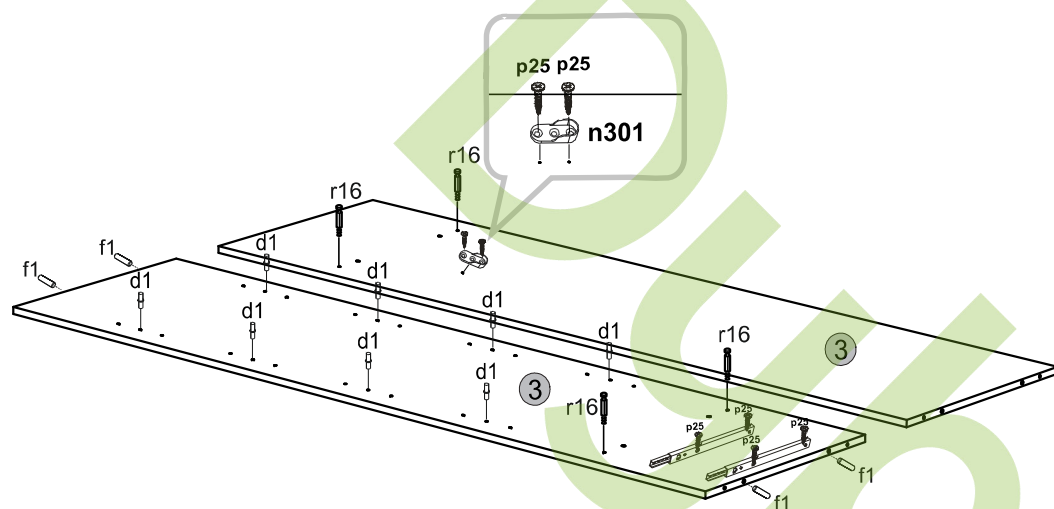


2

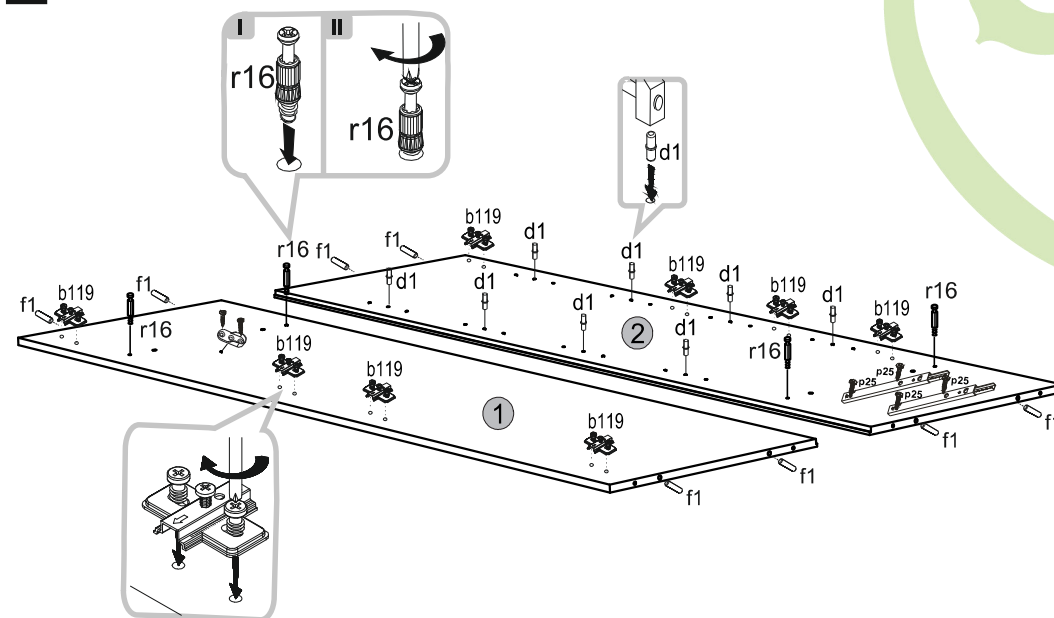


3

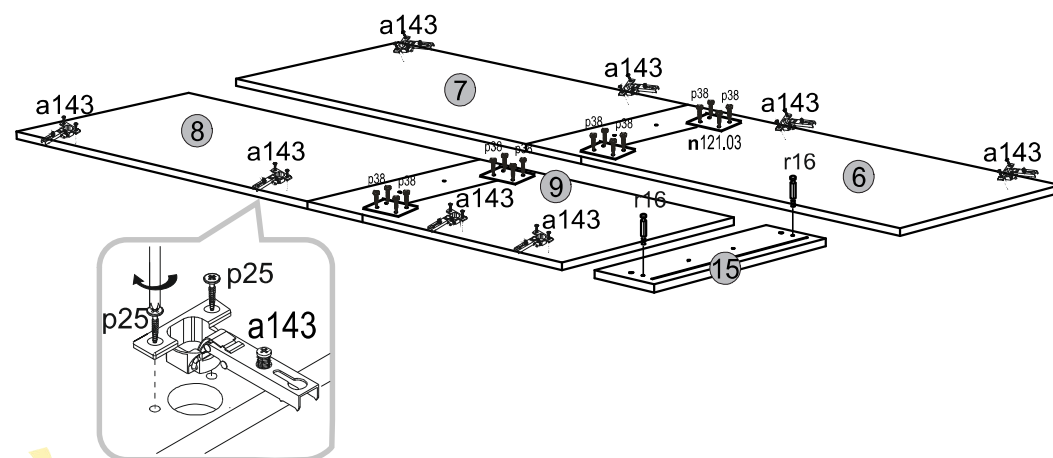


4

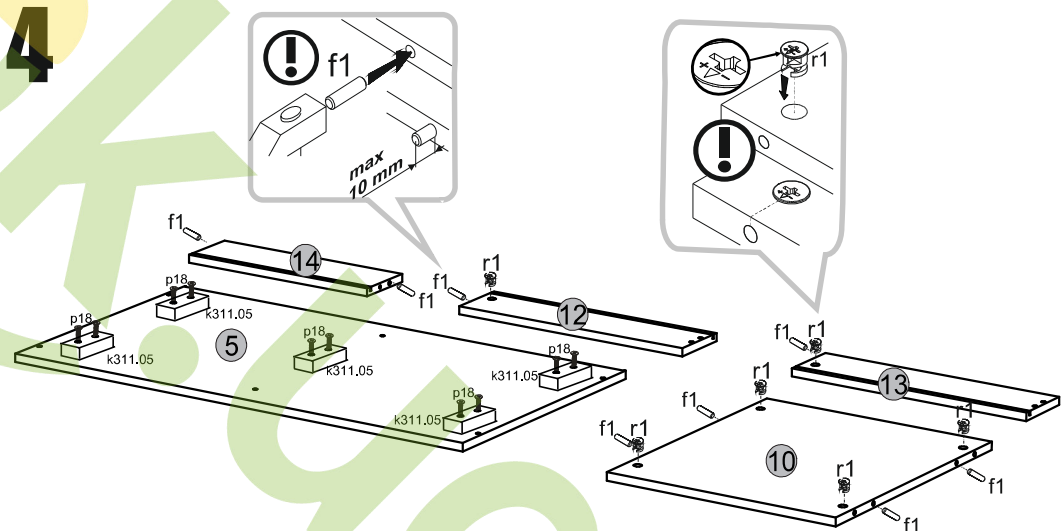


5

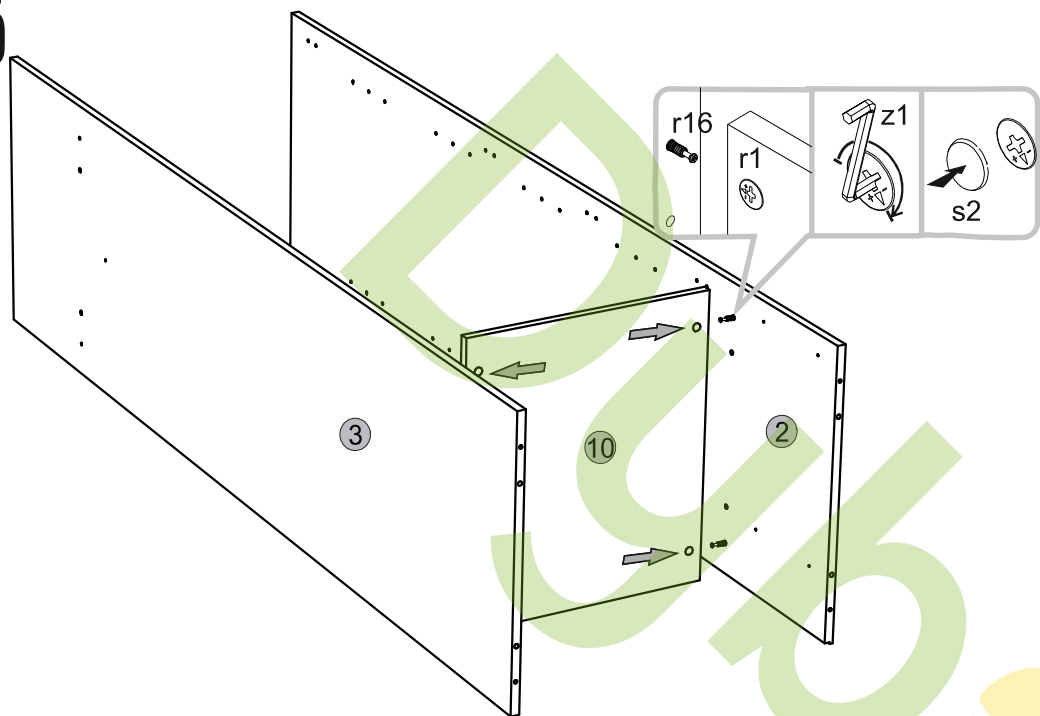

7

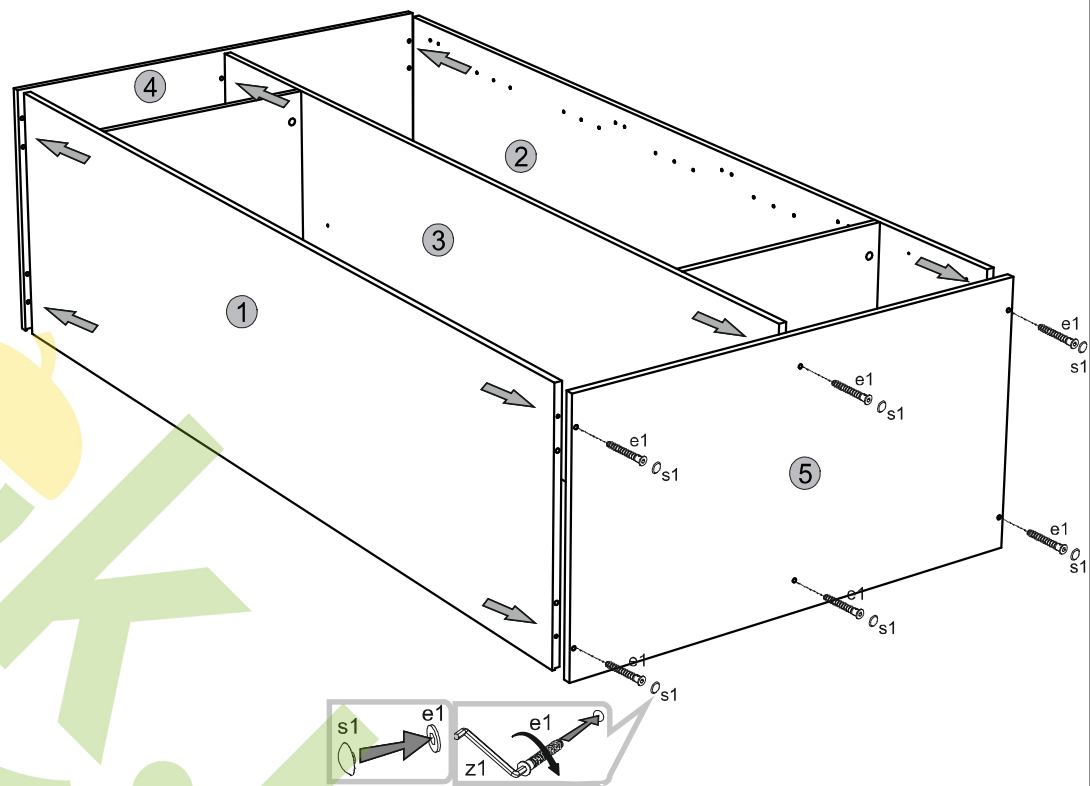

6

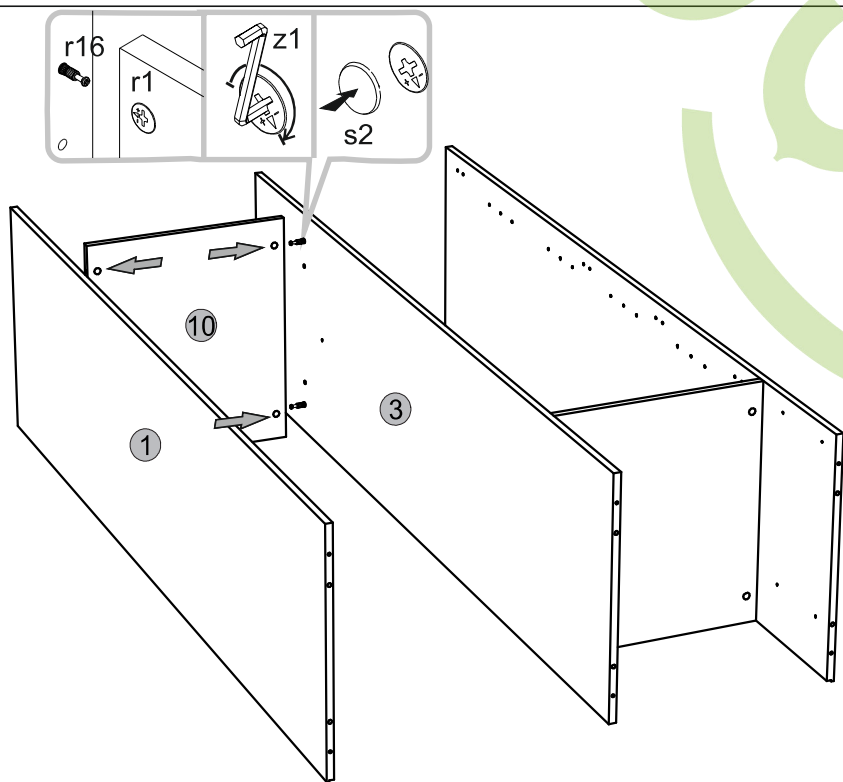



Technical drawing of a rectangular box (Fig. 16) showing dimensions and assembly details. The box is divided into two main sections, labeled 'a' and 'b', which are separated by a vertical line. The dimensions are indicated as follows:

- Overall width: 260
- Overall height: 260
- Section 'a' width: 11
- Section 'b' width: 11
- Section 'a' height: 11
- Section 'b' height: 11
- Section 'a' depth: 11
- Section 'b' depth: 11
- Section 'a' thickness: 11
- Section 'b' thickness: 11
- Section 'a' material: p52
- Section 'b' material: n260
- Section 'a' angle: 90°
- Section 'b' angle: 90°



The drawing includes a warning symbol (exclamation mark inside a circle) and the text 'a=b' in a box. A detail view shows a screw (p52) and a nut (n260) being used to secure the box. A small inset shows a detail of the box's corner.

Technical diagram of the KUBA wardrobe showing weight limits and assembly steps:

- 1**: Side panel
- 2**: Shelf
- 3**: Hanging rod
- 4**: Top panel
- kg max 15kg**: Weight limit for the hanging rod.
- kg max 5kg**: Weight limit for the shelves.
- n14**: Number of shelves.

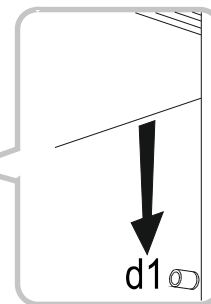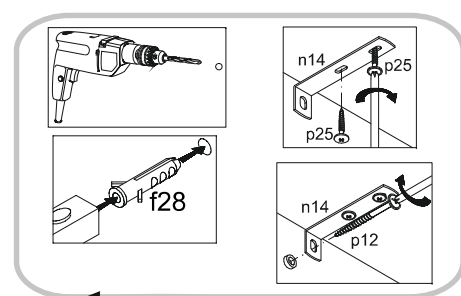

10

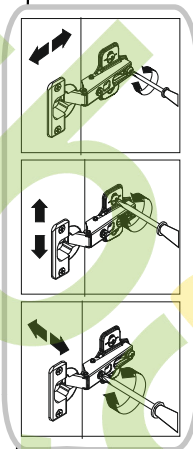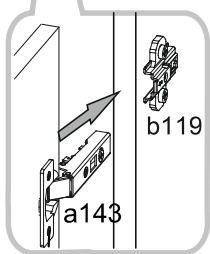

11

