

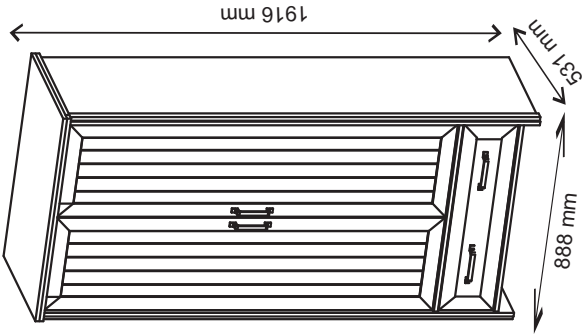
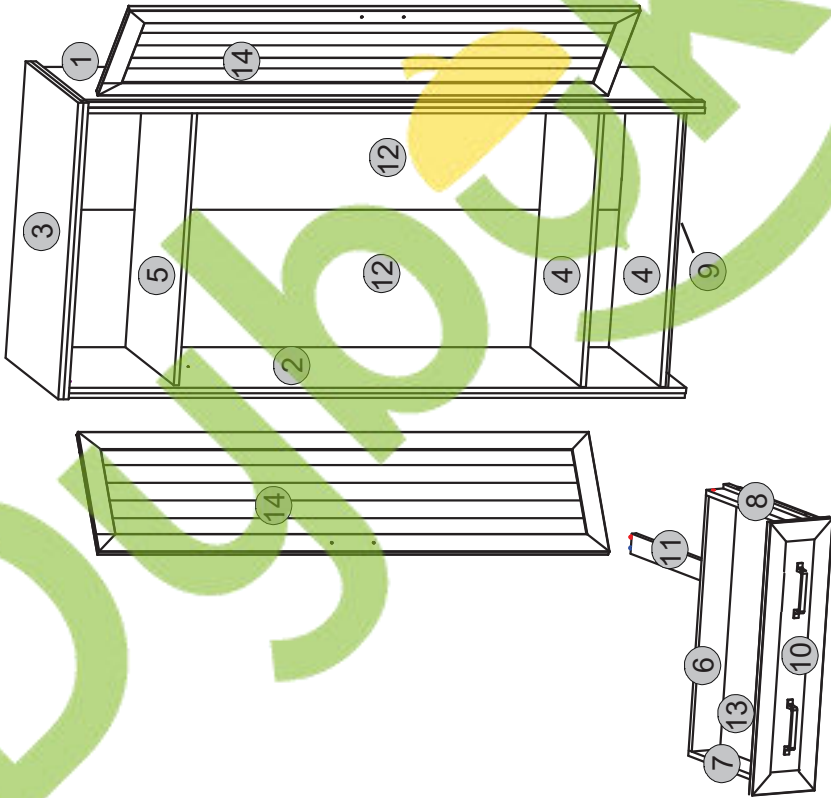
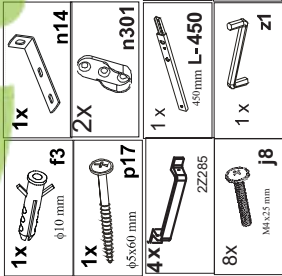
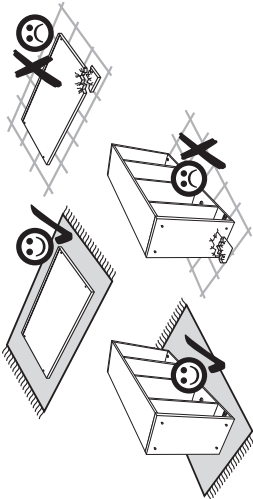
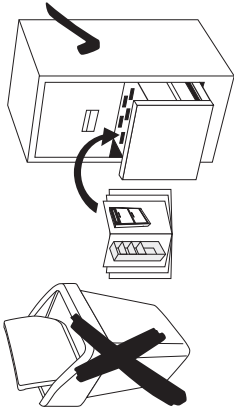
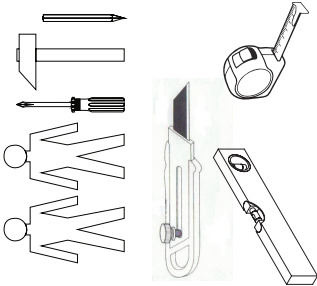


Instalation manual


SZAFA VERNE 6

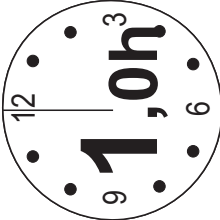


Element symbol	Dimensions	Code	Package
1	1884 531	1 SZF_2D1S_vagonka.001	1/4
2	1884 531	1 SZF_2D1S_vagonka.002	1/4
3	888 538	1 SZF_2D1S_vagonka.003	2/4
4	822 517	2 SZF_2D1S_vagonka.004	2/4
5	822 495	1 SZF_2D1S_vagonka.005	2/4
6	764 120	1 SZF_2D1S_vagonka.006	2/4
7	450 120	1 SZF_2D1S_vagonka.007	2/4
8	450 120	1 SZF_2D1S_vagonka.008	2/4
9	822 60	1 SZF_2D1S_vagonka.009	2/4
10	816 220	1 SZF_2D1S_vagonka.010	4/4
11	60 434	2 SZF_2D1S_vagonka.011	2/4
12	1849 420	2 SZF_2D1S_vagonka.012	1/4
13	782 452	1 SZF_2D1S_vagonka.013	2/4
14	1558 407	2 SZF_2D1S_vagonka.014	3/4
15	817	1	2/4

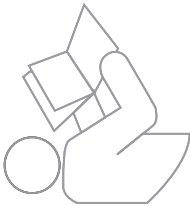


1

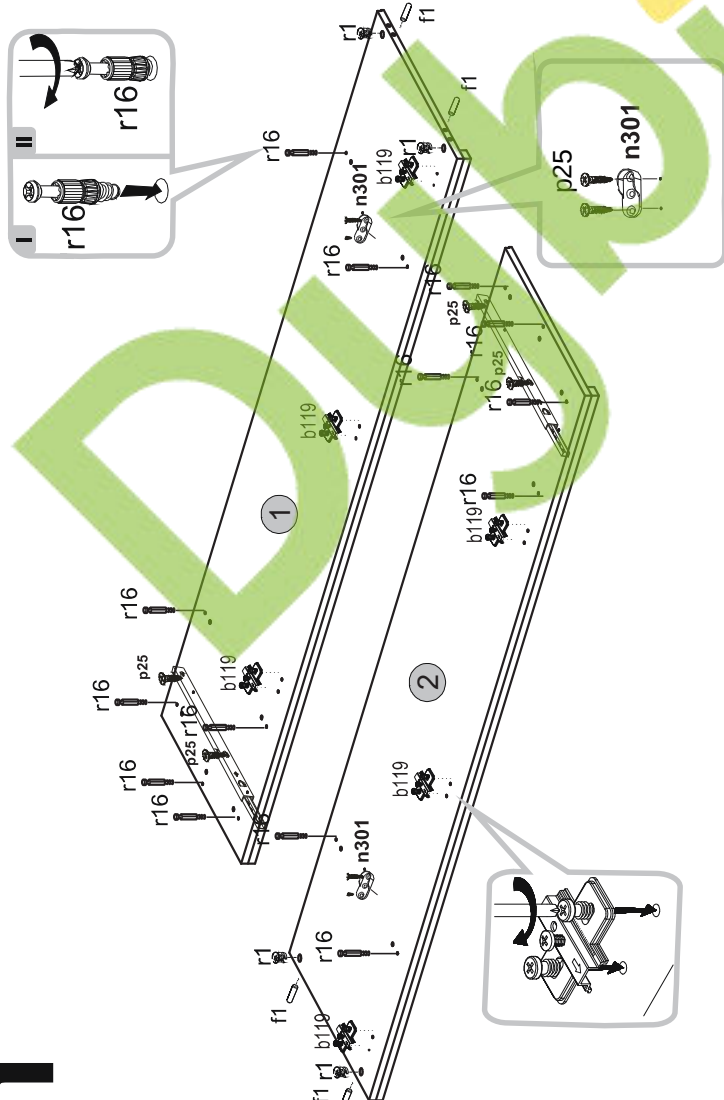


3

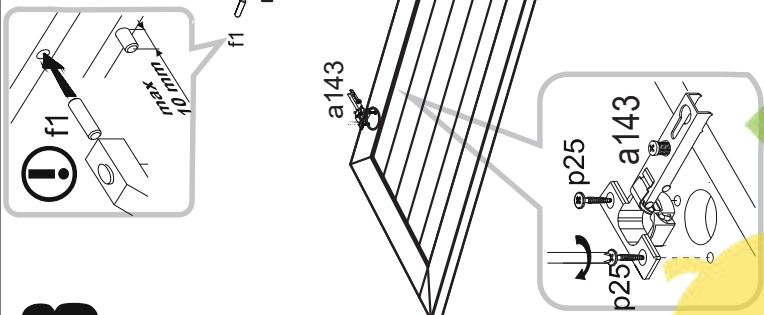


2

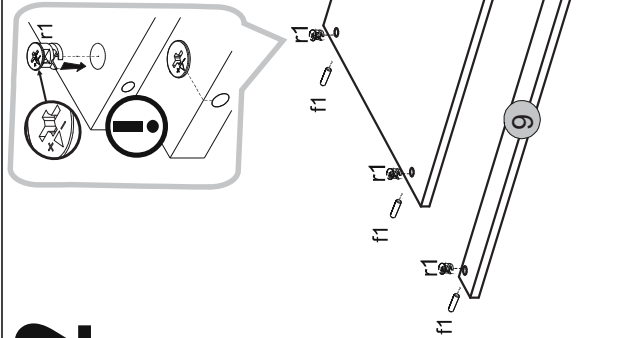

4

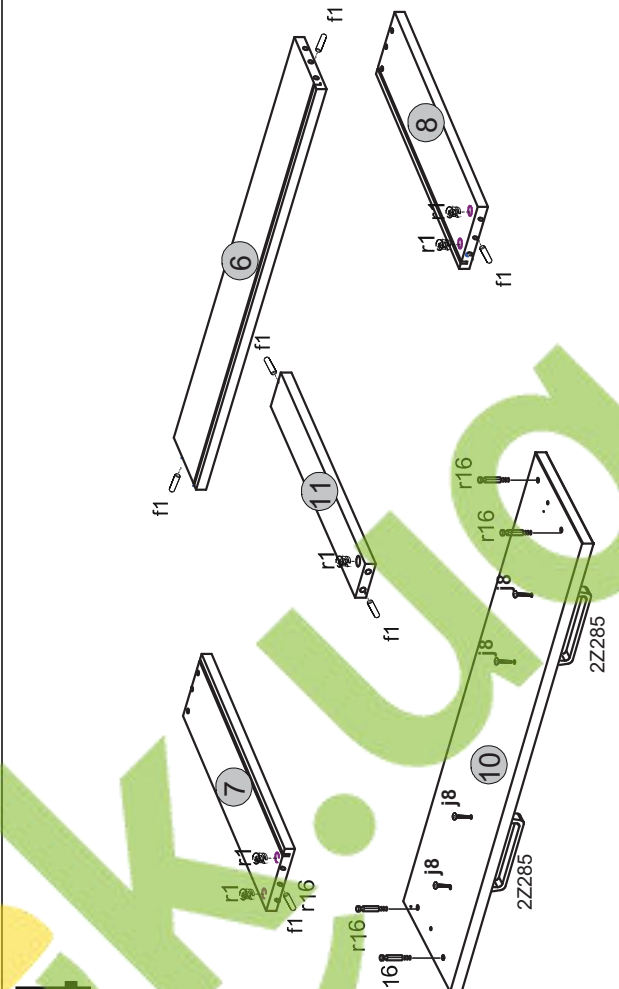


5

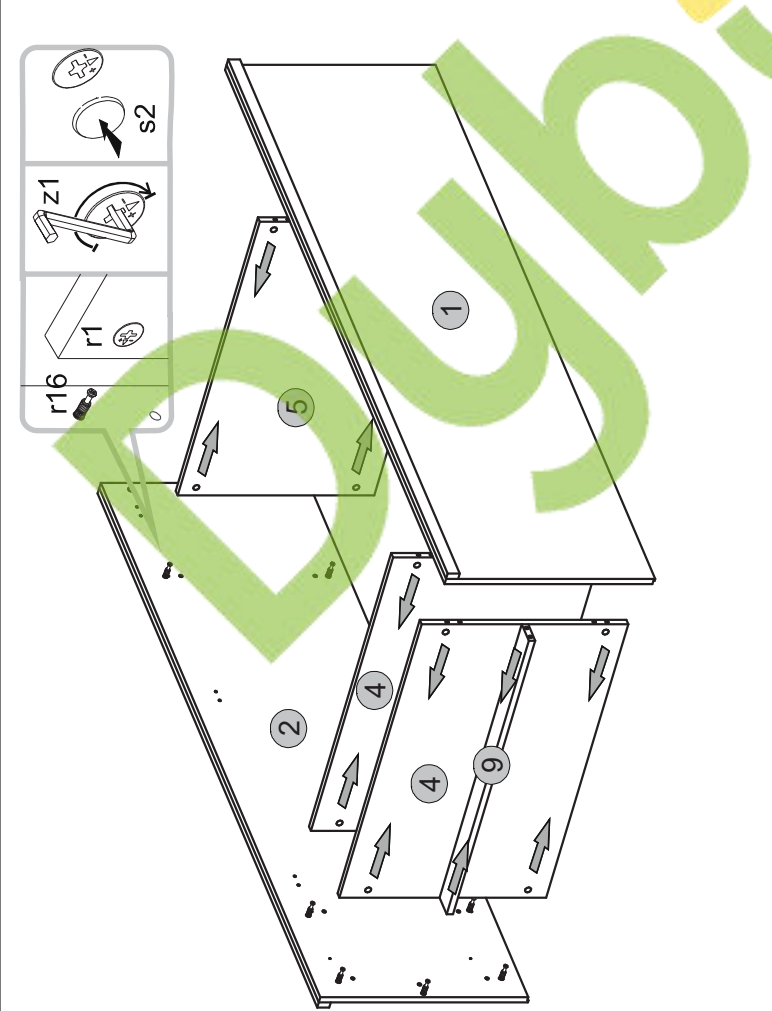


7







! a=b

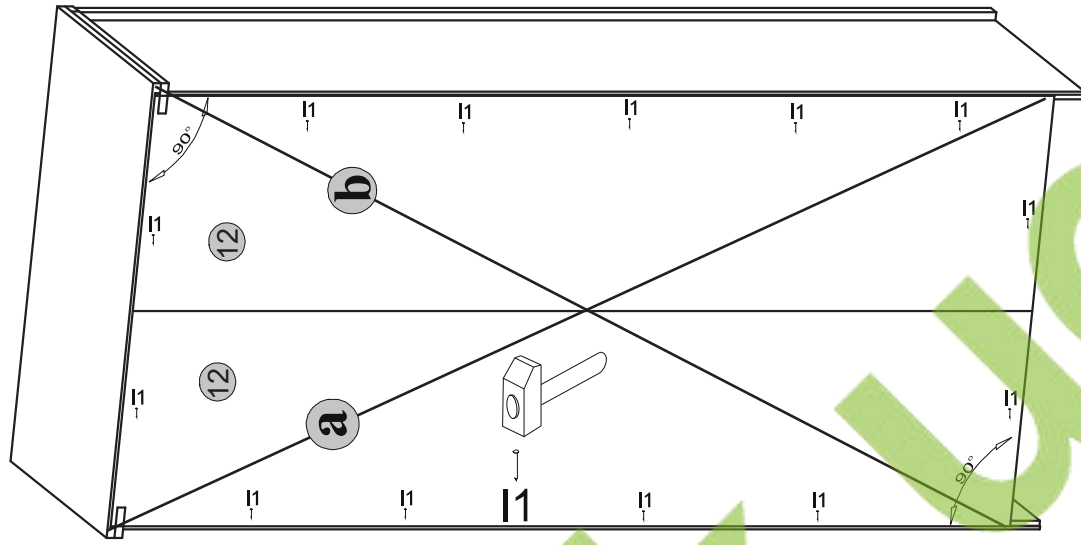

6

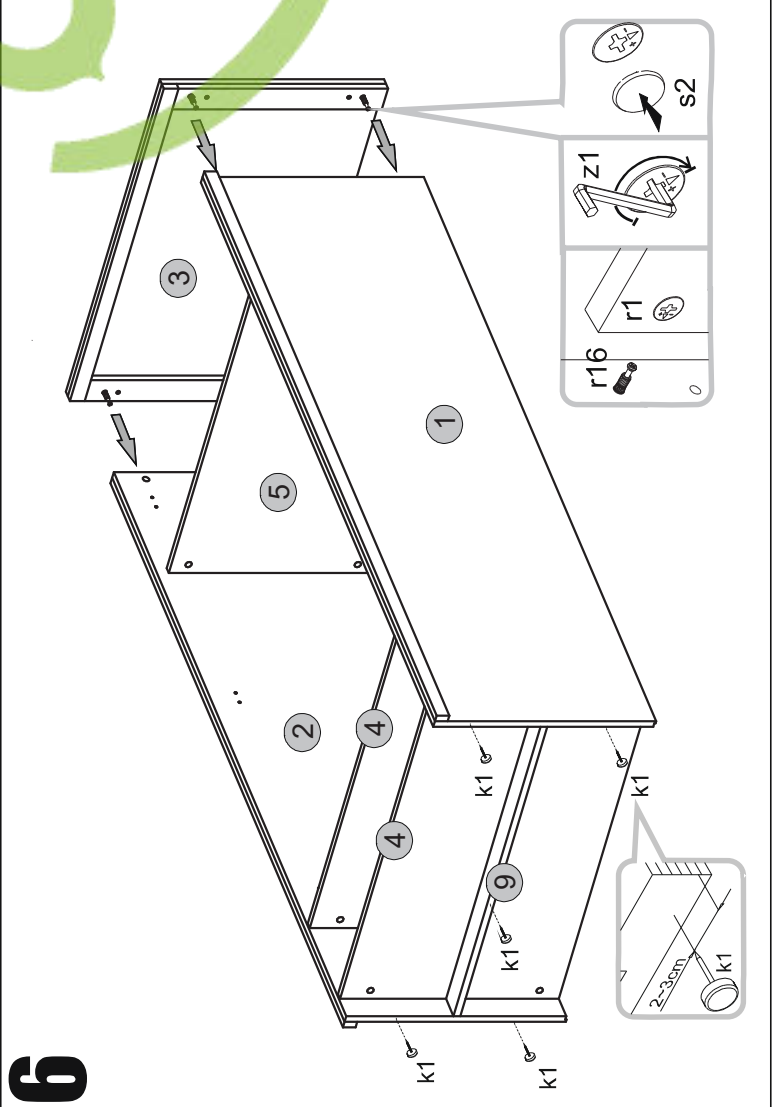

8

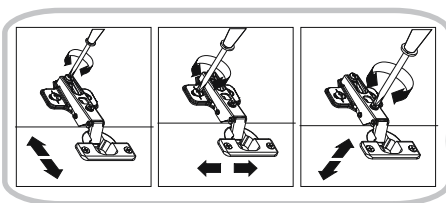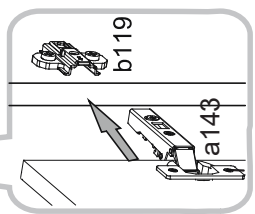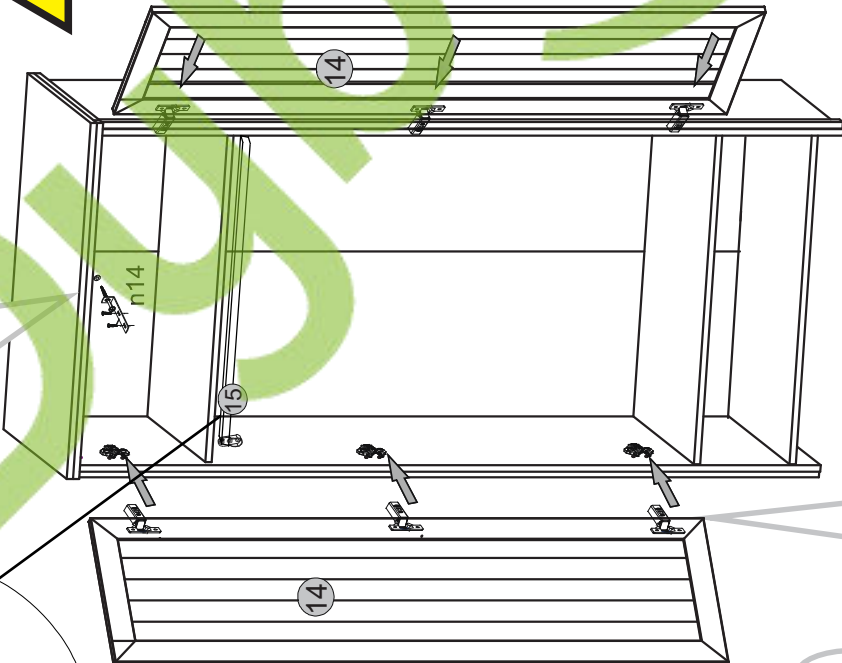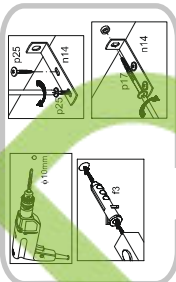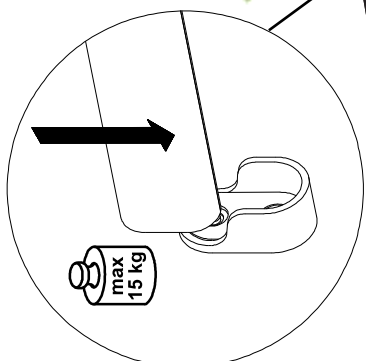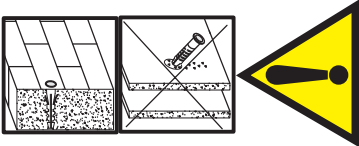

9

