


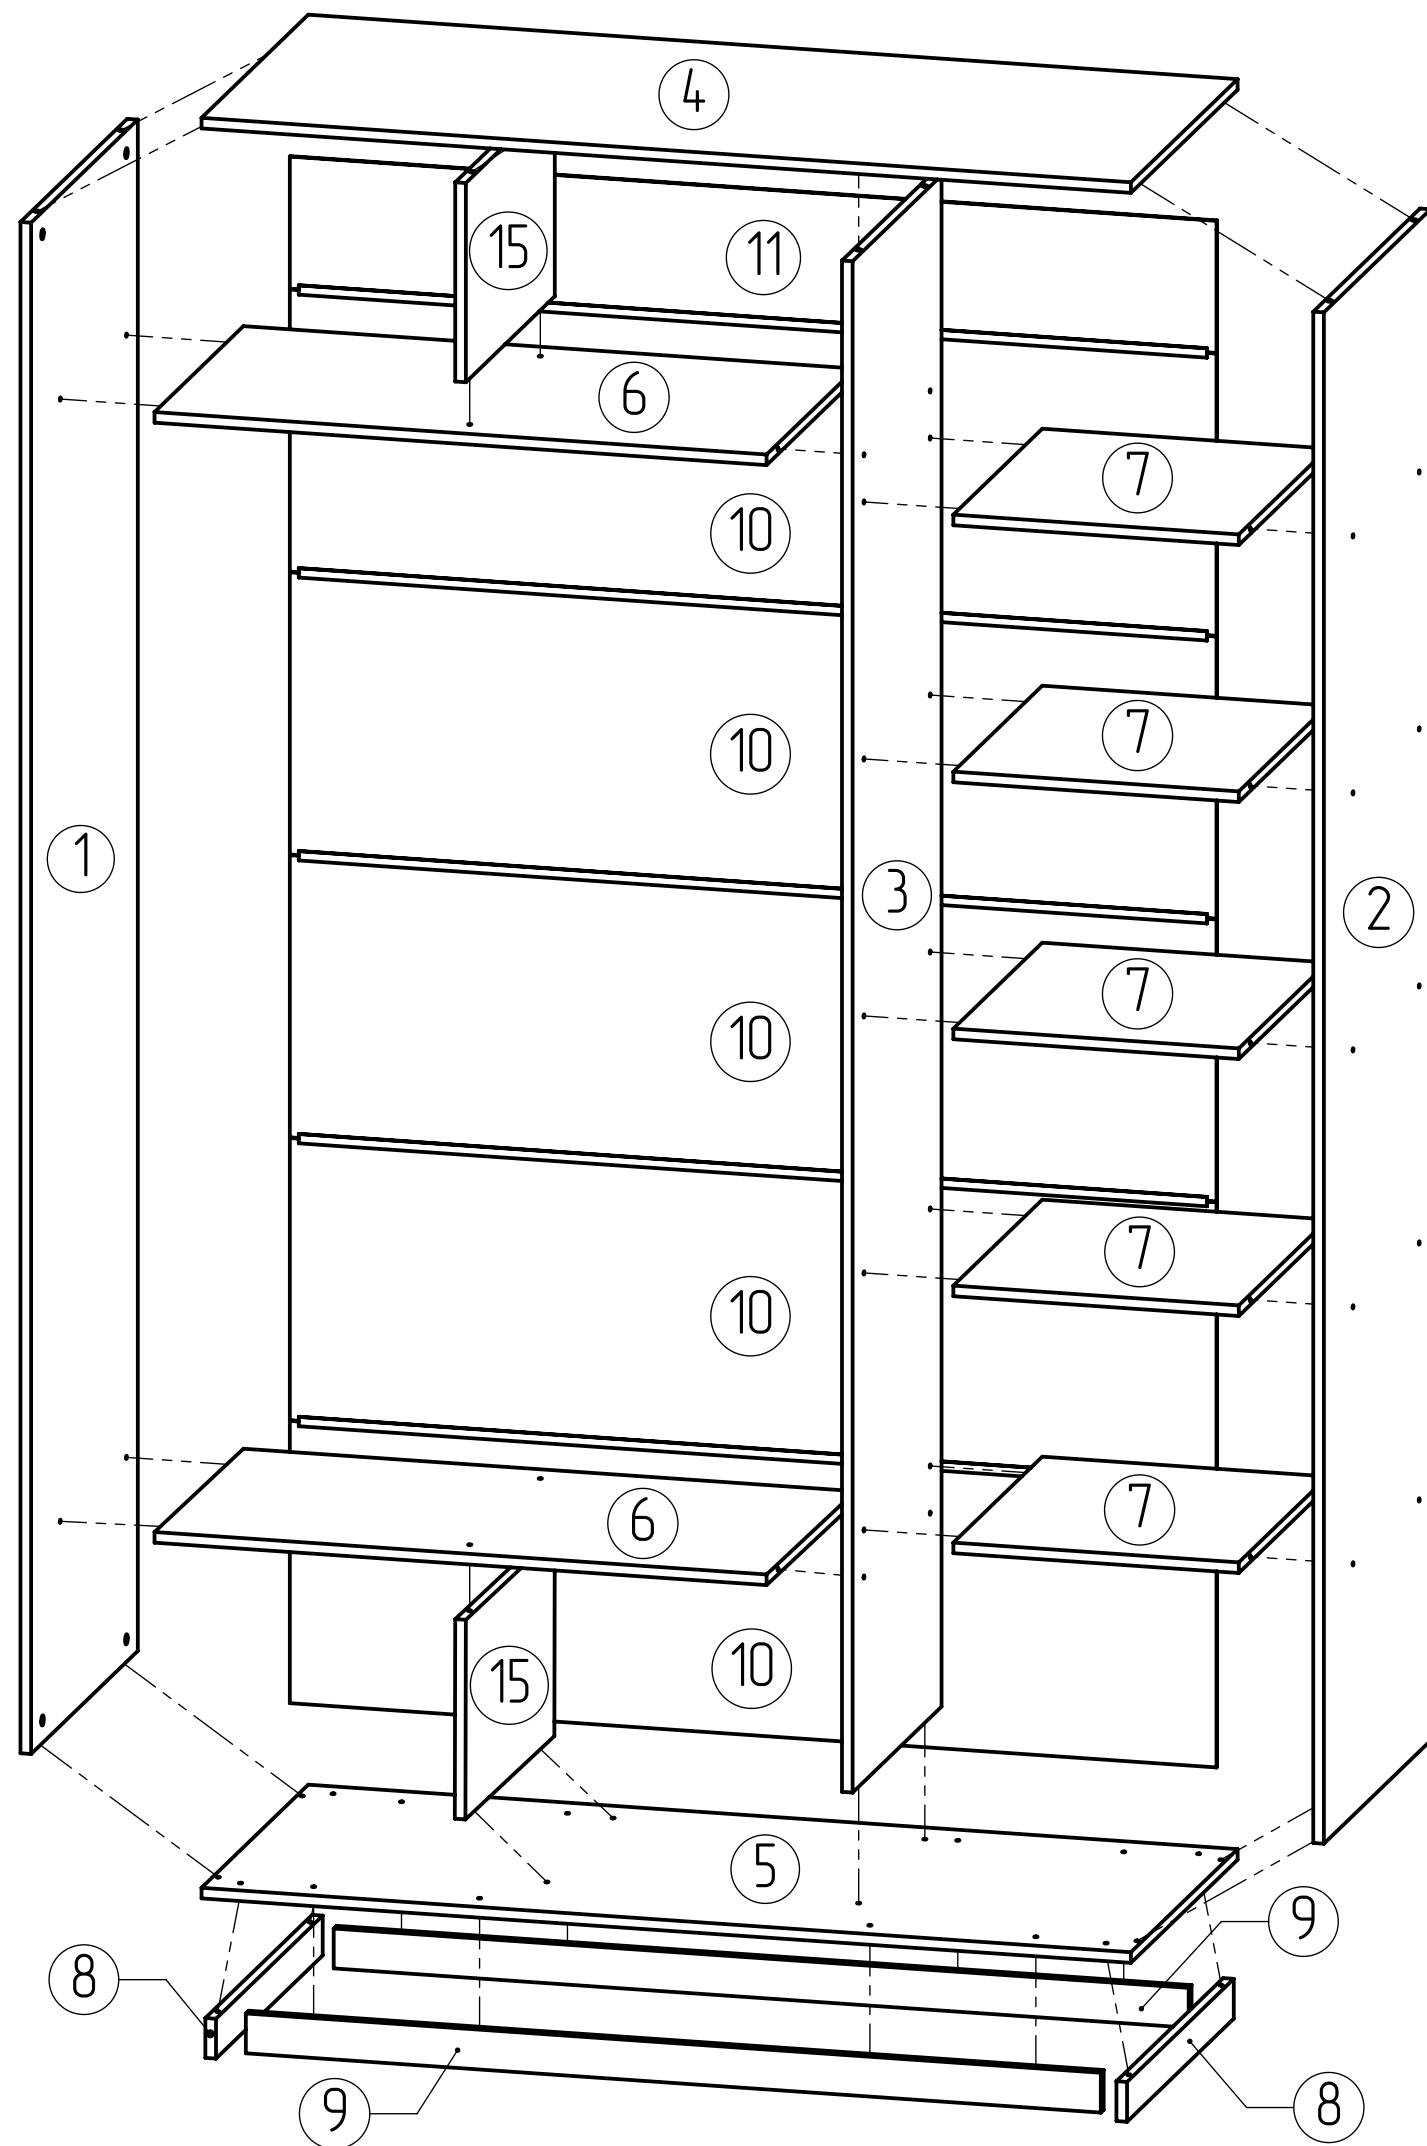

ШК 240x45x140-180/SDW 240x45x140-180

№	240x45x140	240x45x150	240x45x160	240x45x170	240x45x180	x
①	2306x450x16	2306x450x16	2306x450x16	2306x450x16	2306x450x16	1
②	2306x450x16	2306x450x16	2306x450x16	2306x450x16	2306x450x16	1
③	2306x350x16	2306x350x16	2306x350x16	2306x350x16	2306x350x16	1
④	1400x450x16	1500x450x16	1600x450x16	1700x450x16	1800x450x16	1
⑤	1400x450x16	1500x450x16	1600x450x16	1700x450x16	1800x450x16	1
⑥	922x350x16	1022x350x16	1122x350x16	1052x350x16	1152x350x16	2
⑦	430x350x16	430x350x16	430x350x16	600x350x16	600x350x16	5
⑧	450x60x16	450x60x16	450x60x16	450x60x16	450x60x16	2
⑨	1288x60x16	1388x60x16	1488x60x16	1588x60x16	1688x60x16	2
⑩	1396x424x2.5	1496x424x2.5	1596x424x2.5	1696x424x2.5	1796x424x2.5	5
⑪	1396x200x2.5	1496x200x2.5	1596x200x2.5	1696x200x2.5	1796x200x2.5	1
⑫	2264x697	2264x747	2264x797	2264x847	2264x897	2
⑬	L=1366	L=1466	L=1566	L=1666	L=1766	1
⑭	L=1366	L=1466	L=1566	L=1666	L=1766	1
⑮	300x350x16	300x350x16	300x350x16	300x350x16	300x350x16	1










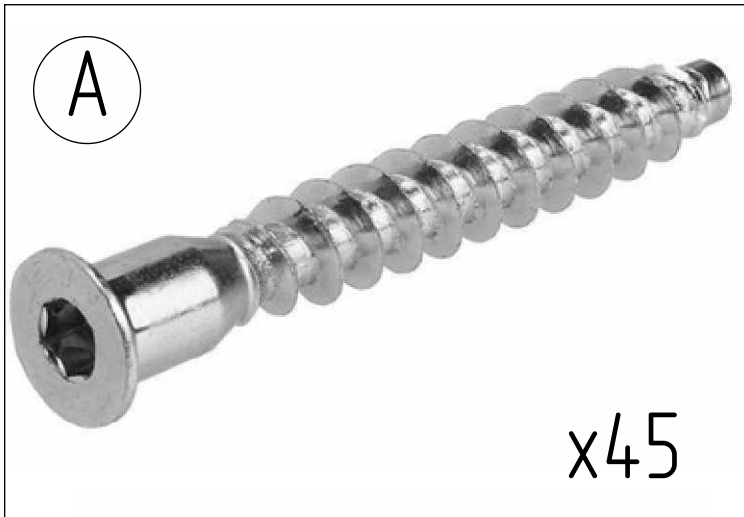
A  x45	A1  x45	B  x28	C  x12
D  x70	E  x16	E1  x16	F  x9.40
G  x2	H  x2	I  x10	J  x8
L  x1			




Diagram 5 illustrates the step of attaching the top panel to the frame. The top panel is shown being lowered into place, guided by a curved arrow. A circular inset provides a detailed view of the corner joint, showing a screw being tightened to secure the panel to the frame's corner bracket.

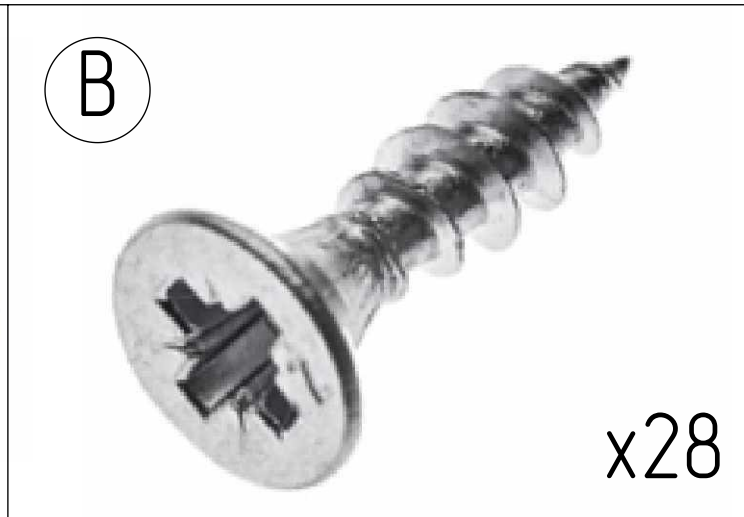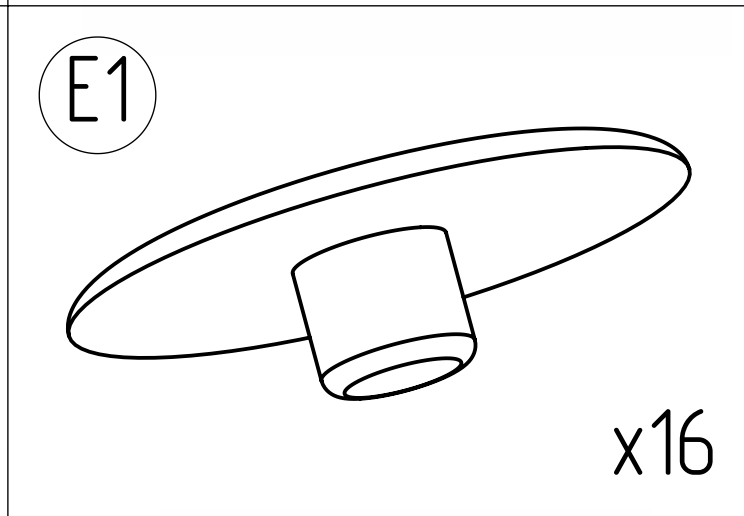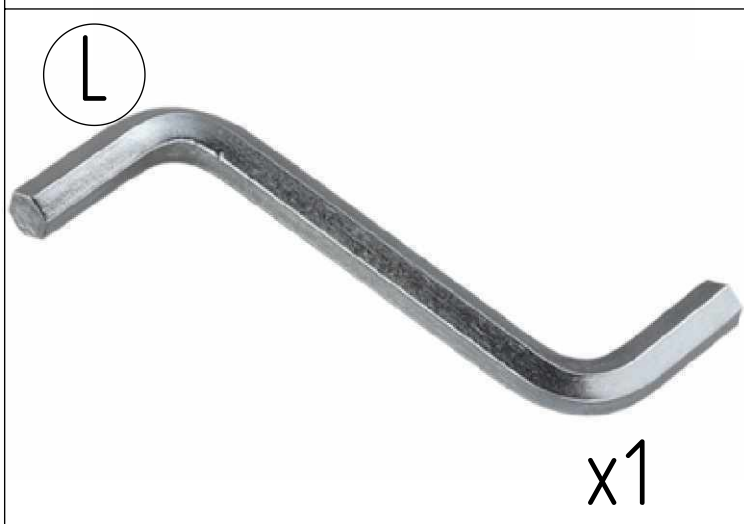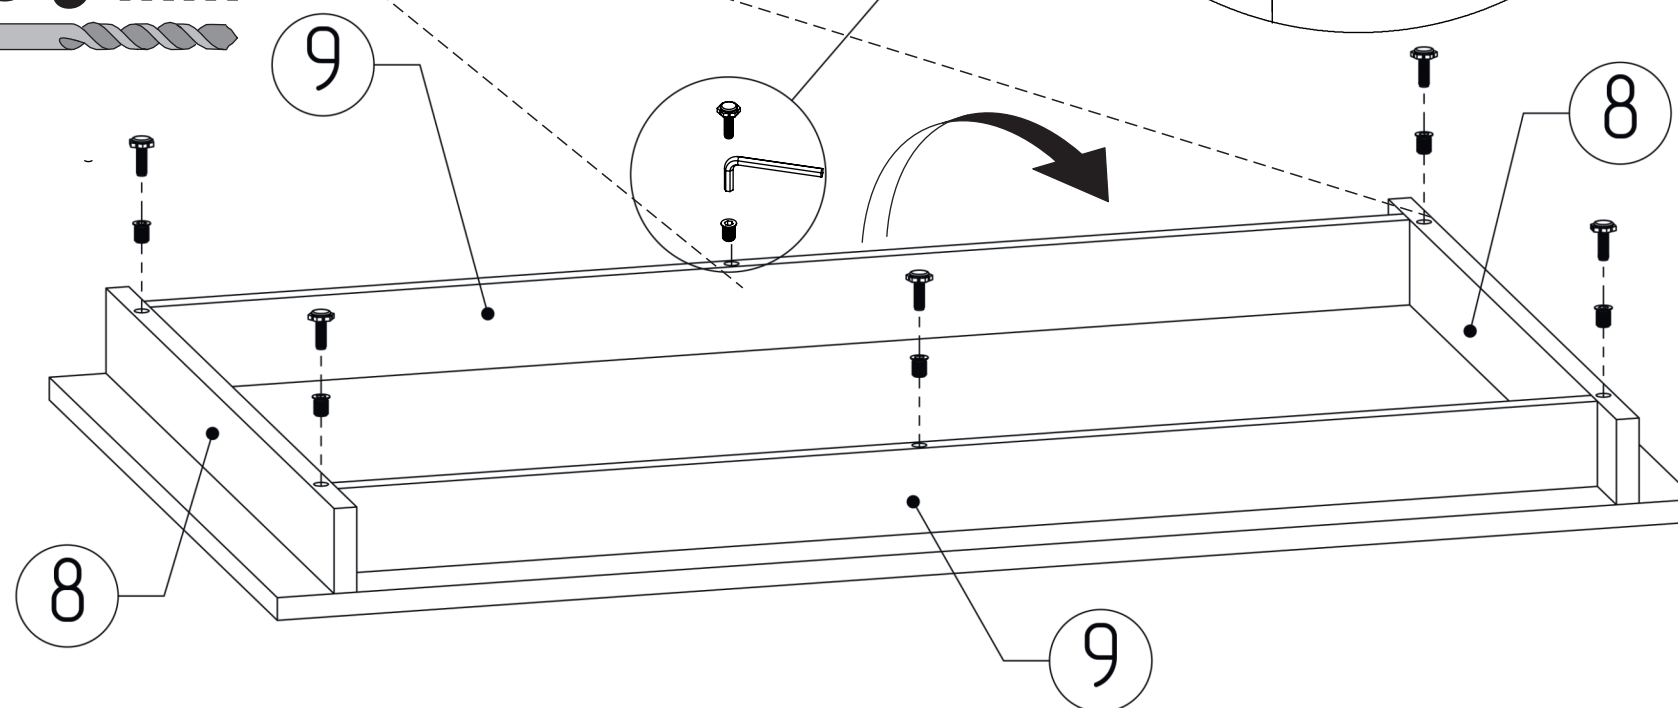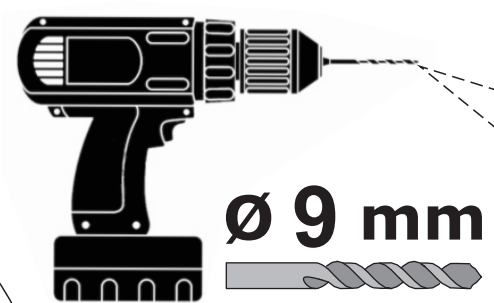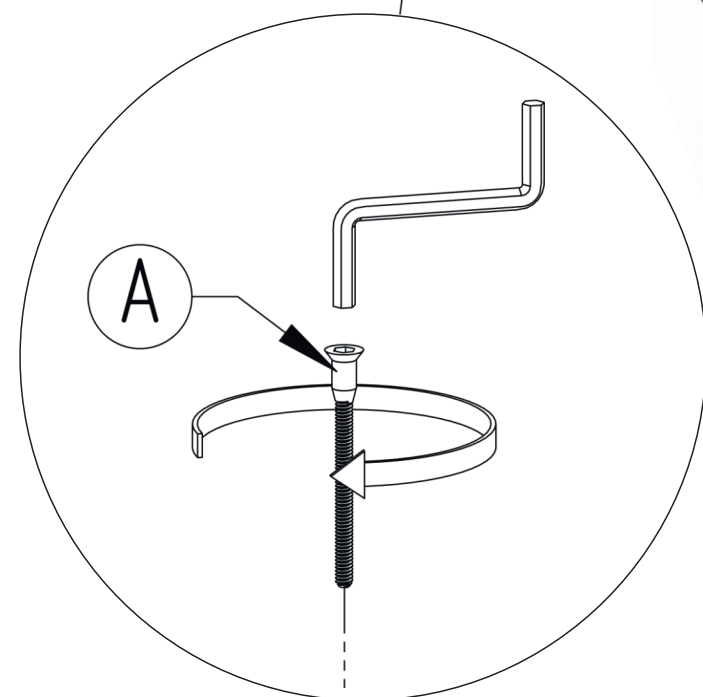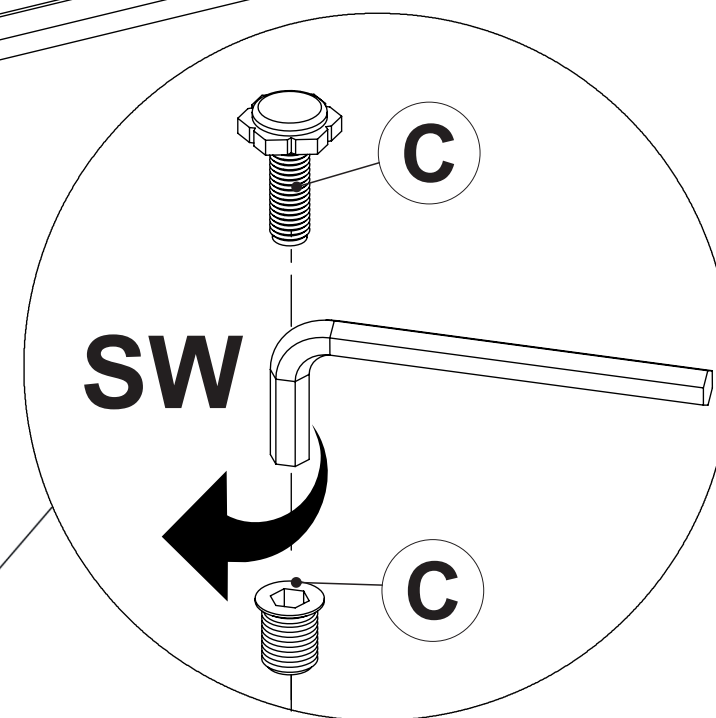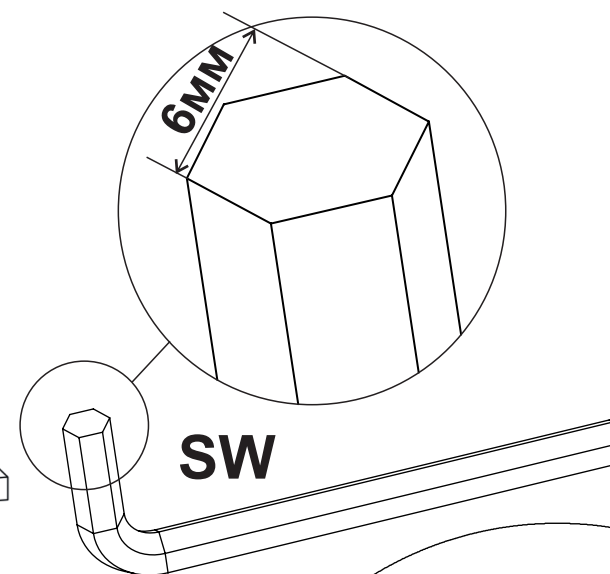



2

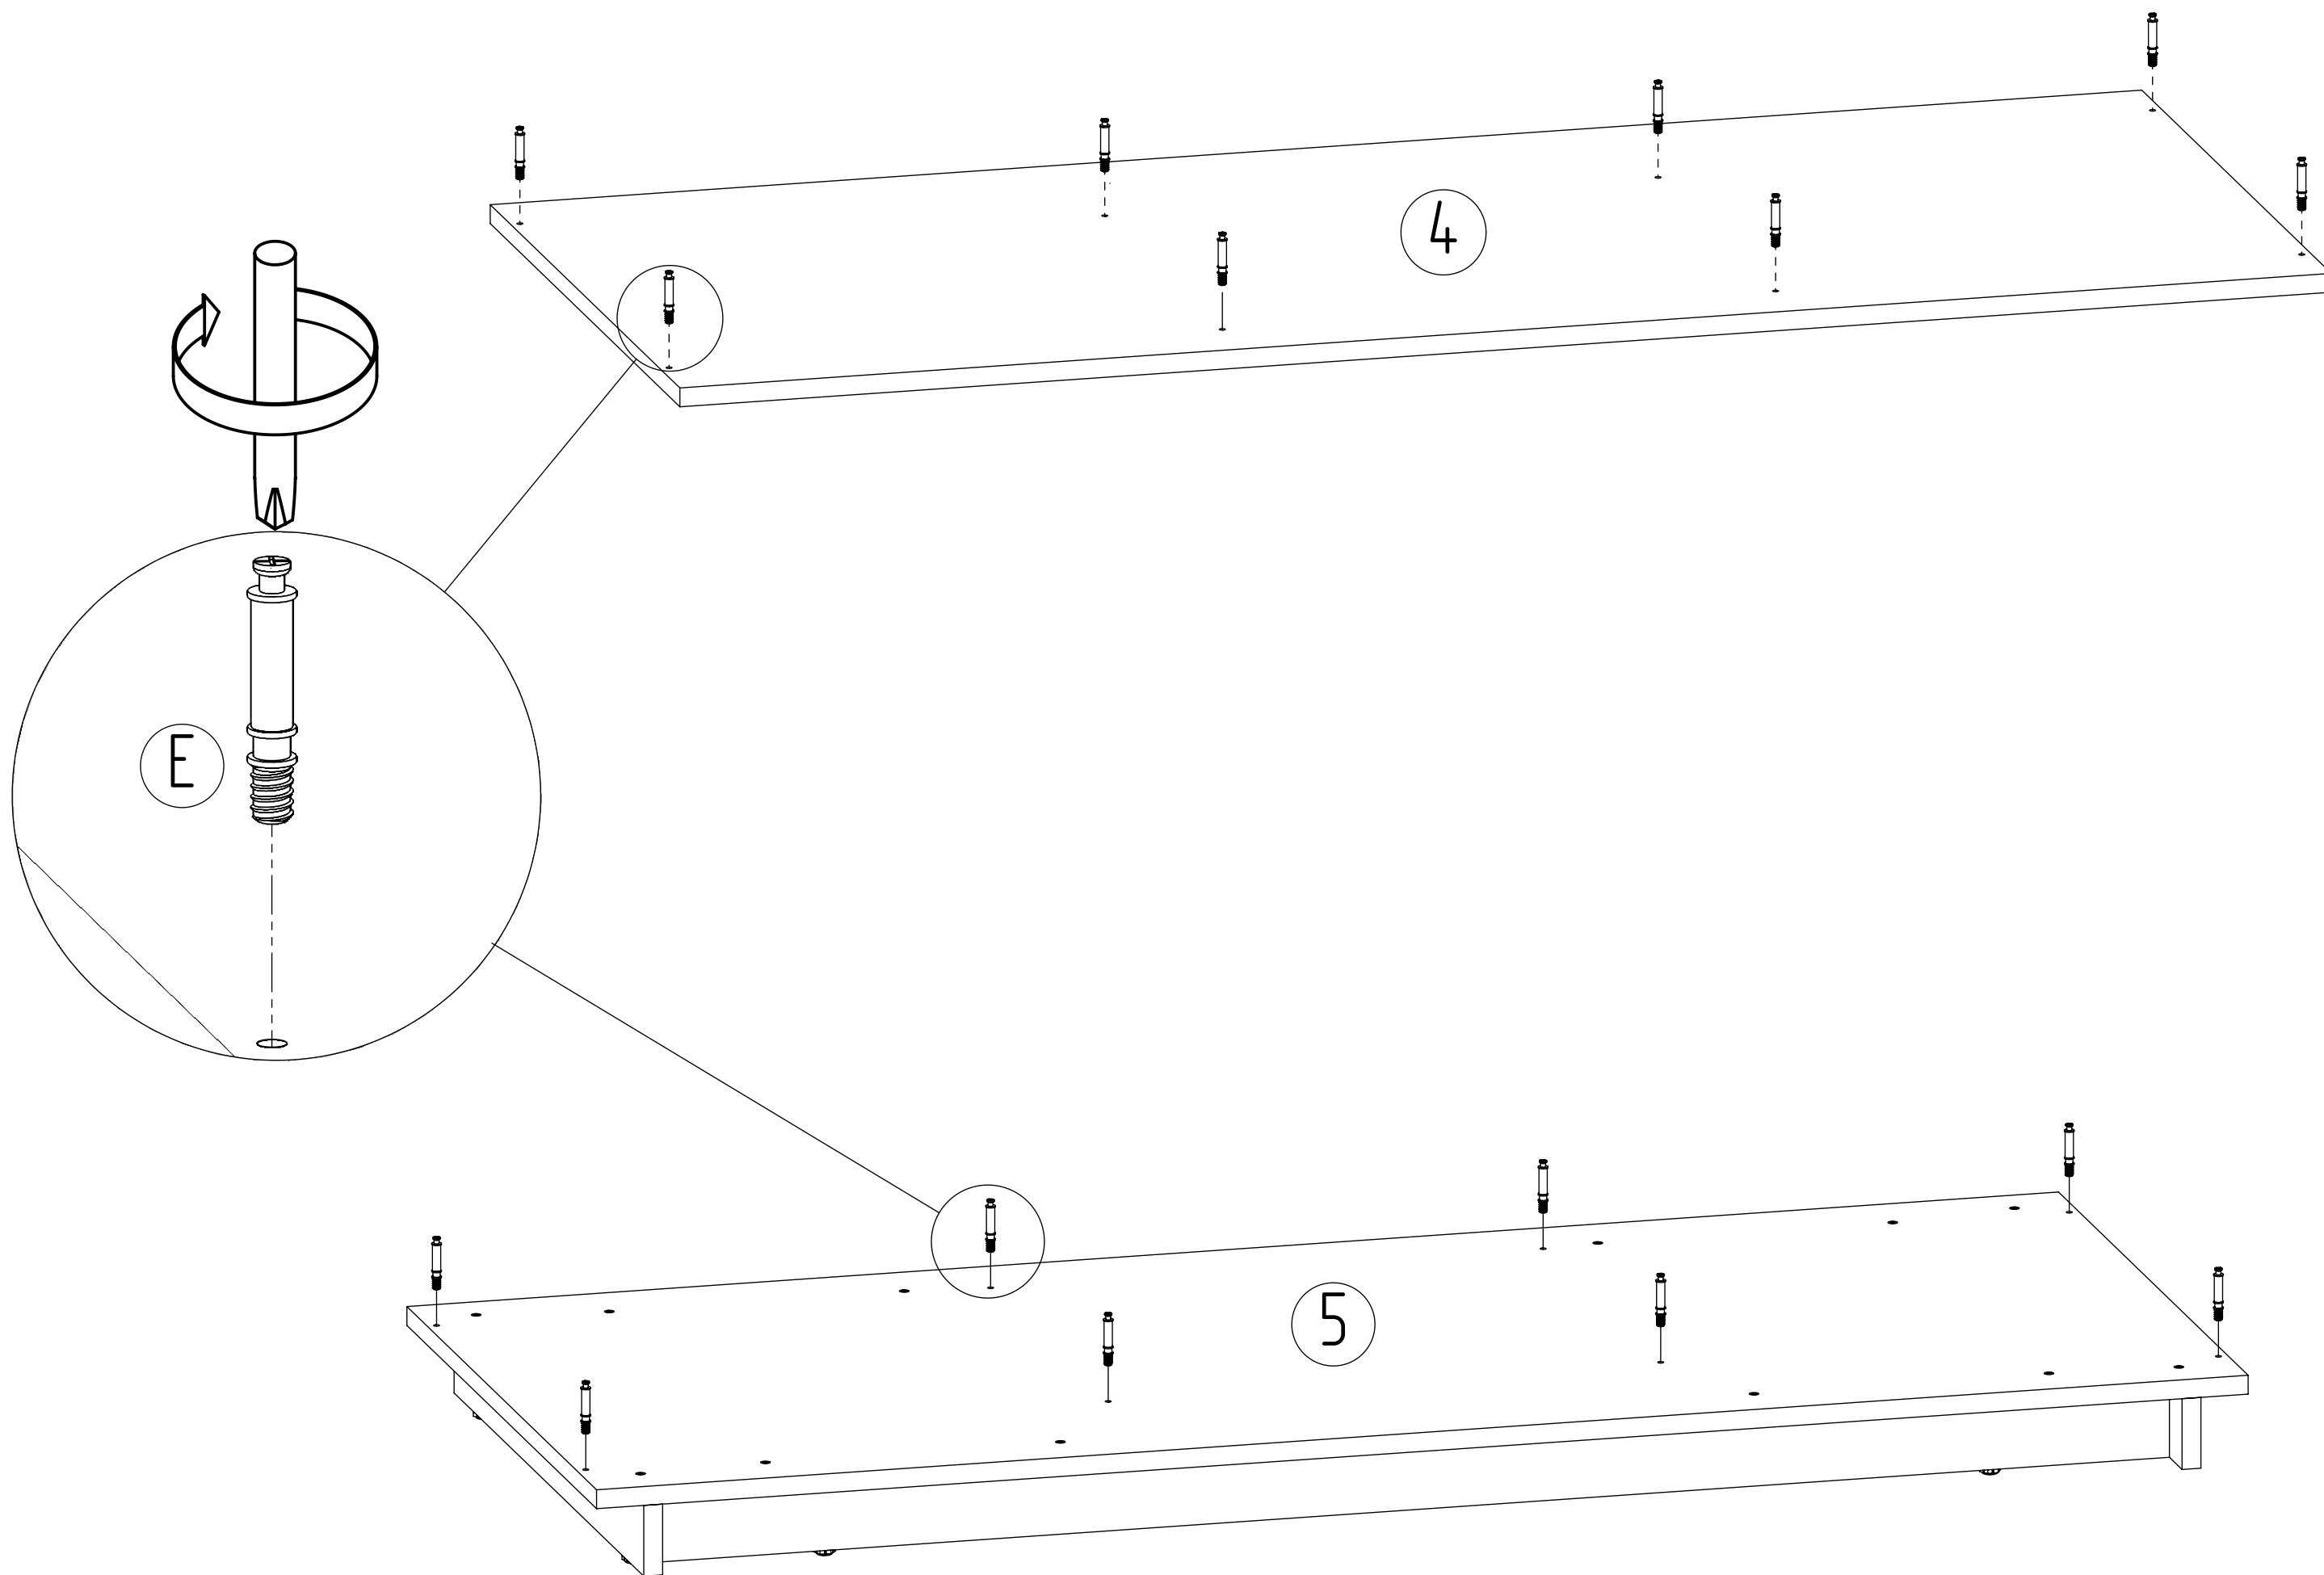



3

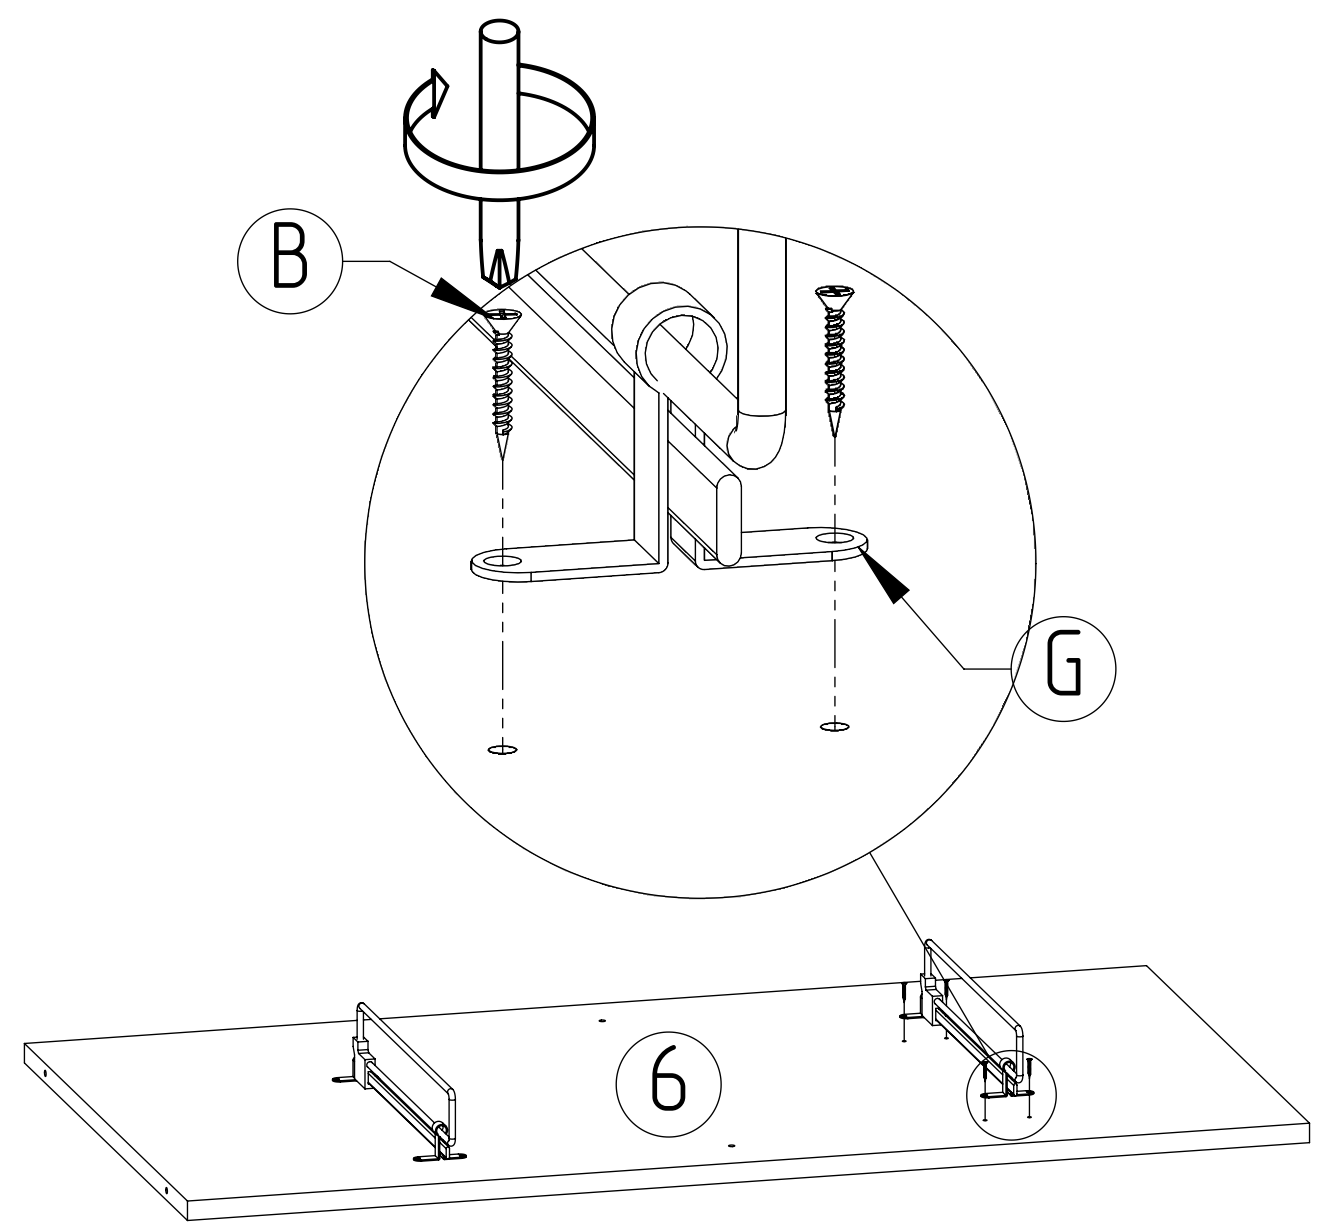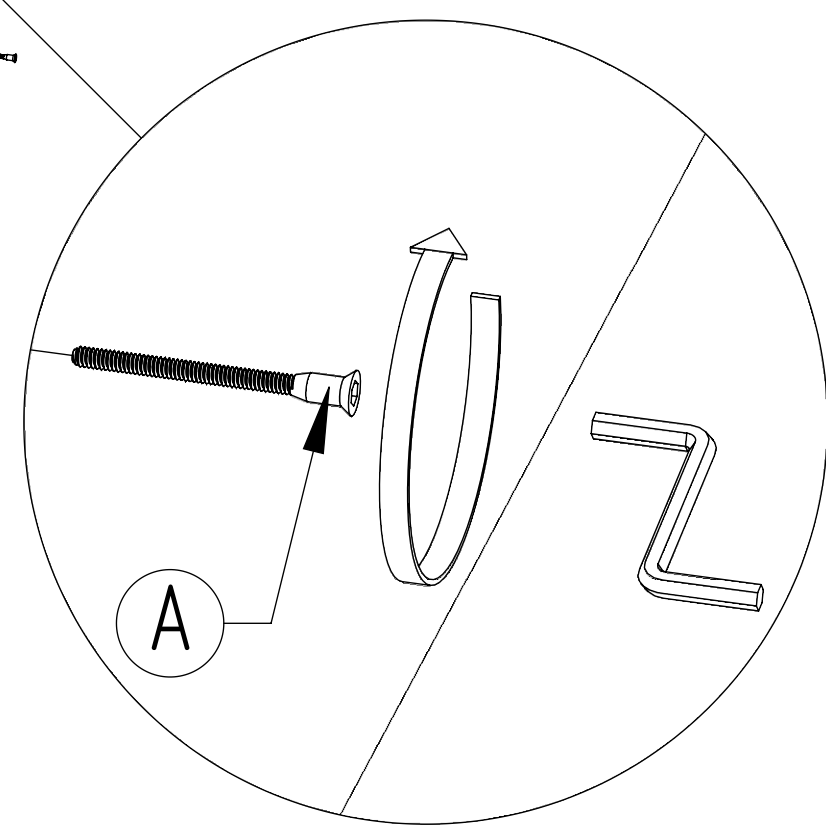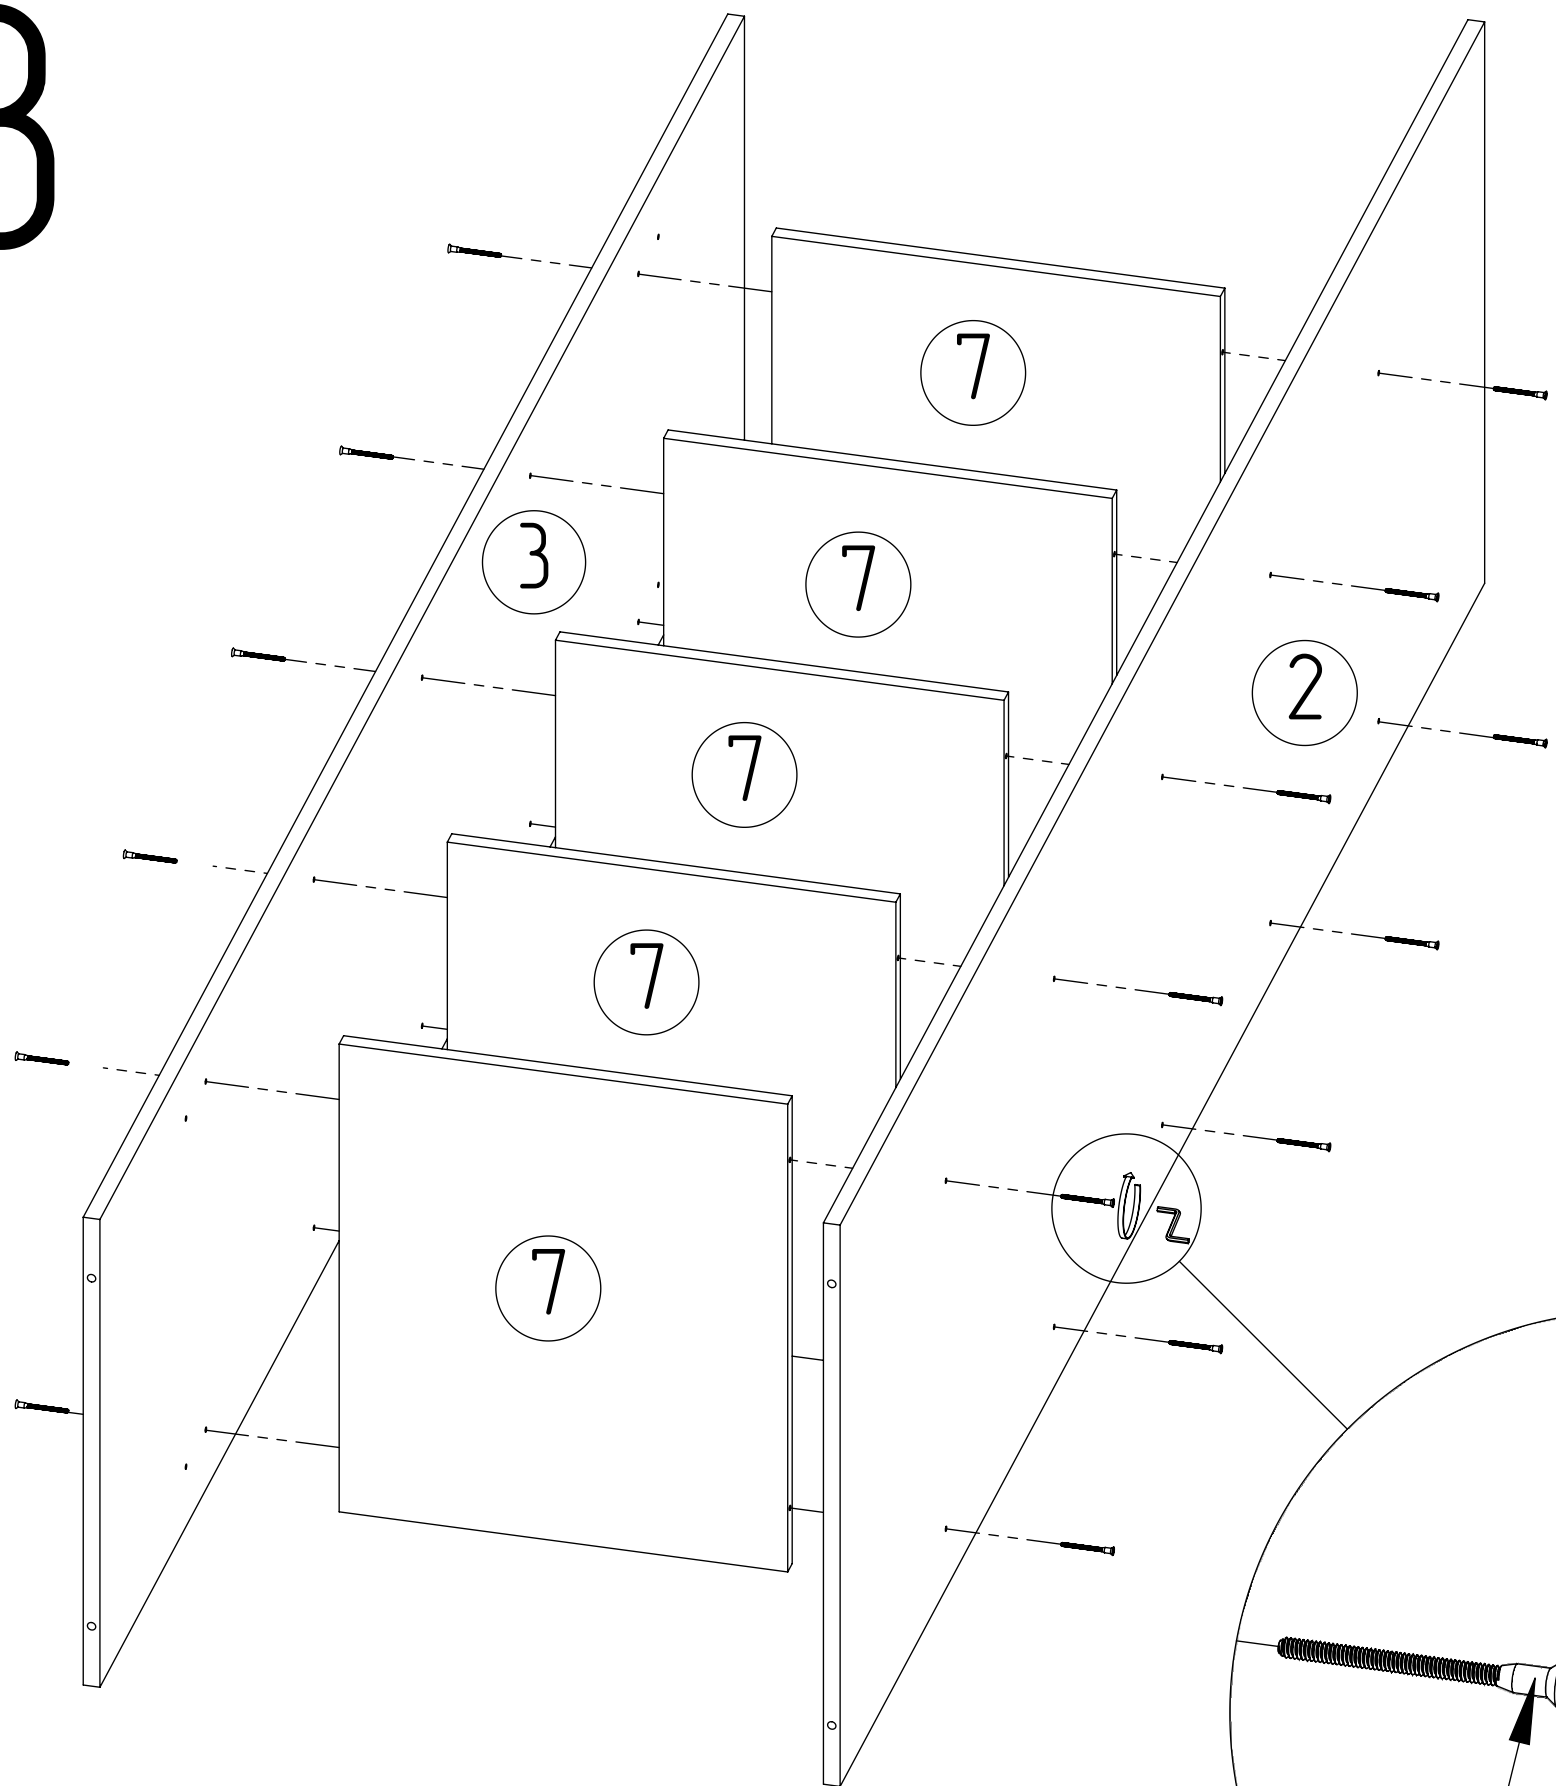


4

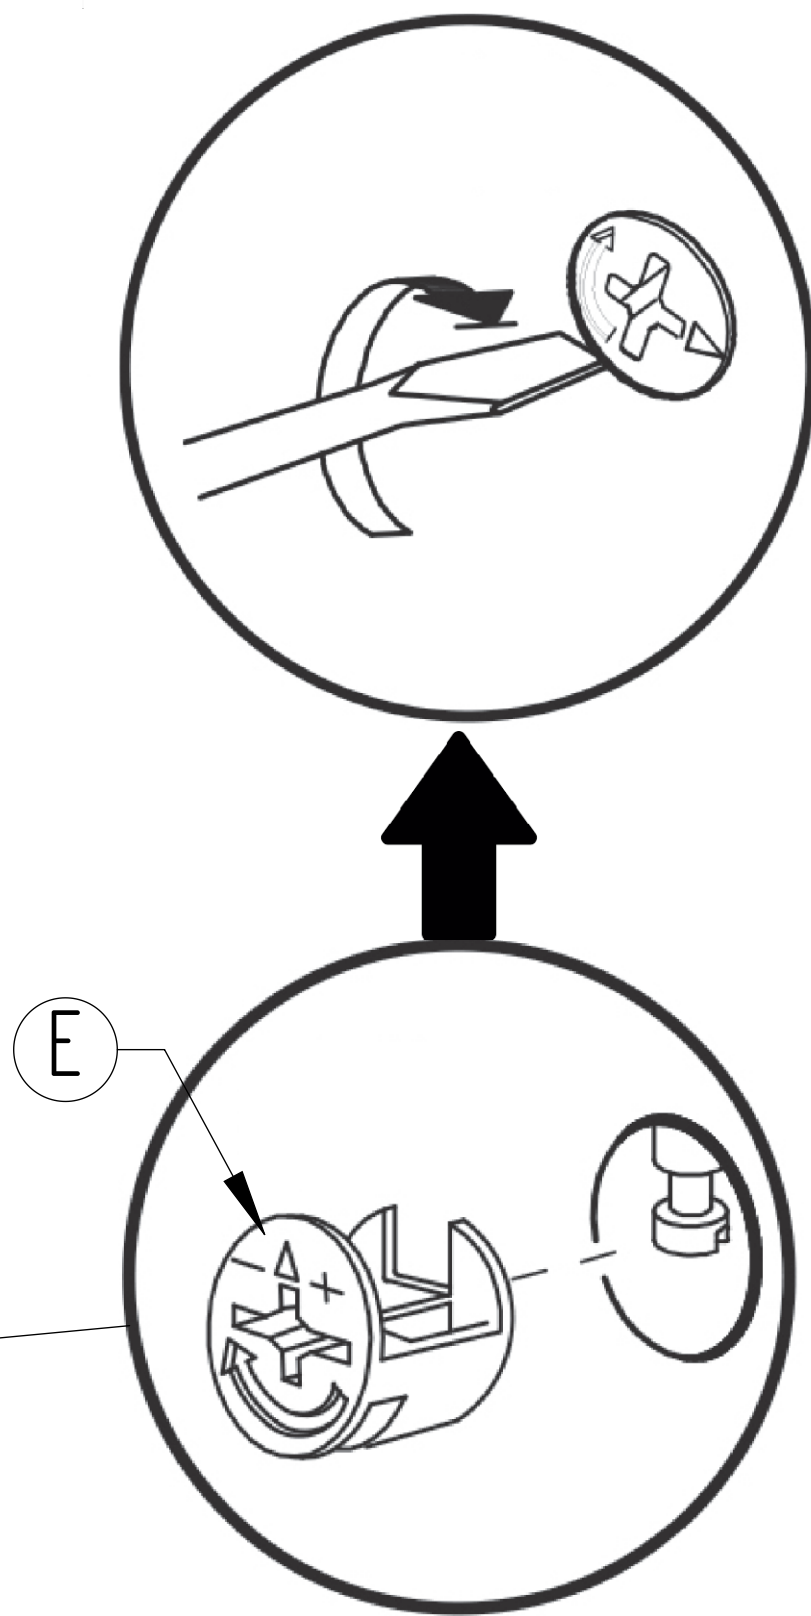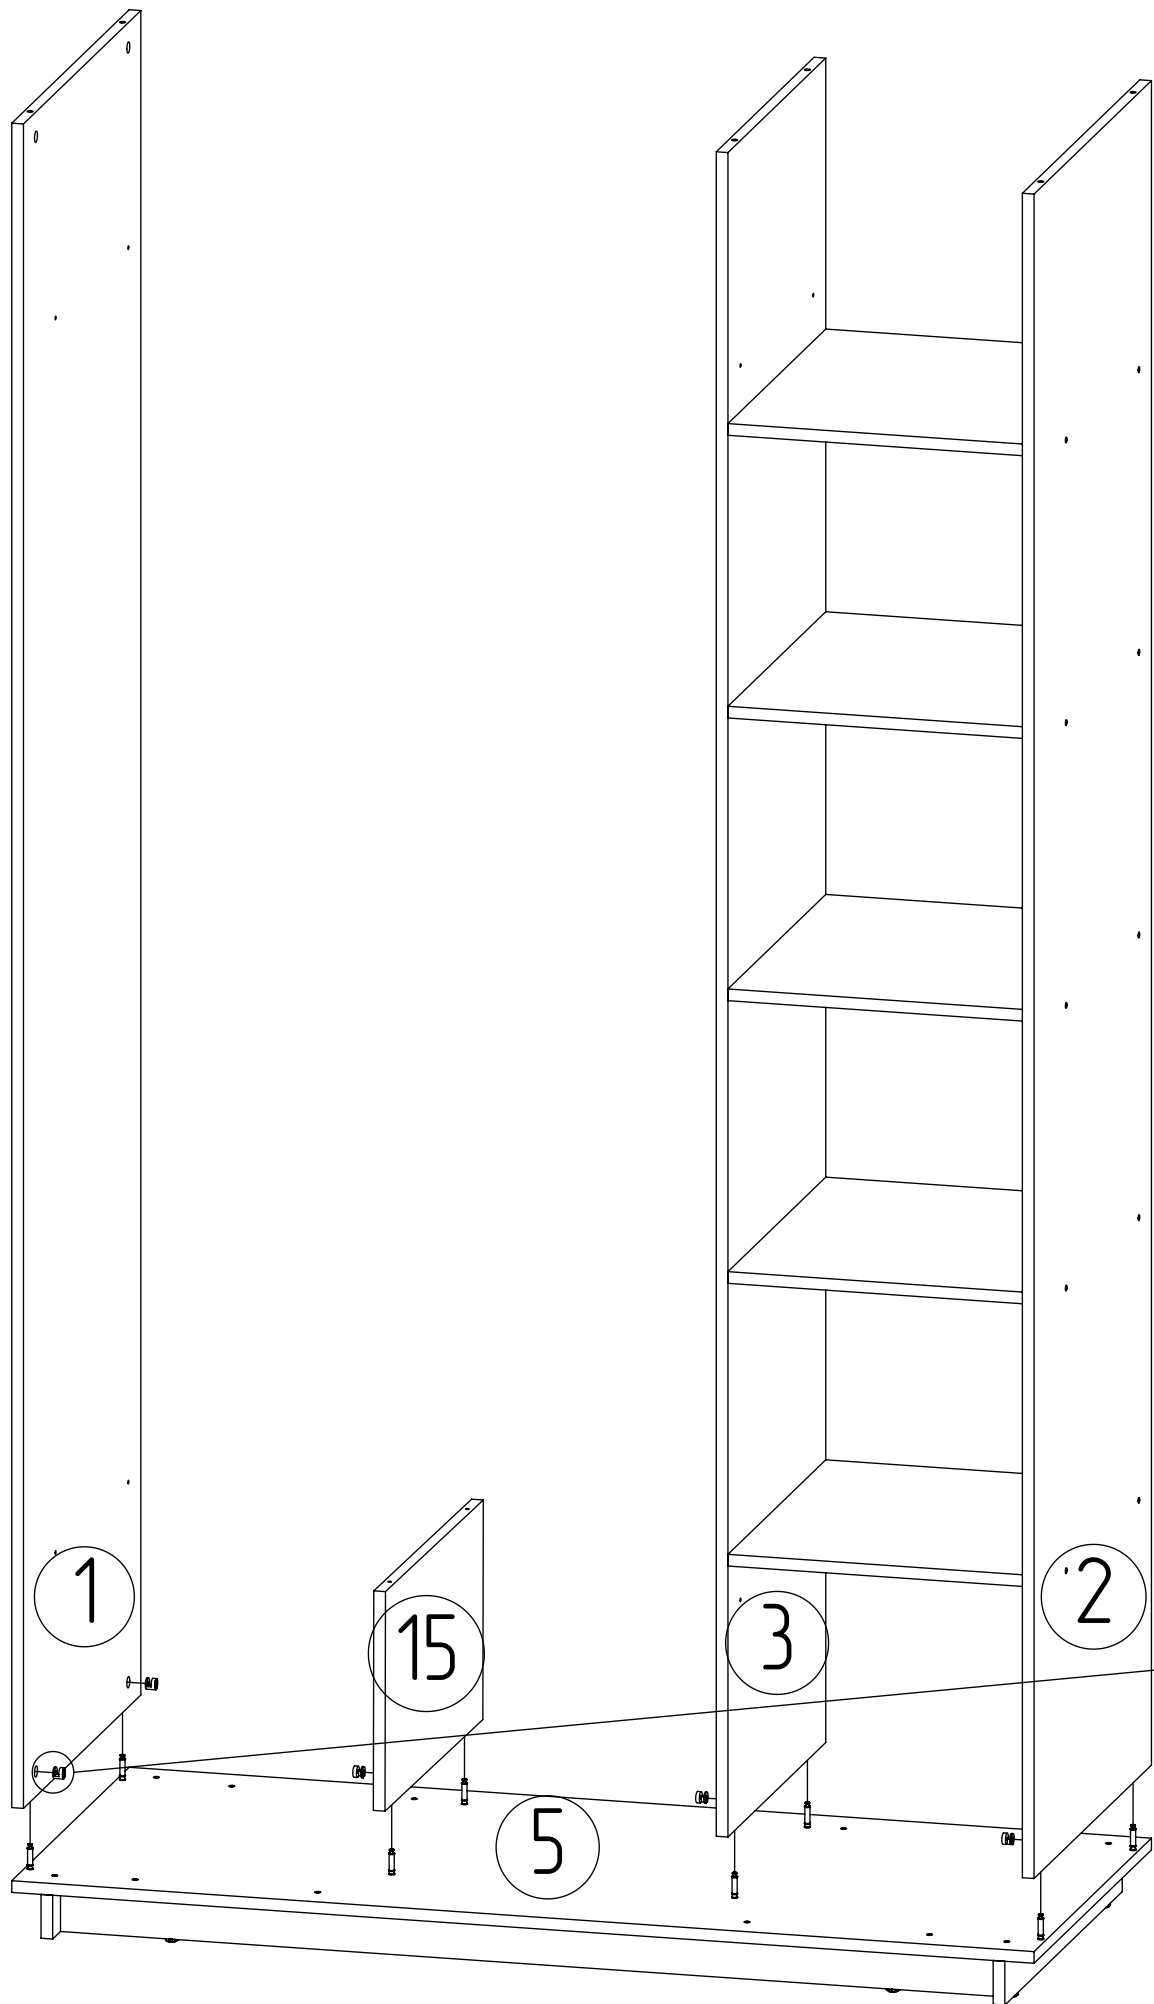




5

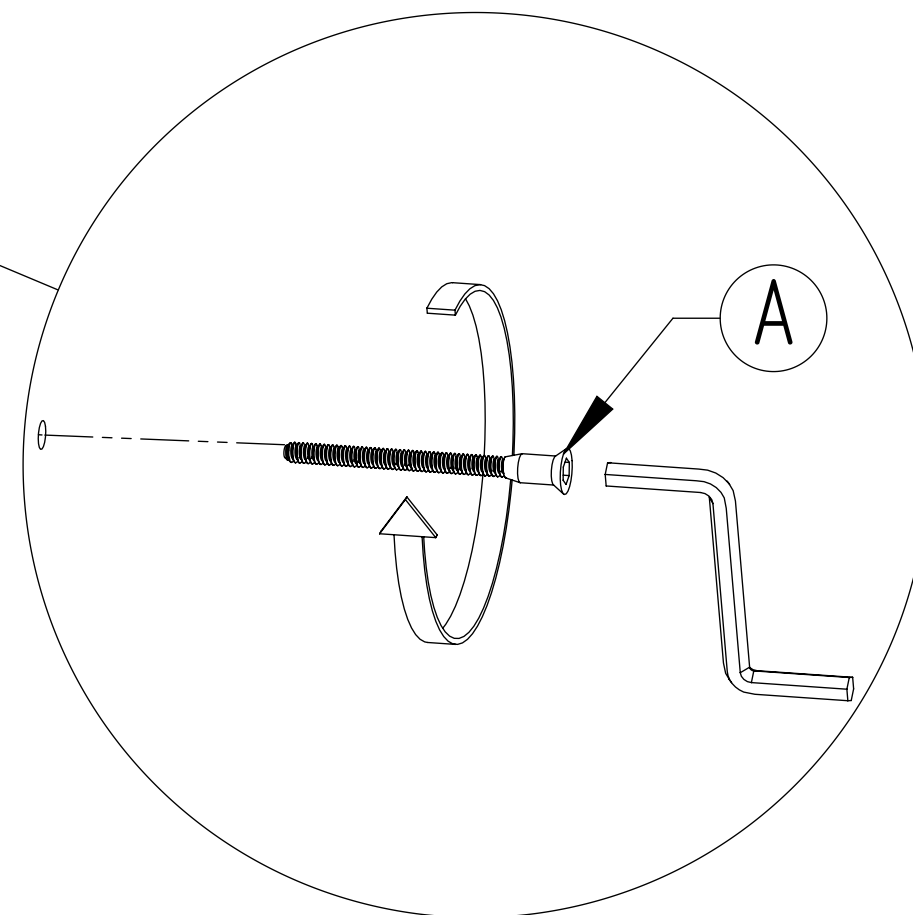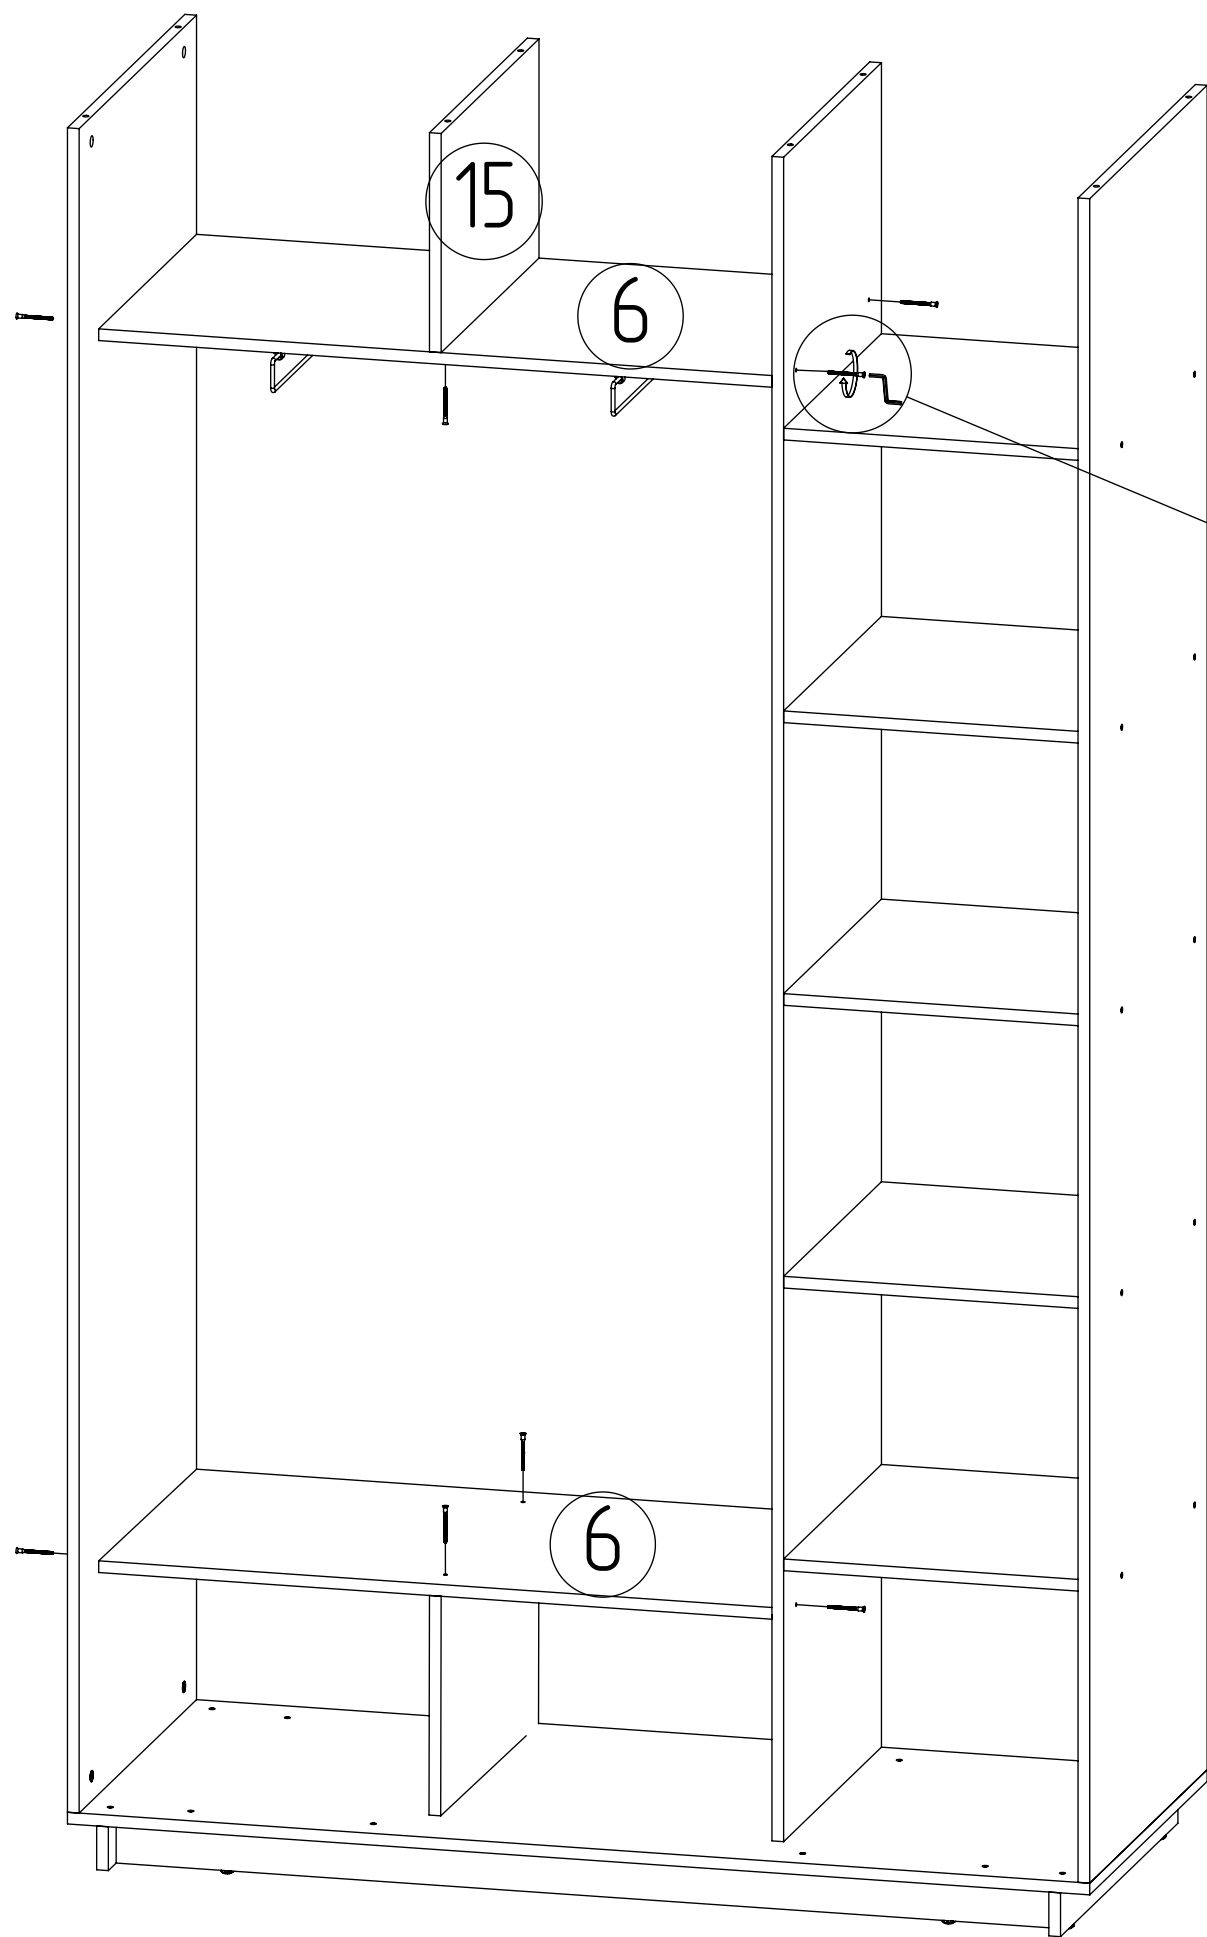


6

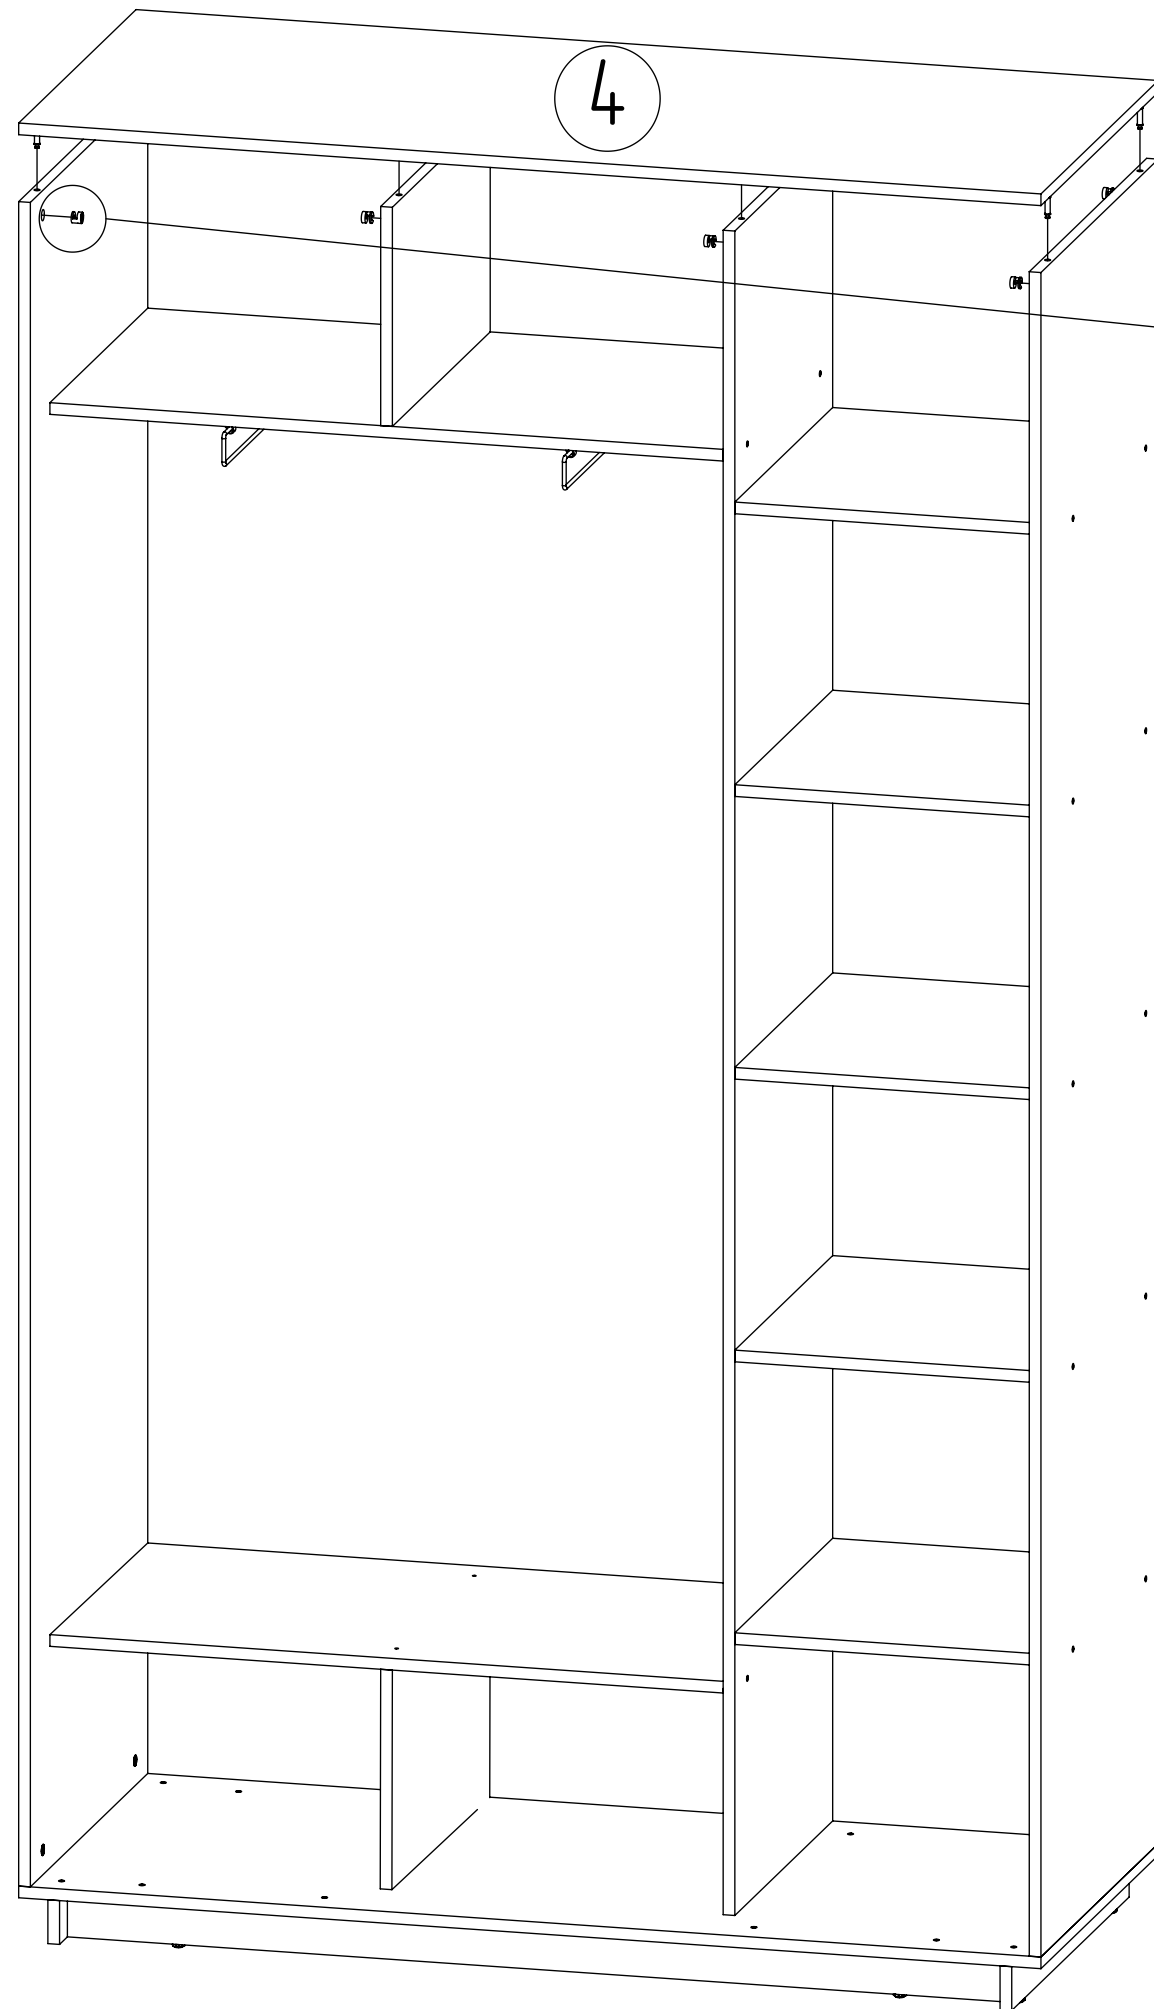



E

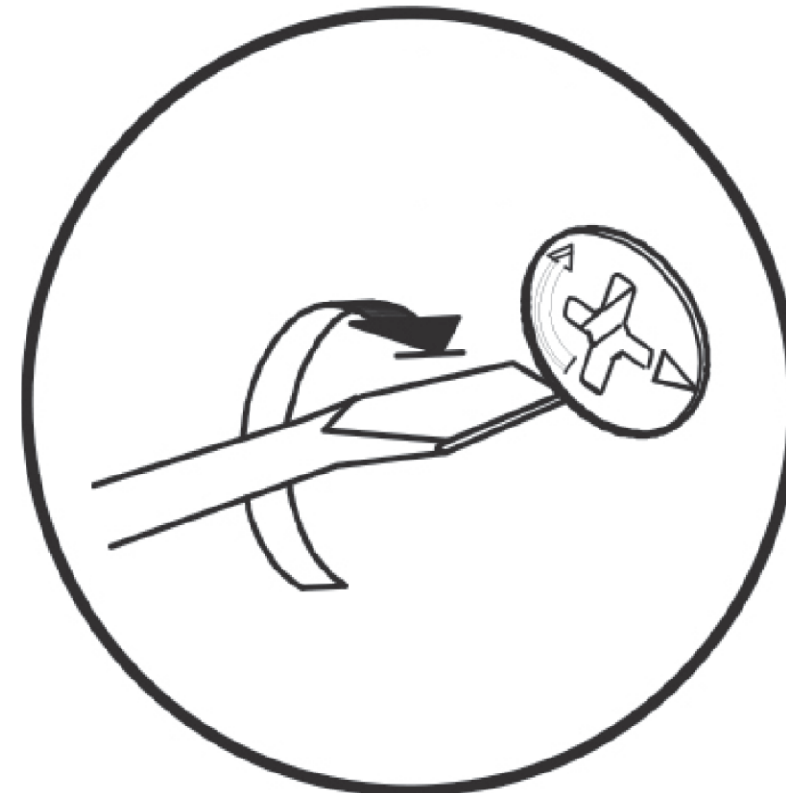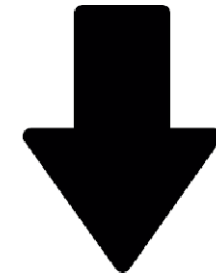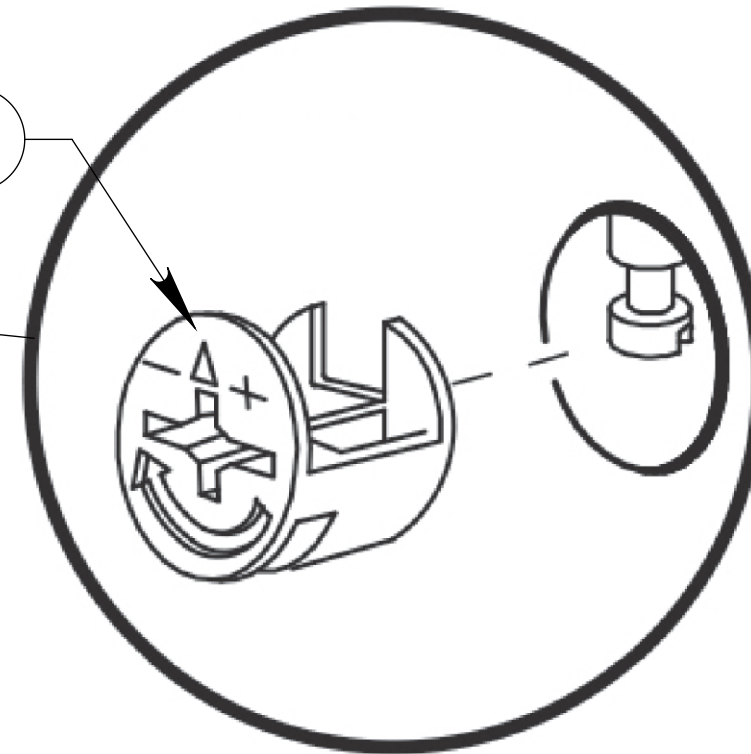


7

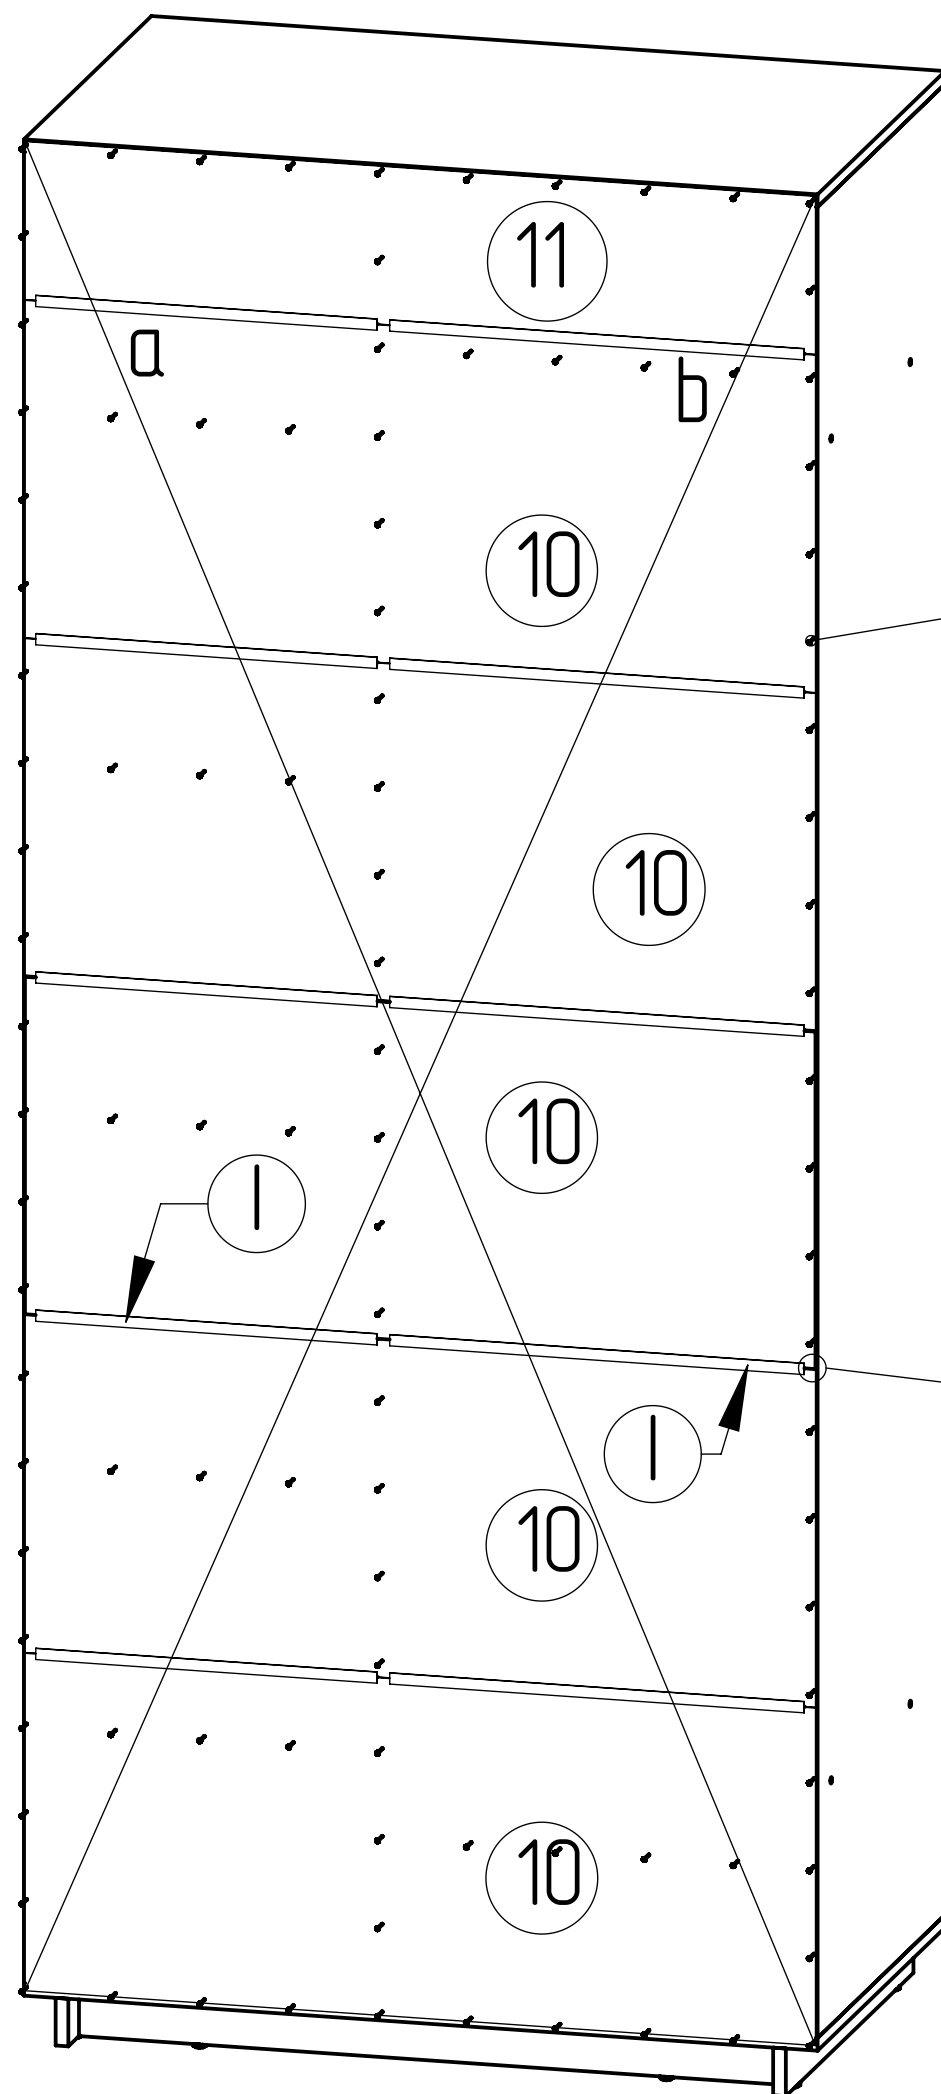


$$a = b$$

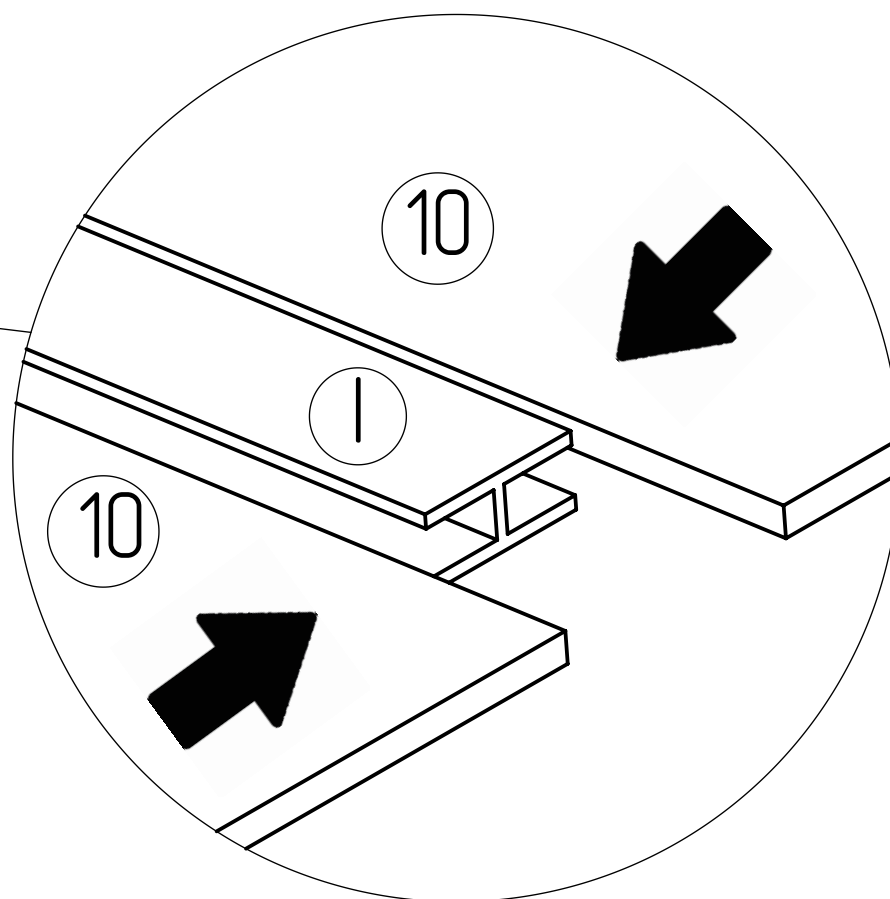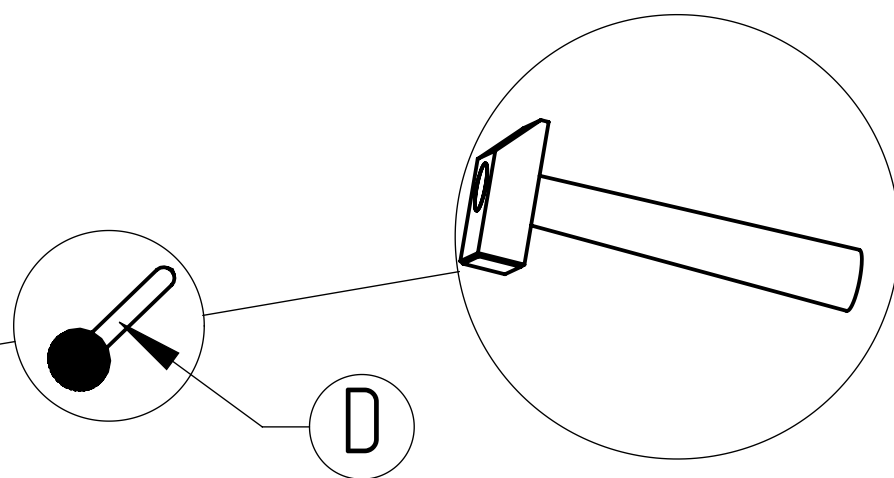


8

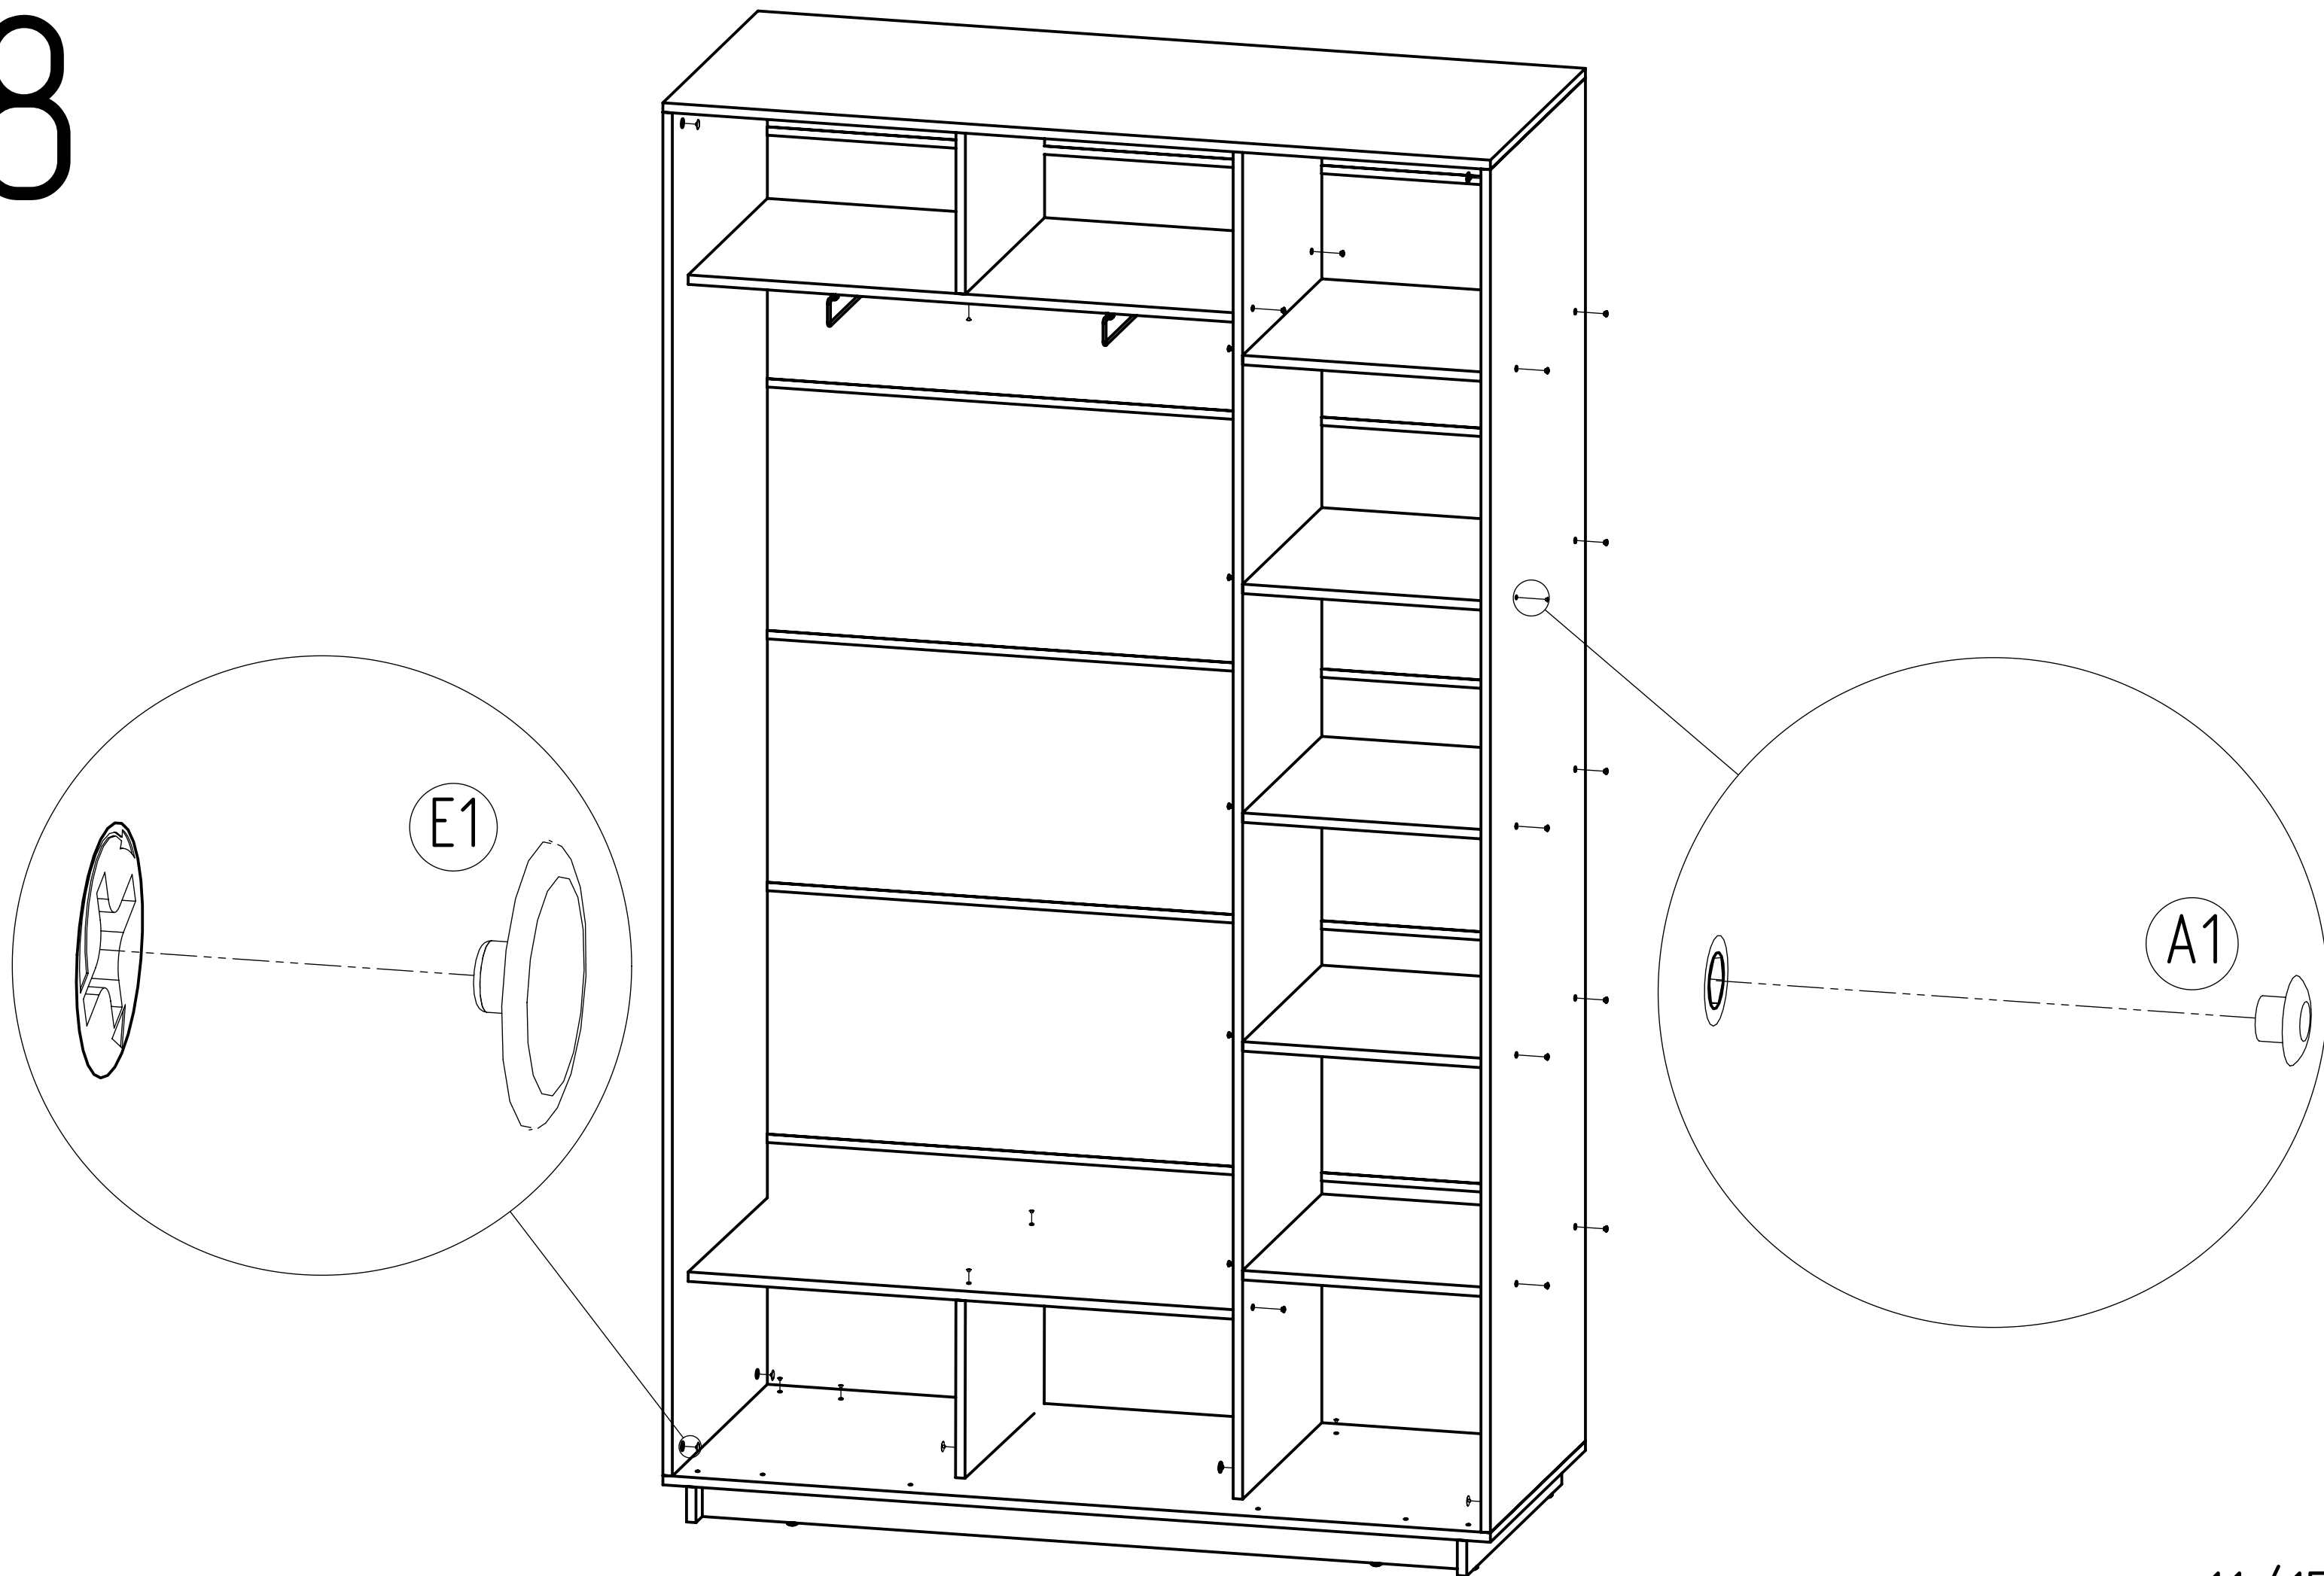


9

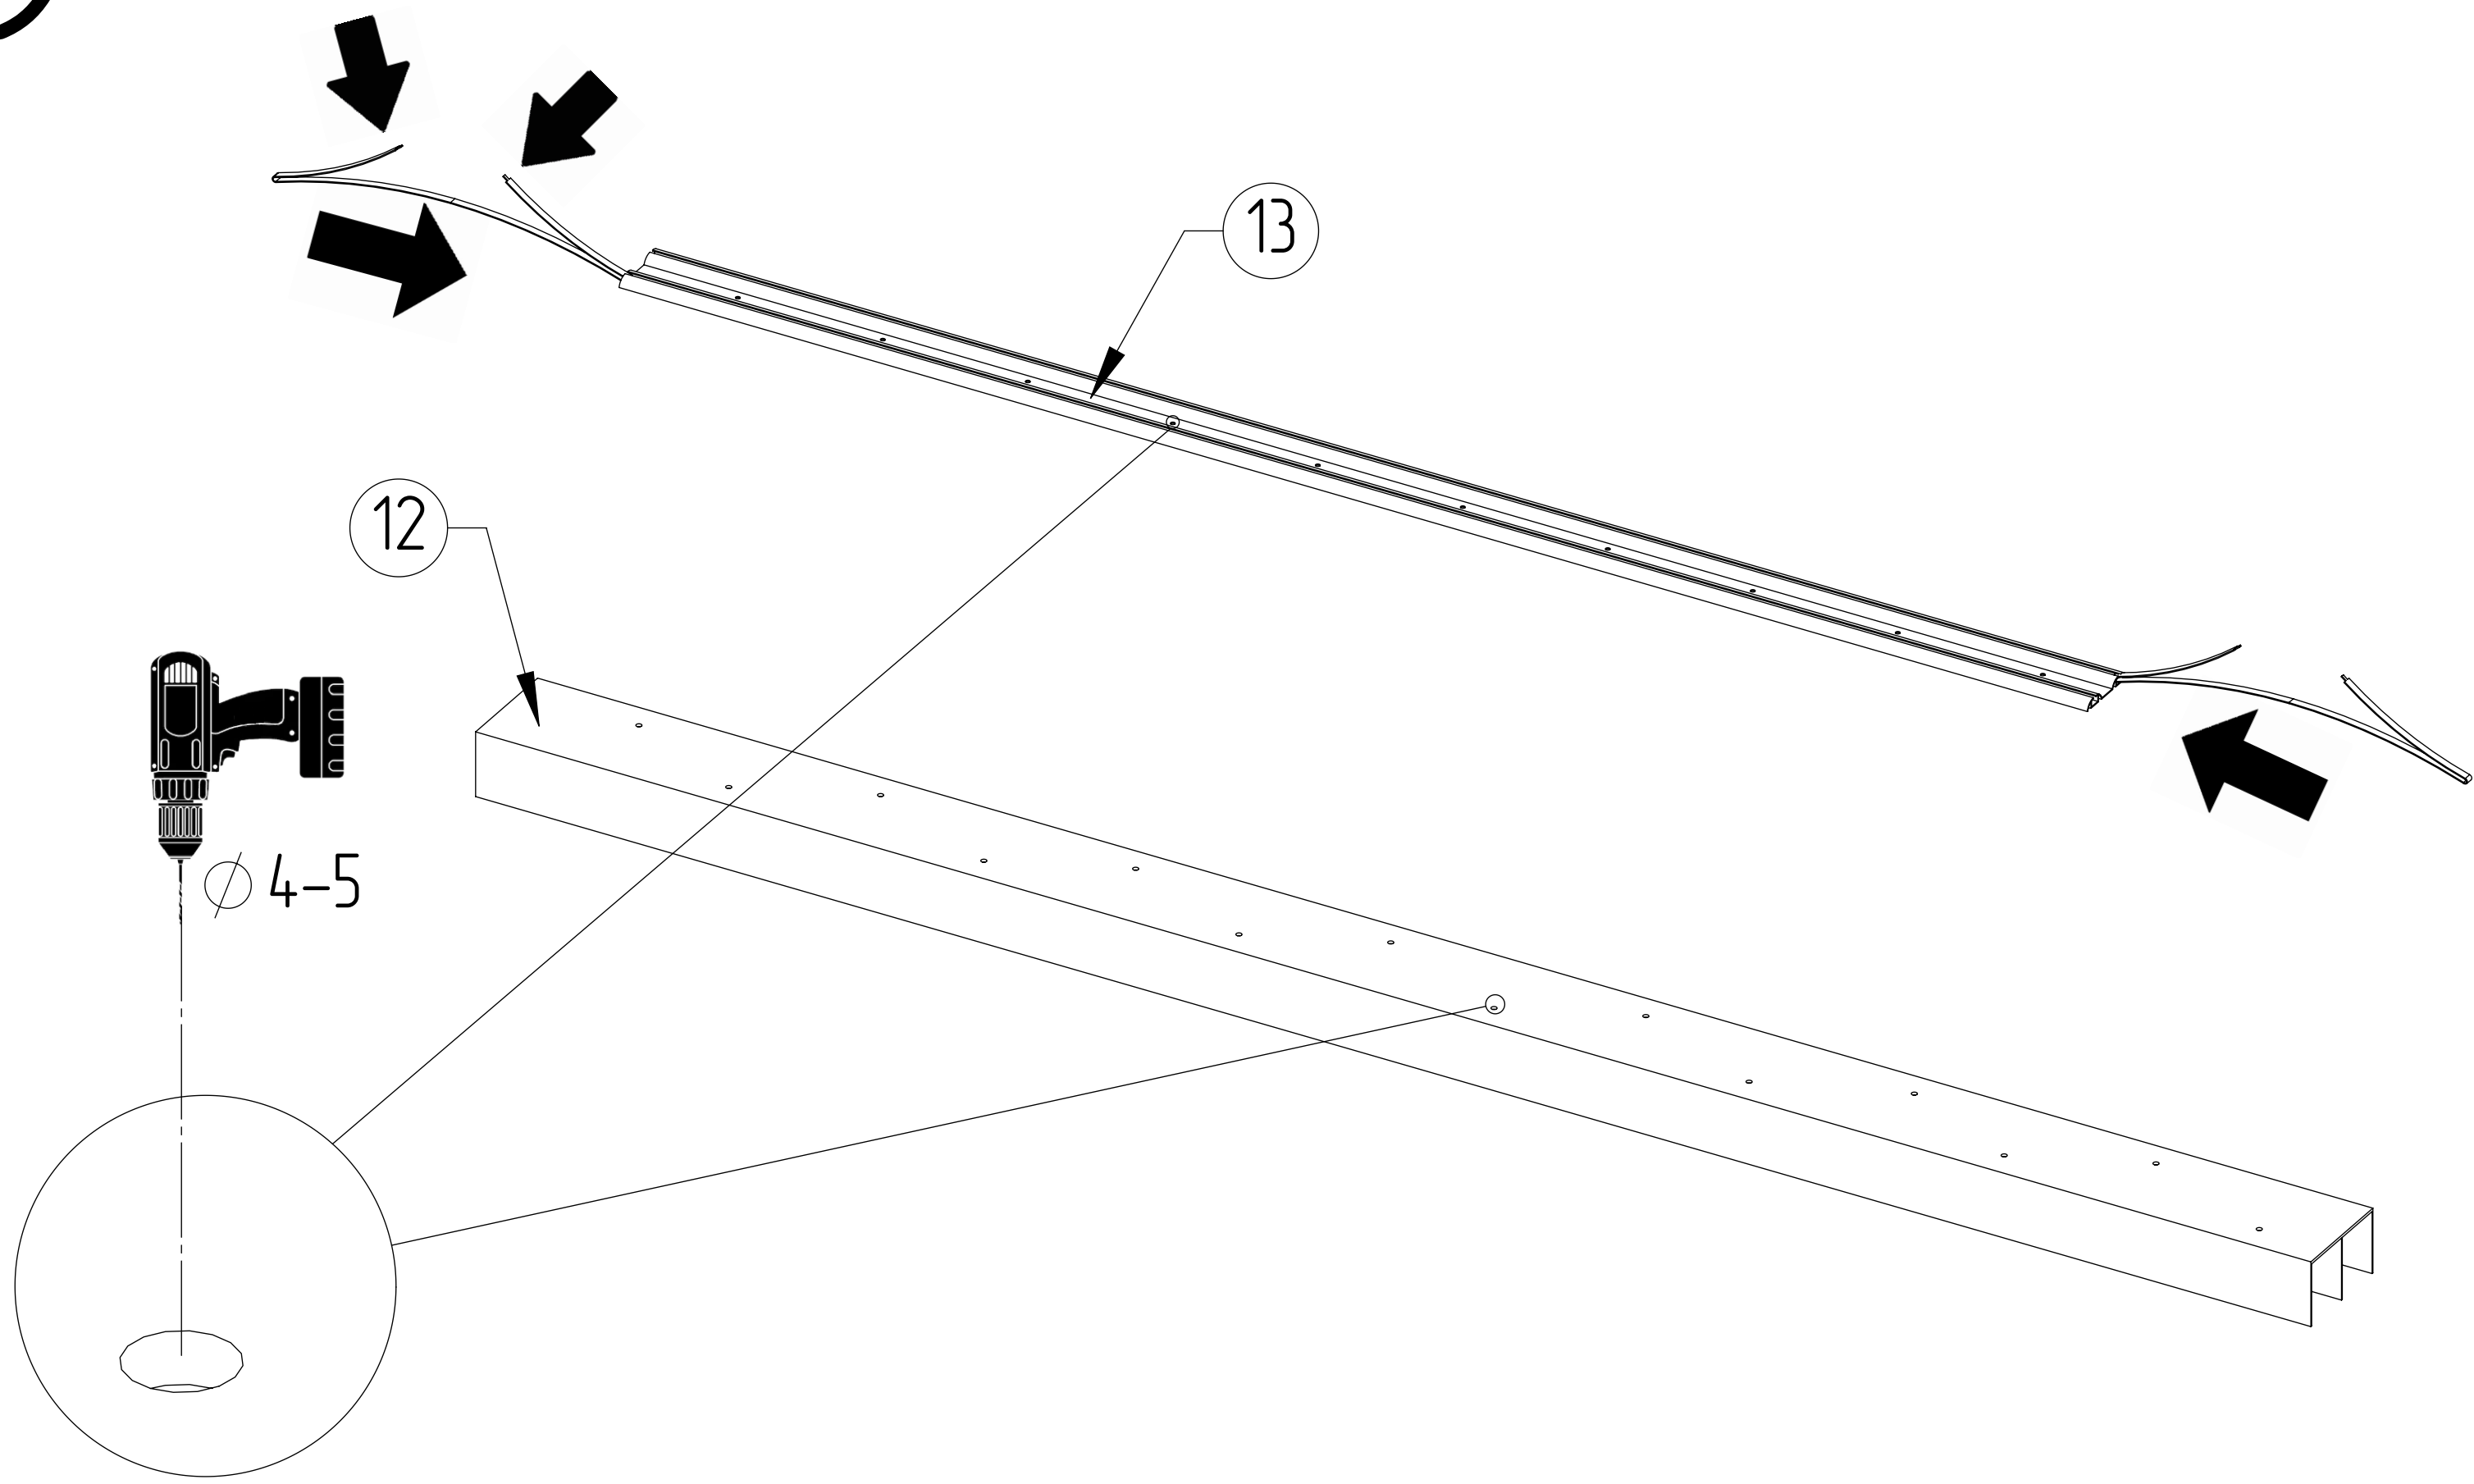


10

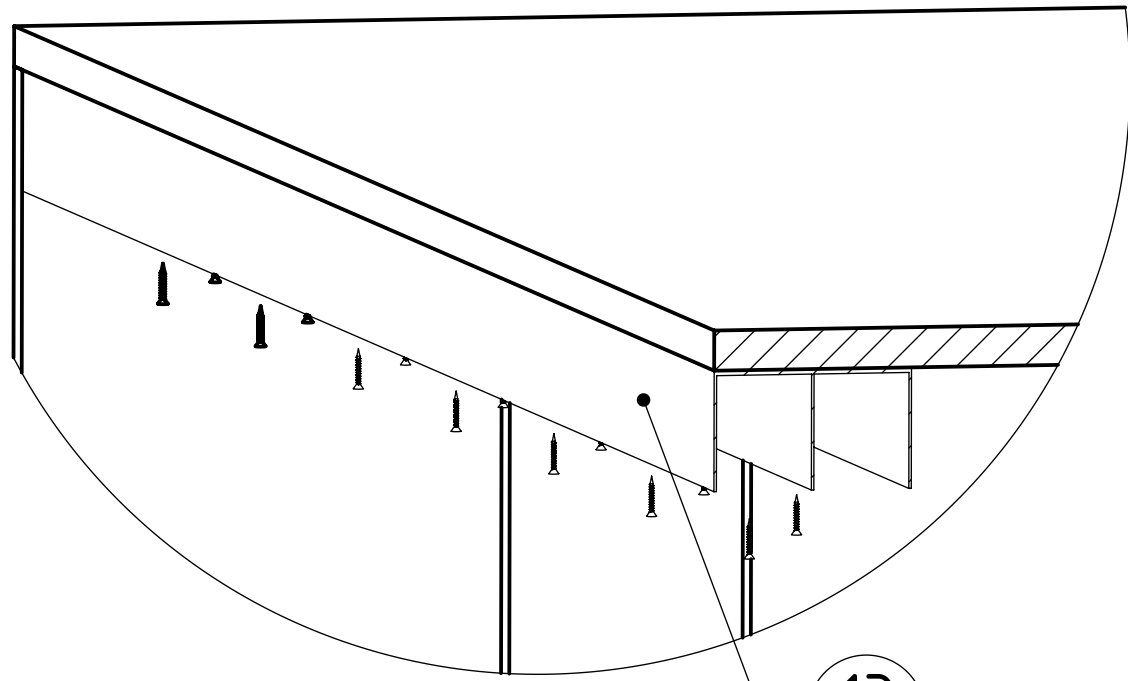


13

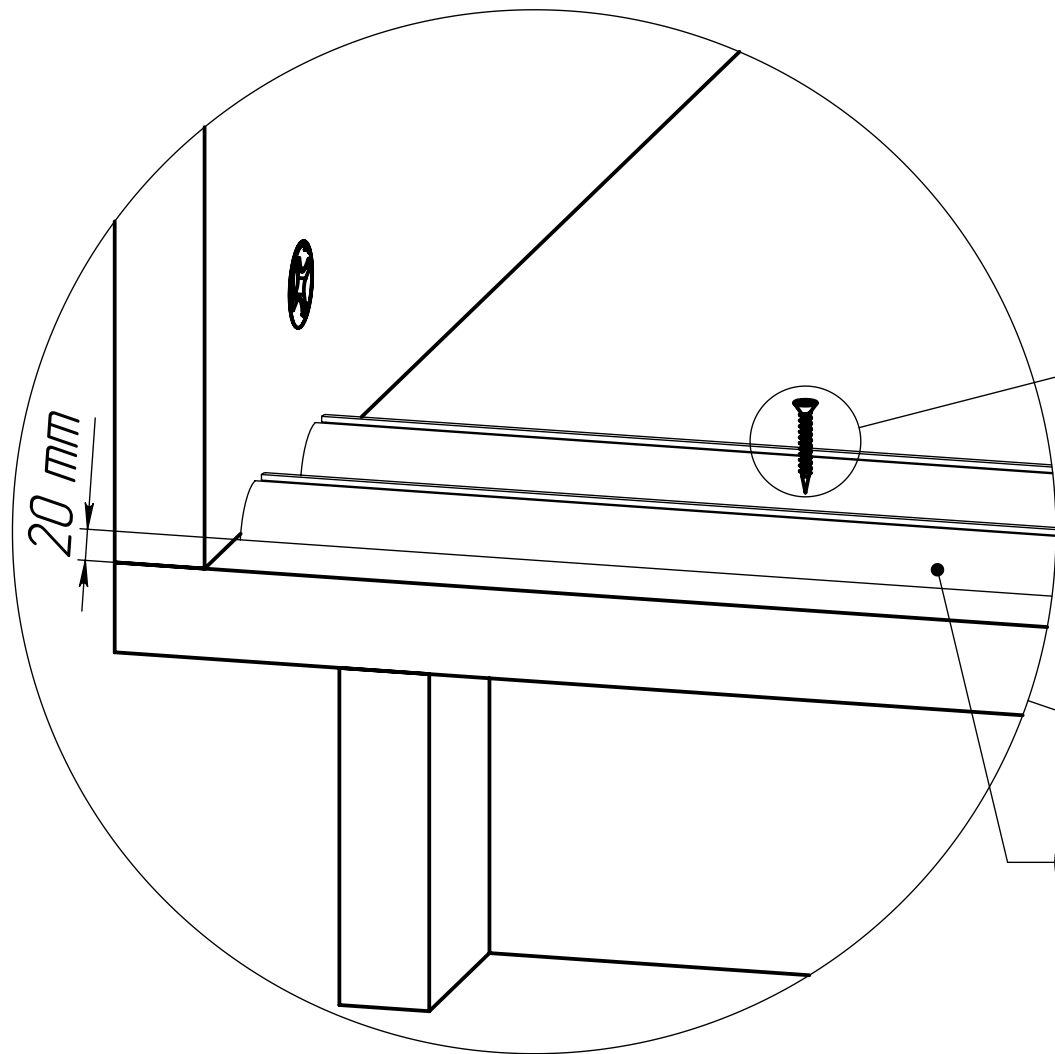



14

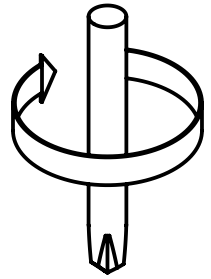

B

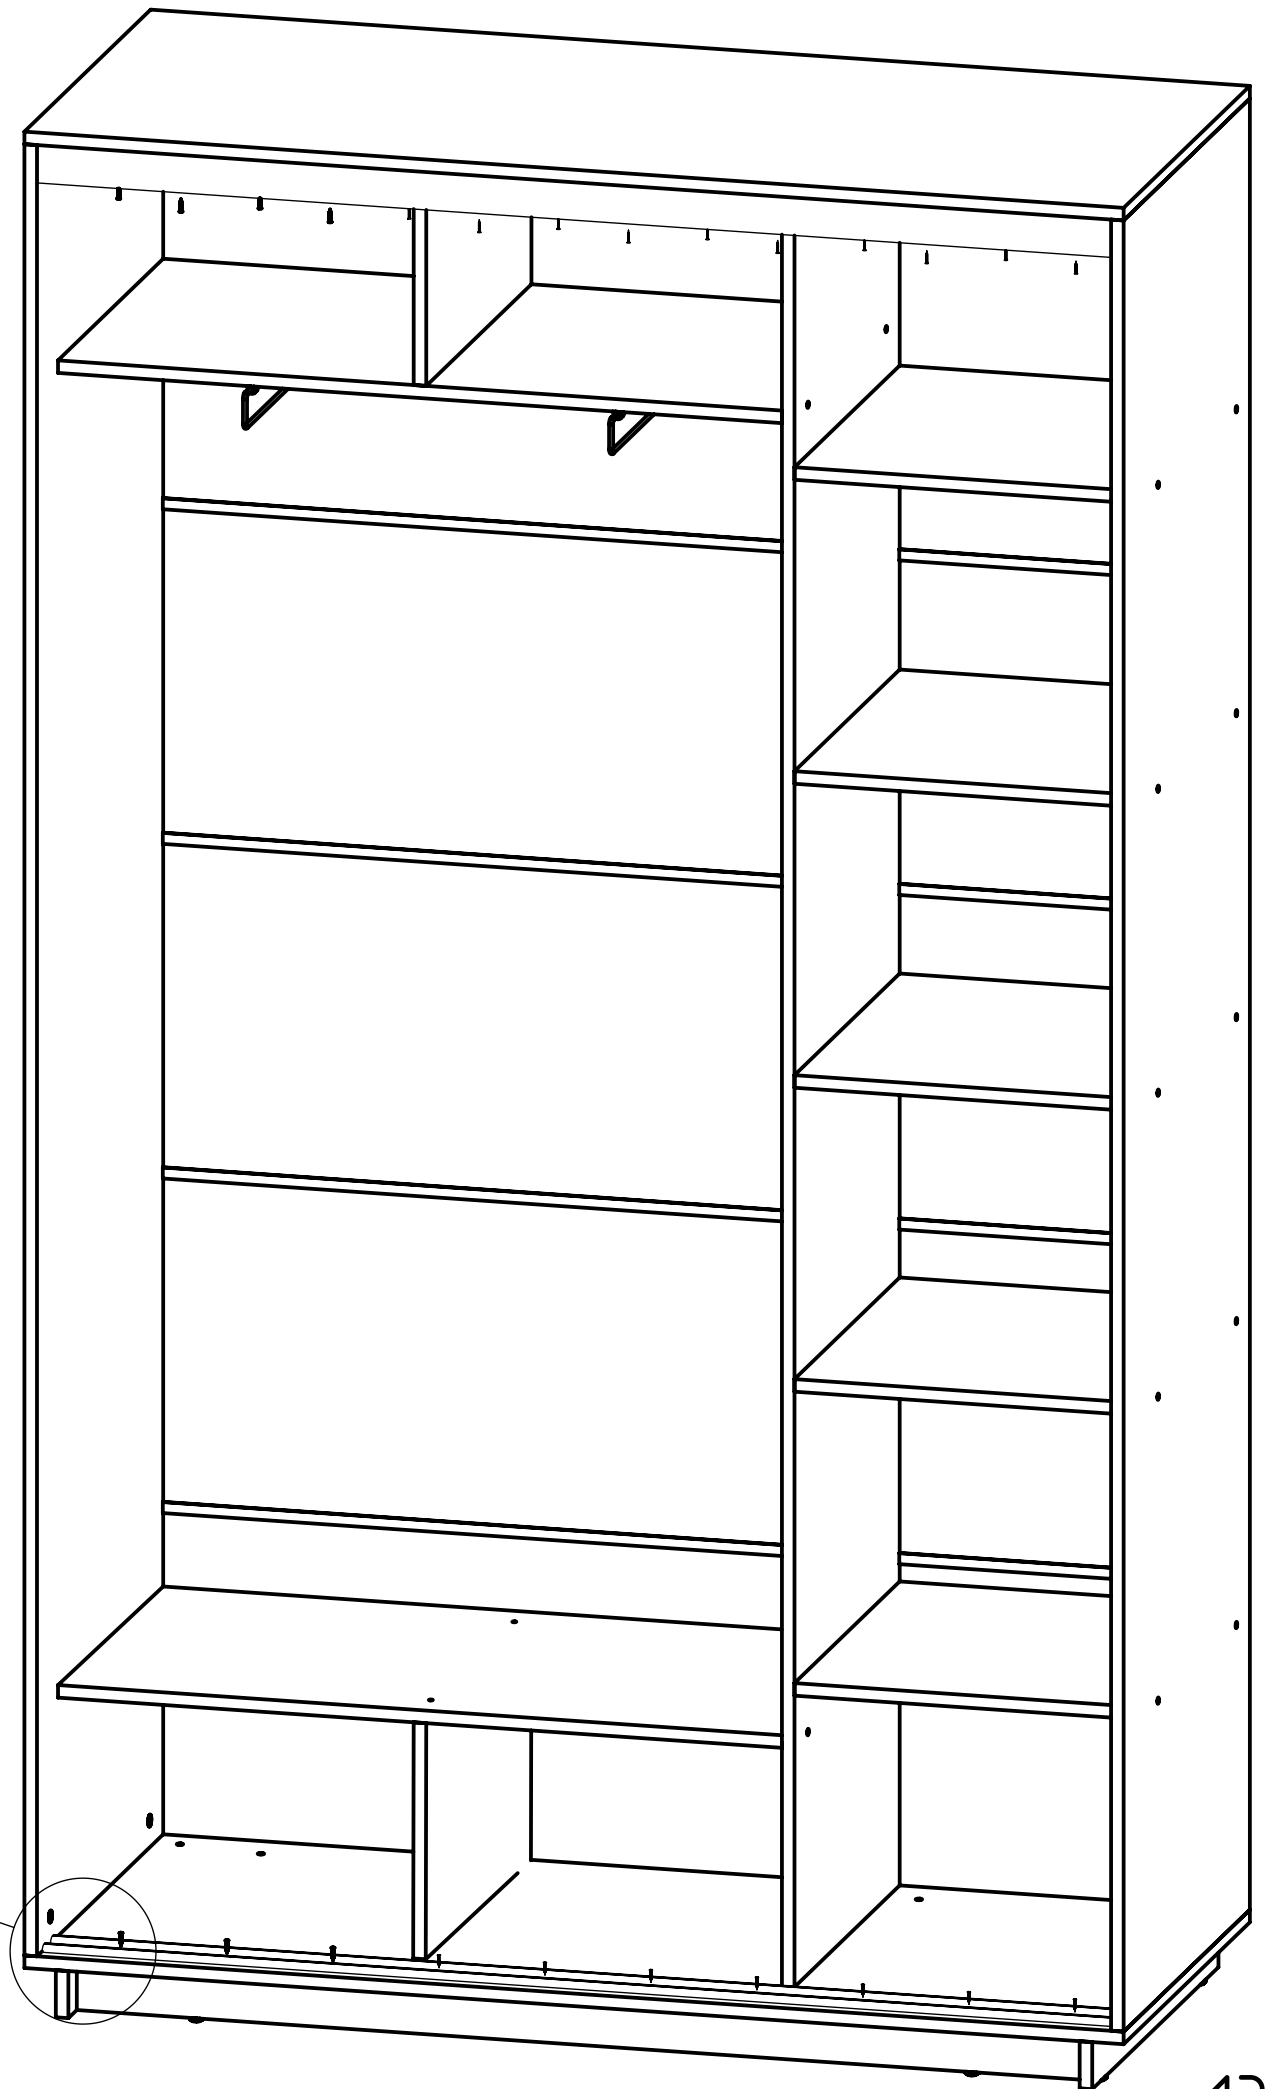

11

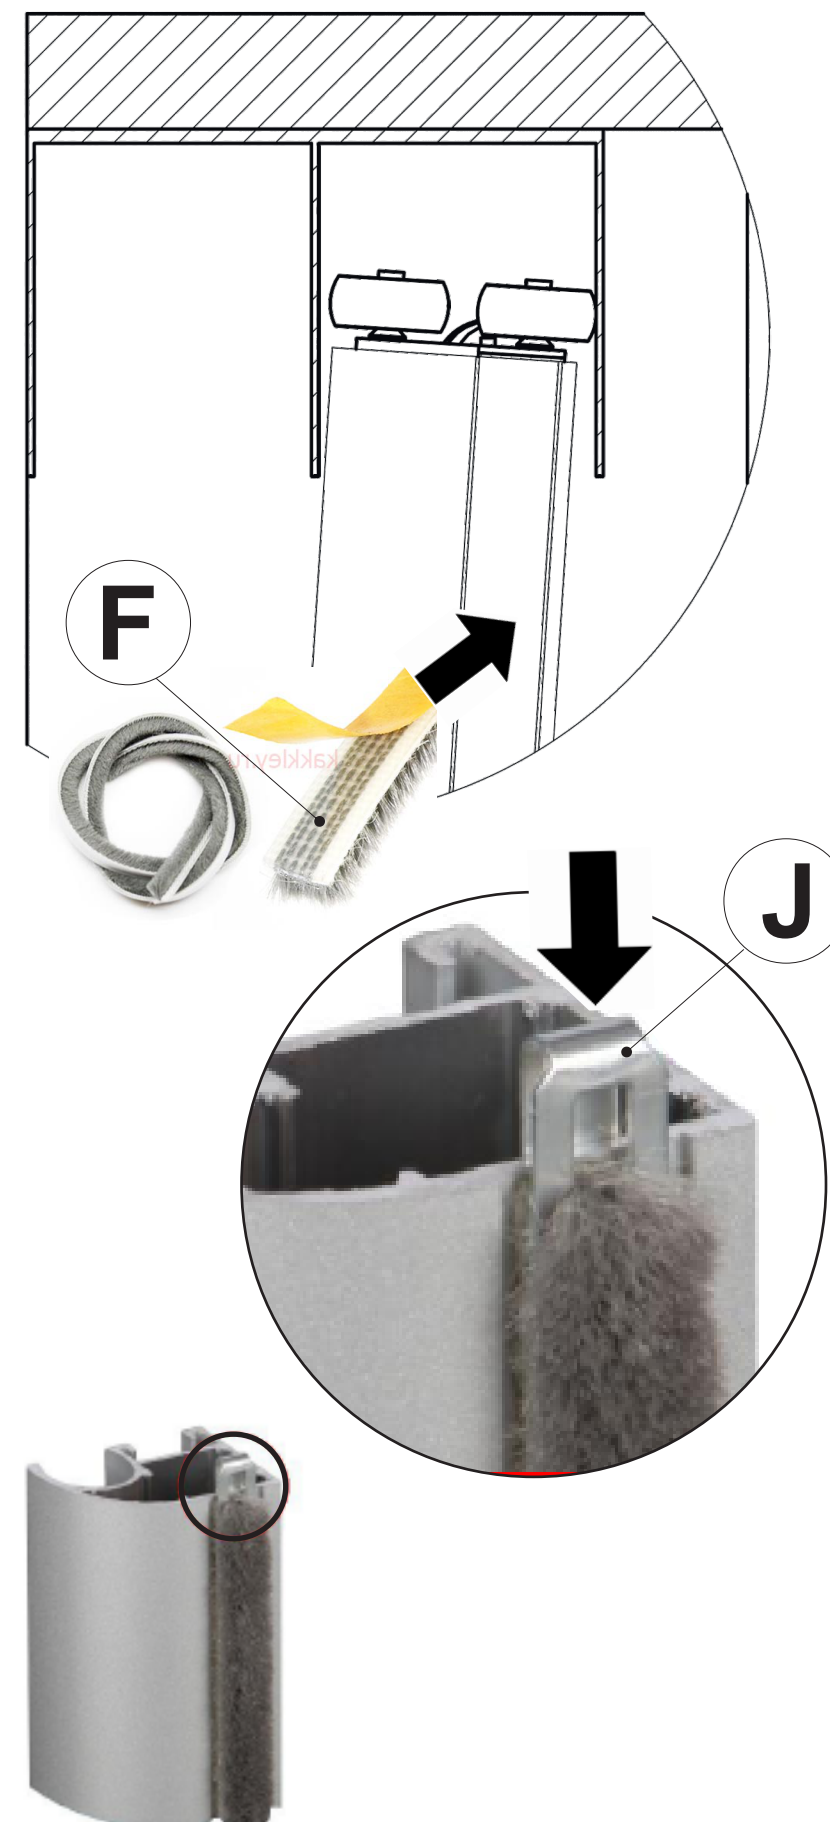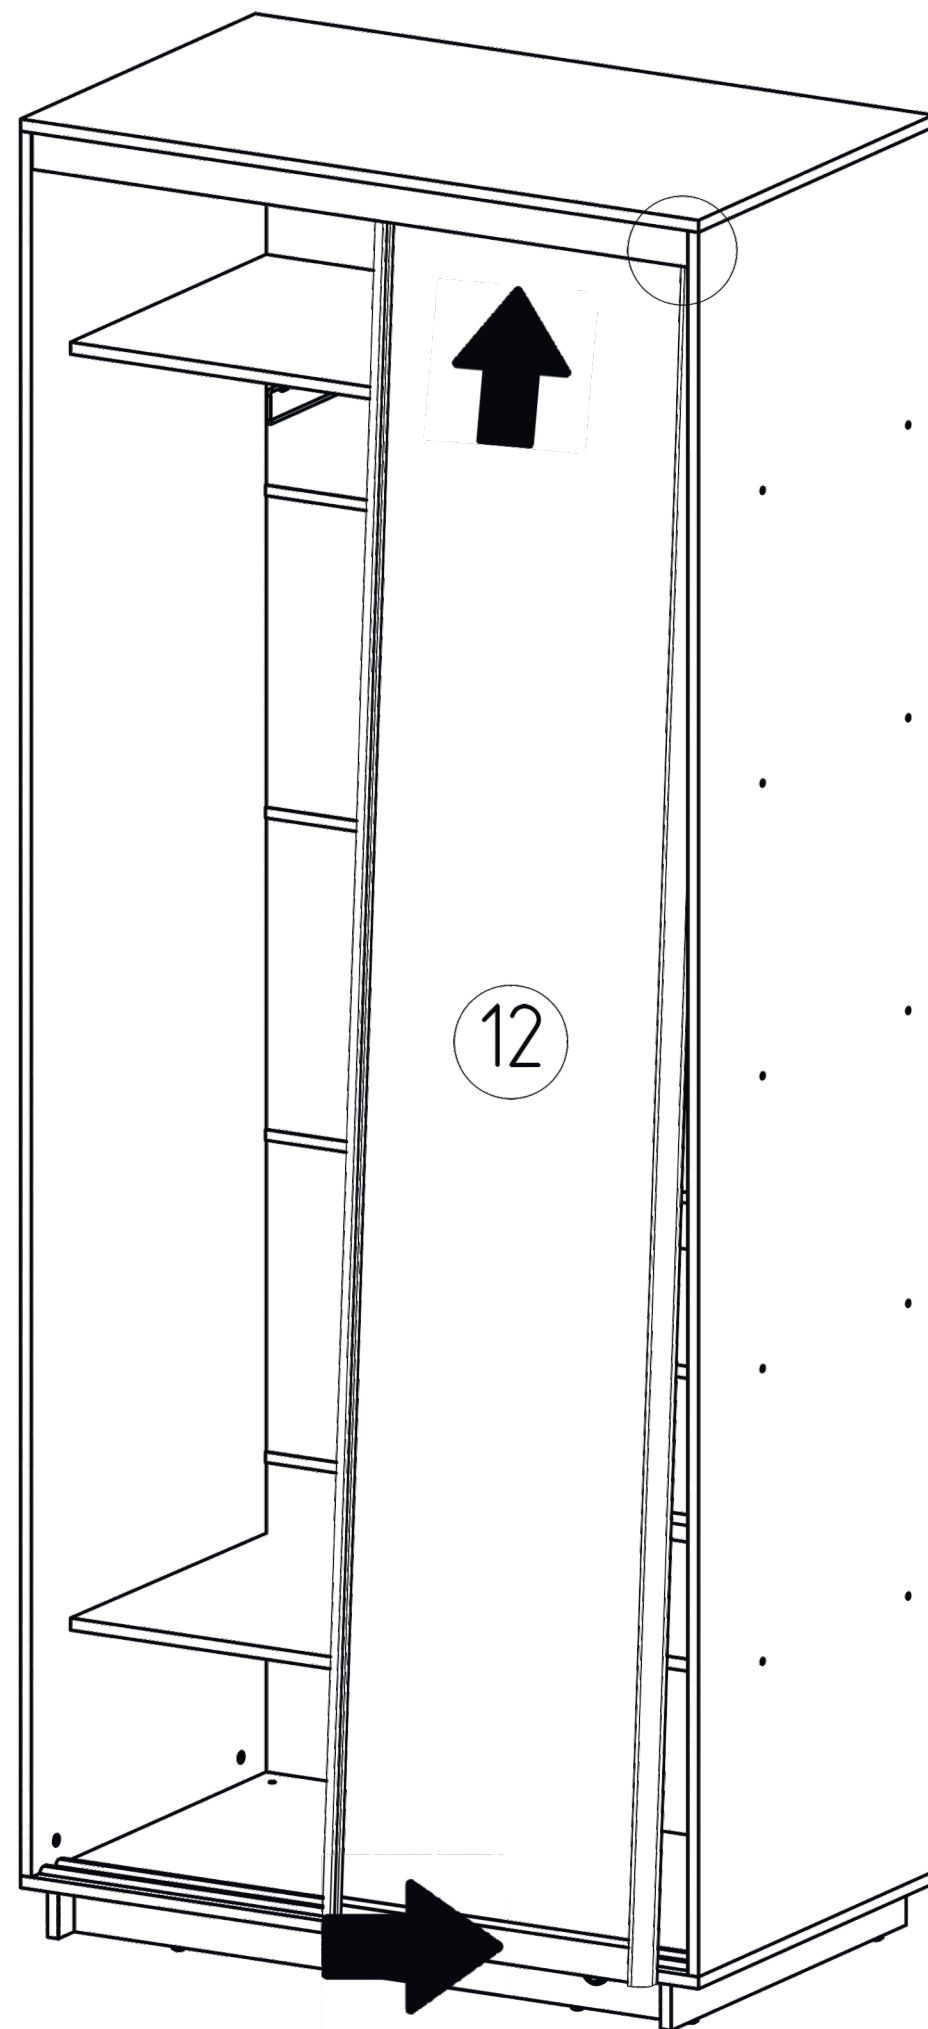

12

