
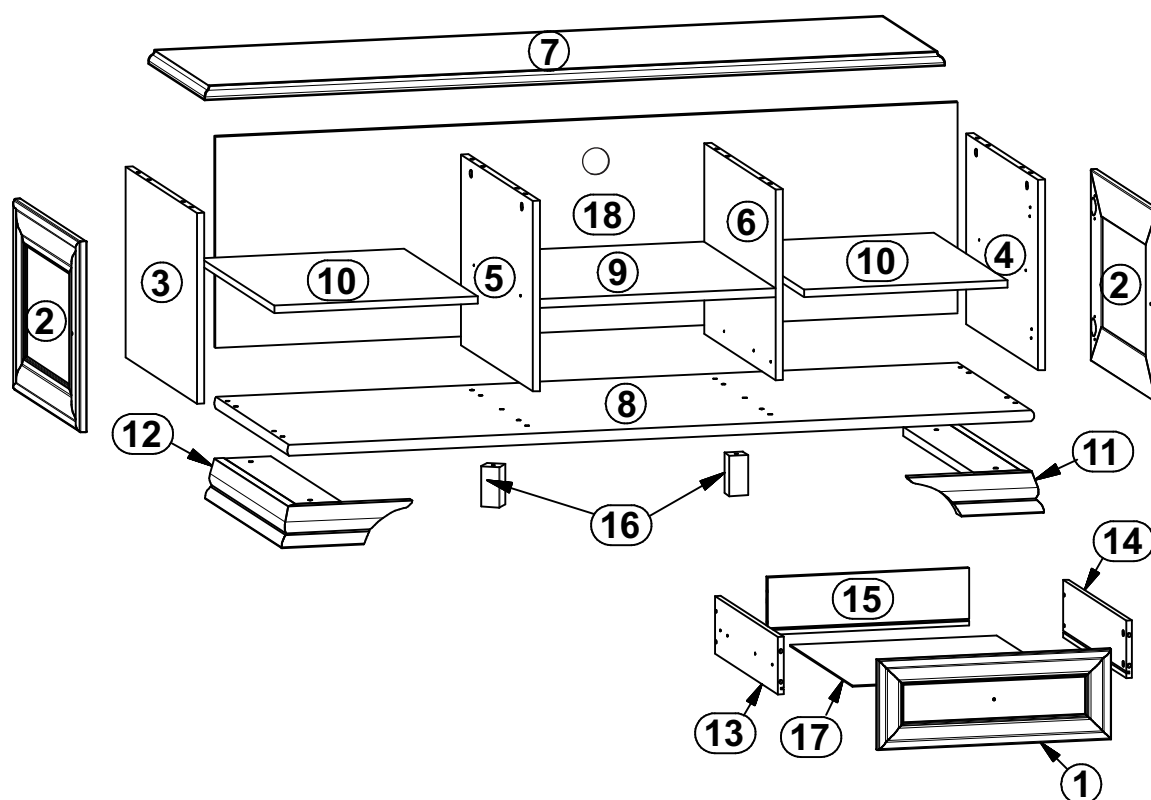



A	B	C	D	
1	S320-0004N	596	188	4/5
2	S320-0080	384	396	5/5
3	S320-195N	390	403	1/5
4	S320-192N	390	403	1/5
5	S320-193N	390	403	1/5
6	S320-194N	390	403	2/5
7	S320-2287N	1440	436	2/5
8	S320-288	1412	425	1/5
9	S320-355	580	403	1/5
10	S320-360	377	399	1/5
11	S320-506	441	270	3/5
12	S320-541	441	270	1/5
13	S320-569N	400	120	1/5
14	S320-570N	400	120	1/5
15	S320-5547N	522	120	1/5
16	S320-575	80	38	3/5
17	S320-905N	537	398	2/5
18	S320-971N	1394	434	2/5

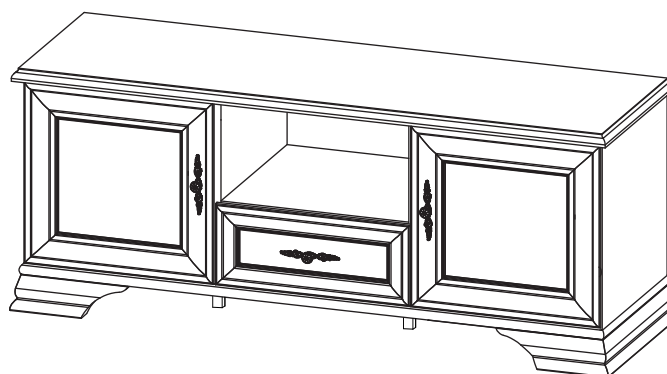

4x a44	4x b19	8x d1 φ5x17 mm	4x f25 Ø6,5x40 mm	6x p140 φ3,5x12 mm	4x e26 φ7x35 mm	6x e3 φ6x13 mm	10x e8 φ7x60 mm	22x f1 φ8x30 mm
2x j6 M4x30 mm	1x j59 M4x18 mm	40x l1	1x n26	1x p38 φ3,5x16 mm	8x p51 φ3,5x15 mm	1x p17 φ5x60 mm	1x f35 φ10x50 mm	1x z1
1x t14 383 mm	2x p25 Ø3,5x16 mm	2x w208/1 400 mm	2x w208/2 400 mm	3x c35/1	3x c35/2	16x r42	16x r1 φ1,5x12mm #16	12x s2 ø16



1

§2

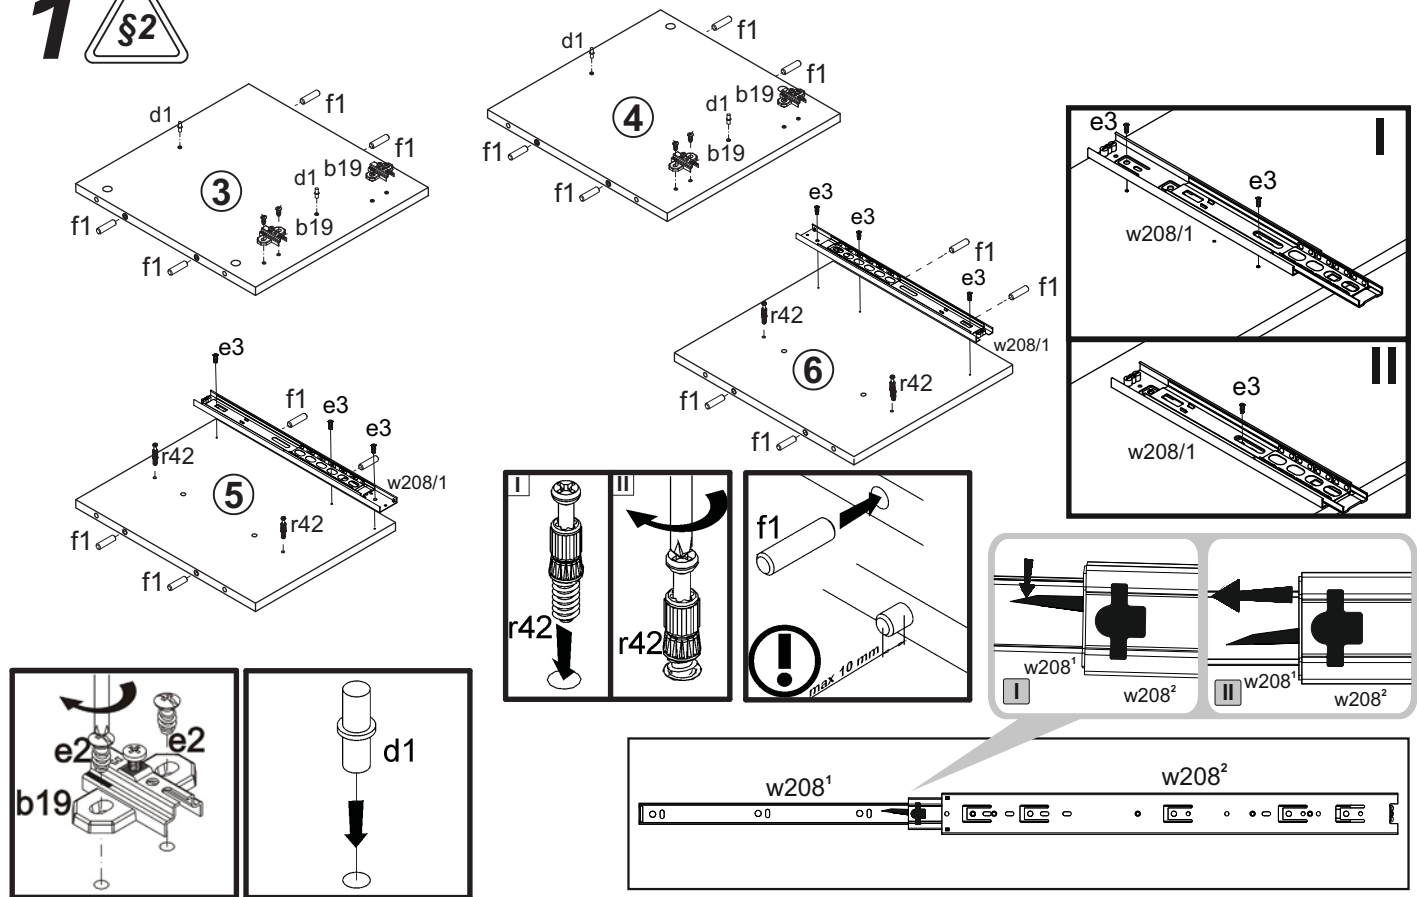

2

§6

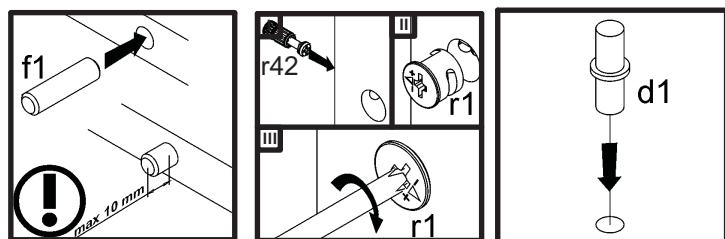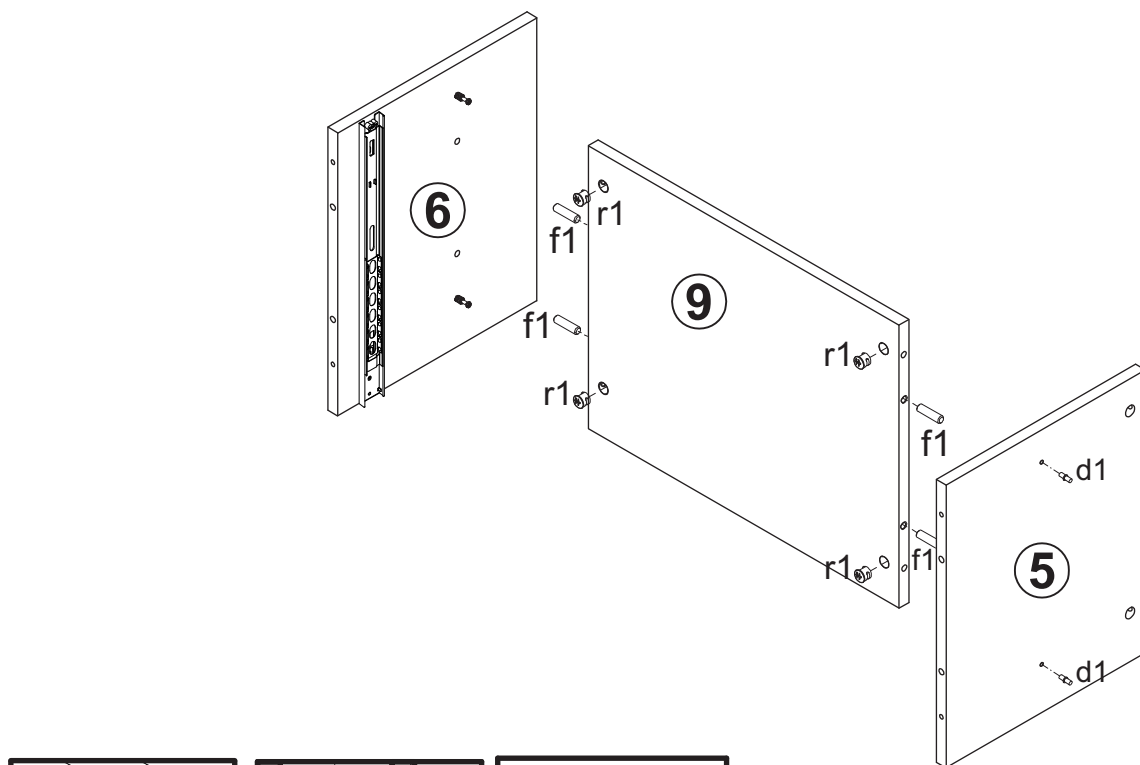

3

Diagram illustrating the assembly of a furniture unit, showing the installation of side panels (3, 4, 5, 6, 7) and the bottom panel (8) onto a frame. The diagram includes various screws and fasteners labeled e8, r1, r42, and z1. The assembly steps are numbered 3, 4, 5, 6, 7, and 8.

Key components and fasteners shown:

- Side panels: 3, 4, 5, 6, 7
- Bottom panel: 8
- Fasteners: e8, r1, r42, z1

Assembly steps:

- Install side panel 3 using screws r42.
- Install side panel 4 using screws r1 and r42.
- Install side panel 5 using screws r1 and r42.
- Install side panel 6 using screws r1 and r42.
- Install side panel 7 using screws r1 and r42.
- Install bottom panel 8 using screws e8.

Inset diagrams show detailed views of the fastener installation:

- Top rail (r42) installation.
- Side panel (r1) installation.

Small inset at the bottom left shows the installation of a screw (e8) into a hole (z1).

